

# Toyota / Version: 9.6.3

## Legend

Existing Function

Currently Under Development

Functionality doesn't apply

ABS				
Sistema	DTC	Flujo de Datos	Actuadores	Config
ABS / VSC / TRC (KWP2000)				
AIRBAG (SRS)				
Sistema	DTC	Flujo de Datos	Actuadores	Config
AIRBAG (TYPE 1)				
AIRBAG (TYPE 2)				
AUTOMATIC GEARBOX				
Sistema	DTC	Flujo de Datos	Actuadores	Config
AUTOMATIC GEARBOX (ECT) (KWP2000)				
BODY SYSTEM INTEGRATION				
Sistema	DTC	Flujo de Datos	Actuadores	Config
BODY SYSTEM (KWP2000)				
CLIMATRONIC CONTROL				
Sistema	DTC	Flujo de Datos	Actuadores	Config
AIR CONDITIONING (KWP2000)				
ENGINE ELECTRONICS (PETROL/DIESEL)				
Sistema	DTC	Flujo de Datos	Actuadores	Config
ENGINE PETROL/DIESEL (TYPE 2)				
<i>Special Functions</i>				
<i>Enter Injectors Calibration Data</i>				
<i>Reset Idle Adaptions</i>				
<i>Supply Pump Initialization</i>				
Sistema	DTC	Flujo de Datos	Actuadores	Config
ENGINE PETROL/DIESEL / AUTOMATIC GEARBOX (TYPE 1)				