

# ***OBD II CHASSIS CODES***

---

C1091	Speed Wheel Sensor All Coherency Failure
C1095	ABS Hydraulic Pump Motor Circuit Failure
C1096	ABS Hydraulic Pump Motor Circuit Open
C1097	ABS Hydraulic Pump Motor Circuit Short To Ground
C1098	ABS Hydraulic Pump Motor Circuit Short To Battery
C1100	ABS Pump Switch Circuit Failure
C1101	ABS Hydraulic Valve Circuit Failure
C1102	ABS Acceleration Switch Circuit Failure
C1103	ABS Hydraulic Brake Switch Circuit Failure
C1104	Traction Control Active Lamp - Circuit Short to Battery
C1105	Traction Control Disable Lamp - Circuit Short to Battery
C1106	Traction Control Disable Switch Circuit Short to Battery
C1107	ABS Function Enabled Input Circuit Failure
C1109	Speed Control Actuator Assembly Cable Release Failure
C1110	ABS Power Relay Coil Circuit Failure
C1111	ABS Power Relay Coil Open Circuit
C1112	ABS Power Relay Coil Short Circuit To Ground
C1113	ABS Power Relay Coil Short Circuit To Battery
C1114	ABS Power Relay Output Short Circuit To Ground
C1115	ABS Power Relay Output Short Circuit To Battery
C1116	Starter Motor Circuit Failure
C1117	RPM Input Circuit Failure
C1123	Vehicle Speed Sensor Input Short to Battery
C1124	Input shaft speed signal missing/faulted
C1125	Brake Fluid Level Sensor Input Circuit Failure
C1126	Cruise Control Command Switch Assembly Circuit Failure
C1127	Cruise Control Deactivator Brake Switch Circuit Failure
C1132	Clutch position ckt short to ground
C1133	Clutch position ckt short to battery
C1134	Gear Shift position short to ground
C1135	Gear Shift position short to battery
C1136	Gear Select position short to ground
C1137	ECU is Defective
C1138	Gear Select position short to Battery
C1139	Wheel Speed Sensor Center Tone Ring Missing Tooth Fault
C1140	Hydraulic Base Brake Failure
C1141	Wheel Speed Sensor LF Tone Ring Tooth Missing Fault
C1142	Wheel Speed Sensor RF Tone Ring Tooth Missing Fault
C1143	Wheel Speed Sensor LR Tone Ring Tooth Missing Fault
C1144	Wheel Speed Sensor RR Tone Ring Tooth Missing Fault
C1145	Speed Wheel Sensor RF Input Circuit Failure
C1146	Speed Wheel Sensor RF Circuit Open
C1148	Speed Wheel Sensor RF Coherency Fault
C1149	Hydraulic Fluid Pressure/ Flow Circuit Failure
C1150	Two Speed Rear Axle Input Switch Circuit Short to Vbatt
C1155	Speed Wheel Sensor LF Input Circuit Failure
C1156	Speed Wheel Sensor LF Circuit Open
C1157	Park Brake Actuator Assembly Switch Applied Circuit Failure
C1158	Speed Wheel Sensor LF Coherency Fault
C1159	Hydraulic Fluid Pressure/ Flow Circuit Short to Gnd
C1161	Air Pressure Low Circuit Short to Gnd
C1162	Park Brake Switch # 2 Released Circuit Failure
C1163	Park Brake Switch # 2 Applied Circuit Short to Gnd
C1164	Park Brake Actuator Assembly Switch Circuit Failure
C1165	Speed Wheel Sensor RR Input Circuit Failure
C1166	Speed Wheel Sensor RR Input Open Circuit
C1167	Park Brake Actuator Assembly Switch Released Circuit Short to Gnd

C1168 Speed Wheel Sensor RR Coherency Fault  
C1169 ABS Fluid Dumping Exceeds Maximum Timing  
C1170 PRNDL Switch Circuit Failure  
C1172 Park Brake Switch # 1 Applied Circuit Failure  
C1173 Park Brake Switch # 1 Released Circuit Short to Gnd  
C1174 Park Brake Switch # 2 Applied Circuit Failure  
C1175 Speed Wheel Sensor LR Input Circuit Failure  
C1176 Speed Wheel Sensor LR Circuit Open  
C1177 Park Brake Actuator Assembly Switch Released Circuit Failure  
C1178 Speed Wheel Sensor LR Coherency Fault  
C1179 Speed Control Actuator Assembly Cable Slack Failure  
C1180 Park Brake Valve Solenoid #1 Sense Input Circuit Failure  
C1181 Park Brake Valve Solenoid #1 Sense Input Circuit Short to Gound  
C1182 Park Lamp Flash Relay Circuit Failure  
C1183 Park Lamp Flash Relay Circuit Short to Battery  
C1184 ABS System Is Not Operational  
C1185 ABS Power Relay Output Circuit Failure  
C1186 ABS Power Relay Output Open Circuit  
C1187 Brake Fluid Level Sensor Input Open Circuit  
C1188 Brake Fluid Level Sensor Input Short Circuit To Battery  
C1189 Brake Fluid Level Sensor Input Short Circuit To Ground  
C1190 Speed Wheel Sensor LF Input Short Circuit To Battery  
C1191 Speed Wheel Sensor LF Input Short Circuit To Ground  
C1192 Speed Wheel Sensor RF Input Short Circuit To Battery  
C1193 Speed Wheel Sensor RF Input Short Circuit To Ground  
C1194 ABS Outlet Valve Coil LF Circuit Failure  
C1195 ABS Outlet Valve Coil LF Circuit Open  
C1196 ABS Outlet Valve Coil LF Circuit Short To Battery  
C1197 ABS Outlet Valve Coil LF Circuit Short To Ground  
C1198 ABS Inlet Valve Coil LF Circuit Failure  
C1199 ABS Inlet Valve Coil LF Circuit Open  
C1200 ABS Inlet Valve Coil LF Circuit Short To Battery  
C1201 ABS Inlet Valve Coil LF Circuit Short To Ground  
C1202 ABS Outlet Valve Coil Rear Circuit Failure  
C1203 ABS Outlet Valve Coil Rear Circuit Open  
C1204 ABS Outlet Valve Coil Rear Circuit Short To Battery  
C1205 ABS Outlet Valve Coil Rear Circuit Short To Ground  
C1206 ABS Inlet Valve Coil Rear Circuit Failure  
C1207 ABS Inlet Valve Coil Rear Circuit Open  
C1208 ABS Inlet Valve Coil Rear Circuit Short To Battery  
C1209 ABS Inlet Valve Coil Rear Circuit Short To Ground  
C1210 ABS Outlet Valve Coil RF Circuit Failure  
C1211 ABS Outlet Valve Coil RF Circuit Open  
C1212 ABS Outlet Valve Coil RF Circuit Short To Battery  
C1213 ABS Outlet Valve Coil RF Circuit Short To Ground  
C1214 ABS Inlet Valve Coil RF Circuit Failure  
C1215 ABS Inlet Valve Coil RF Circuit Open  
C1216 ABS Inlet Valve Coil RF Circuit Short To Battery  
C1217 ABS Inlet Valve Coil RF Circuit Short To Ground  
C1218 Lamp ABS Warning Output Circuit Failure  
C1219 Lamp ABS Warning Output Circuit Open  
C1220 Lamp ABS Warning Output Circuit Short To Battery  
C1221 Lamp ABS Warning Output Circuit Short To Ground  
C1222 Speed Wheel Mismatch  
C1223 Lamp Brake Warning Output Circuit Failure  
C1224 Lamp Brake Warning Output Circuit Open  
C1225 Lamp Brake Warning Output Circuit Short To Battery  
C1226 Lamp Brake Warning Output Circuit Short To Ground  
C1227 Speed Wheel Sensor LR Input Short Circuit To Battery  
C1228 Speed Wheel Sensor LR Input Short Circuit To Ground  
C1229 Speed Wheel Sensor Rear Center Coherency Fault  
C1230 Speed Wheel Sensor Rear Center Input Circuit Failure  
C1231 Speed Wheel Sensor Rear Center Circuit Open

C1232 Speed Wheel Sensor Rear Center Input Short Circuit To Battery  
C1233 Speed Wheel LF Input Signal Missing  
C1234 Speed Wheel RF Input Signal Missing  
C1235 Speed Wheel RR Input Signal Missing  
C1236 Speed Wheel LR Input Signal Missing  
C1237 Speed Wheel Rear Input Signal Missing  
C1238 ABS Hydraulic Pressure Differential Switch Input Circuit Failure  
C1239 ABS Hydraulic Pressure Differential Switch Input Open Circuit  
C1240 ABS Hydraulic Pressure Differential Switch Input Short Circuit To  
Battery  
C1241 ABS Hydraulic Pressure Differential Switch Input Short Circuit To  
Ground  
C1242 ABS Outlet Valve Coil LR Circuit Failure  
C1243 ABS Outlet Valve Coil LR Circuit Open  
C1244 ABS Outlet Valve Coil LR Circuit Short To Battery  
C1245 ABS Outlet Valve Coil LR Circuit Short To Ground  
C1246 ABS Outlet Valve Coil RR Circuit Failure  
C1247 ABS Outlet Valve Coil RR Circuit Open  
C1248 ABS Outlet Valve Coil RR Circuit Short To Battery  
C1249 ABS Outlet Valve Coil RR Circuit Short To Ground  
C1250 ABS Inlet Valve Coil LR Circuit Failure  
C1251 ABS Inlet Valve Coil LR Circuit Open  
C1252 ABS Inlet Valve Coil LR Circuit Short To Battery  
C1253 ABS Inlet Valve Coil LR Circuit Short To Ground  
C1254 ABS Inlet Valve Coil RR Circuit Failure  
C1255 ABS Inlet Valve Coil RR Circuit Open  
C1256 ABS Inlet Valve Coil RR Circuit Short To Battery  
C1257 ABS Inlet Valve Coil RR Circuit Short To Ground  
C1258 Speed Wheel LF Comparison Failure  
C1259 Speed Wheel RF Comparison Failure  
C1260 Speed Wheel RR Comparison Failure  
C1261 Speed Wheel LR Comparison Failure  
C1262 Lamp Warning Relay Circuit Failure  
C1263 Lamp Warning Relay Circuit Open  
C1264 Lamp Warning Relay Circuit Short To Battery  
C1265 Lamp Warning Relay Circuit Short To Ground  
C1266 ABS Valve Power Relay Circuit Failure  
C1267 ABS Functions Temporarily Disabled  
C1268 Motor Relay # 1 Circuit Failure  
C1269 Motor Relay # 1 Circuit Short to Battery  
C1270 Motor # 1 Input Circuit Failure  
C1271 Motor # 1 Input Circuit Short to Gnd  
C1272 Motor # 2 Input Circuit Failure  
C1273 Motor # 2 Input Circuit Short to Vbat  
C1274 Solenoid Relay # 1 Circuit Failure  
C1275 Solenoid Relay # 1 Circuit Short to Vbatt  
C1276 Park Brake Actuator Assembly Switch Applied Circuit Short to Gnd  
C1277 STEERING Wheel Angle land 2 Circuit Failure  
C1278 STEERING Wheel Angle land 2 Signal Faulted  
C1279 Yaw Rate Sensor circuit Failure  
C1280 Yaw Rate Sensor Signal Fault  
C1281 Lateral Accelerometer circuit Failure  
C1282 Lateral Accelerometer Signal Fault  
C1283 Switch Test Signal Failure  
C1284 Oil Pressure Switch Failure  
C1285 Booster Solenoid circuit Failure  
C1286 Booster Mechanical Failure  
C1287 Booster Pedal Force switch circuit Failure  
C1288 Pressure Transducer Main / Primary Input Circuit Failure  
C1289 Pressure Transducer Redundant / Secondary Input Circuit Failure  
C1400 Traction Control Valve RF Circuit Failure  
C1401 Traction Control Valve RF Circuit Open  
C1402 Traction Control Valve RF Circuit Short To Ground

C1403 Traction Control Valve RF Circuit Short To Battery  
C1404 Traction Control Valve Rear Circuit Failure  
C1405 Traction Control Valve Rear Circuit Open  
C1406 Traction Control Valve Rear Circuit Short To Ground  
C1407 Traction Control Valve Rear Circuit Short To Battery  
C1410 Traction Control Valve LF Circuit Failure  
C1411 Traction Control Valve LF Circuit Open  
C1412 Traction Control Valve LF Circuit Short To Ground  
C1413 Traction Control Valve LF Circuit Short To Battery  
C1414 Incorrect Module Design Level  
C1415 Incorrect Module Configuration  
C1416 Damper RF Circuit Short To Battery  
C1417 Damper RF Circuit Short to Ground  
C1418 Damper RF Circuit Failure  
C1419 Damper RF Circuit Open  
C1420 Hydraulic Fluid Pressure/ Flow Circuit Short to Vbatt  
C1421 Damper LF Circuit Short To Battery  
C1422 Damper LF Circuit Short to Ground  
C1423 Damper LF Circuit Failure  
C1424 Damper LF Circuit Open  
C1425 Damper RR Circuit Short to Ground  
C1426 Damper RR Circuit Short To Battery  
C1427 Damper RR Circuit Open  
C1428 Damper RR Circuit Failure  
C1429 Input-shaft-speed input circuit failure  
C1430 Damper LR Circuit Open  
C1431 Damper LR Circuit Short To Battery  
C1432 Damper LR Circuit Short to Ground  
C1433 Damper LR Circuit Failure  
C1435 Accelerometer Rear Circuit Failure  
C1436 Accelerometer Rear Circuit Signal Is Not Sensed  
C1437 Accelerometer Rear Circuit Short To Ground  
C1438 Accelerometer Rear Circuit Short To Battery  
C1439 Vehicle Acceleration EEC-IV Circuit Failure  
C1440 Pressure Transducer Main / Primary signal Faulted  
C1441 Steering Phase A Circuit Signal Is Not Sensed  
C1442 Steering Phase B Circuit Signal Is Not Sensed  
C1443 Steering Phase A Circuit Short To Ground  
C1444 Steering Phase B Circuit Short To Ground  
C1445 Speed Vehicle Signal Circuit Failure  
C1446 Brake Switch Circuit Failure  
C1447 Traction Control Module Request Circuit Failure  
C1448 Lamp Adaptive Damping Warning Circuit Failure  
C1449 Traction Control Motor Coherency Fault  
C1450 Traction Control Motor Circuit Failure  
C1451 Traction Control Motor Circuit Open  
C1452 Traction Control Motor Circuit Short to Battery  
C1453 Traction Control Motor Circuit Short to Ground  
C1454 Front Lateral Accelerometer Circuit Failure  
C1455 Accelerometer Front Circuit Failure  
C1456 Accelerometer Front Circuit Is Not Sensed  
C1457 Accelerometer Front Circuit Short To Ground  
C1458 Accelerometer Front Circuit Short To Battery  
C1459 Adaptive Mode Switch Circuit Failure  
C1460 Vehicle Accelerometer Power Circuit Failure  
C1461 Vehicle Accelerometer Power Circuit Short to Battery  
C1462 Left Front Vertical Accelerometer Circuit Failure  
C1463 Right Front Vertical Accelerometer Circuit Failure  
C1464 Pressure Transducer Redundant / Secondary Signal Faulted  
C1465 Damper High Side Front Circuit Short To Battery  
C1466 Damper Circuit Failure  
C1467 Damper High Side Rear Circuit Short To Battery  
C1468 Damper Low Side Front Circuit Failure

C1469 Damper Low Side Rear Circuit Failure  
C1495 Traction Control Motor Potentiometer Circuit Failure  
C1496 Traction Control Motor Potentiometer Circuit Open  
C1497 Traction Control Motor Potentiometer Circuit Short to Battery  
C1498 Traction Control Motor Potentiometer Circuit Short to Ground  
C1499 Transfer Case Contact Plate "A" Encoder Circuit Failure  
C1500 Transfer Case Contact Plate "B" Encoder Circuit Failure  
C1501 Transfer Case Contact Plate "C" Encoder Circuit Failure  
C1502 Transfer Case Contact Plate "D" Encoder Circuit Failure  
C1503 Dynamic Stability Control Left Front Valve Malfunction  
C1504 Dynamic Stability Control Right Front Valve Malfunction  
C1505 Dynamic Stability Control Left Rear Valve Malfunction  
C1506 Dynamic Stability Control Right Rear Valve Malfunction  
C1507 Traction Control of Brake Exceeds Time-Out  
C1508 Traction Control of Engine Exceeds Time-Out  
C1510 Right Front Wheel Pressure Reduction Performance Problem  
C1511 Left Front Wheel Pressure Reduction Performance Problem  
C1512 Right Rear Wheel Pressure Reduction Performance Problem  
C1513 Left rear Wheel Pressure Reduction Performance Problem  
C1699 Left Rear Sensor Circuit Short to Vbat  
C1700 Left Rear Sensor Circuit Failure  
C1701 Left Rear Sensor Circuit Fault  
C1702 RightRear Sensor Circuit Short to Vbat  
C1703 Right Rear Sensor Circuit Failure  
C1704 Right Rear Sensor Circuit Fault  
C1705 Left Rear Center Sensor Circuit Short to Vbat  
C1706 Left Rear Center Sensor Circuit Failure  
C1707 Left Rear Center Sensor Circuit Fault  
C1708 Right Rear Center Sensor Circuit Short to Vbat  
C1709 Right Rear Center Sensor Circuit Failure  
C1710 Right Rear Center Sensor Circuit Fault  
C1711 Left Front Sensor Circuit Short to Vbat  
C1712 Left Front Sensor Circuit Failure  
C1713 Left Front Sensor Circuit Fault  
C1714 Right Front Sensor Circuit Short to Vbat  
C1715 Right Front Sensor Circuit Failure  
C1716 Right Front Sensor Circuit Fault  
C1717 Left Front Center Sensor Circuit Short to Vbat  
C1718 Left Front Center Sensor Circuit Failure  
C1719 Left Front Center Sensor Circuit Fault  
C1721 Air Suspension Height Sensor Power Circuit Open  
C1722 Air Suspension Height Sensor Power Circuit Short To Battery  
C1723 Air Suspension Height Sensor Power Circuit Short To Ground  
C1724 Air Suspension Height Sensor Power Circuit Failure  
C1725 Air Suspension Front Pneumatic Failure  
C1726 Air Suspension Rear Pneumatic Failure  
C1727 Air Suspension Reservoir Pneumatic Failure  
C1728 Transfer Case unable to transition between 2H and 4H  
C1729 Transfer Case unable to transition between 4H and 4L  
C1730 Reference Voltage Out of Range (+5 v)  
C1731 Air Suspension LF Corner Up Timeout  
C1732 Air Suspension LF Corner Down Timeout  
C1733 Air Suspension RF Corner Up Timeout  
C1734 Air Suspension RF Corner Down Timeout  
C1735 Air Suspension LR Corner Up Timeout  
C1736 Air Suspension LR Corner Down Timeout  
C1737 Air Suspension RR Corner Up Timeout  
C1738 Air Suspension RR Corner Down Timeout  
C1739 Right Front Center Sensor Circuit Short to Vbat  
C1740 Right Front Center Sensor Circuit Failure  
C1741 Right Front Center Sensor Circuit Fault  
C1742 Rear Sounder Circuit Failure  
C1743 Rear Sounder Circuit Short to Vbatt

C1744 Front Sounder Circuit Failure  
 C1745 Front Sounder Circuit Short to Vbatt  
 C1748 Switch input Circuit Short to Gnd  
 C1749 Trailer Input Circuit Failure  
 C1750 Accelerator Position Sensor Out of Range  
 C1751 Vehicle Speed Sensor # 1 Output Circuit Short to Vbatt  
 C1752 Vehicle Speed Sensor # 1 Output Circuit Short to Gnd  
 C1753 Hydraulic Clutch Actuator Valve Signal Fault  
 C1754 Hydraulic Clutch Actuator Valve Circuit Failure  
 C1755 Power Limit Shutdown Fault  
 C1756 Air Suspension Front Height Sensor High (SE) Signal Circuit Failure  
 C1757 Air Suspension Front Height Sensor High (SE) Signal Circuit Open  
 C1758 Air Suspension Front Height Sensor High (SE) Signal Circuit Short To Battery  
 C1759 Air Suspension Front Height Sensor High (SE) Signal Circuit Short To Ground  
 C1760 Air Suspension Rear Height Sensor High (SE) Signal Circuit Failure  
 C1761 Air Suspension Rear Height Sensor High (SE) Signal Circuit Open  
 C1762 Air Suspension Rear Height Sensor High (SE) Signal Circuit Short To Battery  
 C1763 Air Suspension Rear Height Sensor High (SE) Signal Circuit Short To Ground  
 C1765 Air Suspension Rear Height Sensor Low Signal Circuit Failure  
 C1766 Air Suspension Rear Height Sensor Low Signal Circuit Open  
 C1767 Air Suspension Rear Height Sensor Low Signal Circuit Short To Battery  
 C1768 Air Suspension Rear Height Sensor Low Signal Circuit Short To Ground  
 C1770 Air Suspension Vent Solenoid Output Circuit Failure  
 C1771 Air Suspension Vent Solenoid Output Circuit Open  
 C1772 Air Suspension Vent Solenoid Output Circuit Short To Battery  
 C1773 Air Suspension Vent Solenoid Output Circuit Short To Ground  
 C1774 Coolant Temp Out of Range  
 C1775 DC-DC Converter Failure  
 C1776 Heater System Failure  
 C1777 Vacuum Pressure Circuit Failure  
 C1778 Power Steering Failure  
 C1779 Blower Switch Failure  
 C1780 Temperature Select Failure  
 C1781 Engine Coolant Temperature Signal Missing/Fault  
 C1790 Air Suspension LR Air Spring/Shock Solenoid Output Circuit Failure  
 C1791 Air Suspension LR Air Spring/Shock Solenoid Output Circuit Open  
 C1792 Air Suspension LR Air Spring/Shock Solenoid Output Circuit Short To Battery  
 C1793 Air Suspension LR Air Spring/Shock Solenoid Output Circuit Short To Ground  
 C1795 Air Suspension RR Air Spring/Shock Solenoid Output Circuit Failure  
 C1796 Air Suspension RR Air Spring/Shock Solenoid Output Circuit Open  
 C1797 Air Suspension RR Air Spring/Shock Solenoid Output Circuit Short To Battery  
 C1798 Air Suspension RR Air Spring/Shock Solenoid Output Circuit Short To Ground  
 C1800 Air Suspension Reservoir Solenoid Circuit Failure  
 C1805 Mismatched PCM and/or ABS-TC Module  
 C1813 Air Suspension LR Vent Request Exceeded Max Timing  
 C1814 Air Suspension RR Vent Request Exceeded Max Timing  
 C1818 Air Suspension LR Air Compress Request Exceeded Max Timing  
 C1819 Air Suspension RR Air Compress Request Exceeded Max Timing  
 C1820 Air Suspension RF Air Compress Request Exceeded Max Timing  
 C1830 Air Suspension Compressor Relay Circuit Failure  
 C1831 Air Suspension Compressor Relay Circuit Open  
 C1832 Air Suspension Compressor Relay Circuit Short To Battery  
 C1833 Air Suspension Compressor Relay Circuit Short To Ground  
 C1834 Gauge Drive Current Fault  
 C1835 Current Sense Circuit Failure

C1836 Battery Temp out of Range  
 C1837 Battery Heater Circuit Failure  
 C1838 Charging System Fault  
 C1839 Leakage Fault  
 C1840 Air Suspension Disable Switch Circuit Failure  
 C1841 Air Suspension Disable Switch Circuit Open  
 C1842 Air Suspension Disable Switch Circuit Short To Battery  
 C1843 Air Suspension Disable Switch Circuit Short To Ground  
 C1844 Air Suspension Secondary Front Inflator Solenoid Output Circuit Failure  
 C1845 Air Suspension Front Inflator Solenoid Output Circuit Failure  
 C1846 Air Suspension Front Inflator Solenoid Output Circuit Open  
 C1847 Air Suspension Front Inflator Solenoid Output Circuit Short To Battery  
 C1848 Air Suspension Front Inflator Solenoid Output Circuit Short To Ground  
 C1849 Master Cylinder Pressure Out of Range  
 C1850 Air Suspension Warning Lamp Circuit Failure  
 C1851 Air Suspension Warning Lamp Circuit Open  
 C1852 Air Suspension Warning Lamp Circuit Short To Battery  
 C1853 Air Suspension Warning Lamp Circuit Short To Ground  
 C1854 Motor Temperature Out of Range  
 C1855 Acceleration Position Sensor Conflict  
 C1856 Traction Motor Encoder circuit Failure  
 C1859 PRNDL Input #2 Circuit Failure  
 C1860 PRNDL Input #3 Circuit Failure  
 C1861 PRNDL Input #4 Circuit Failure  
 C1862 Contactor Circuit Failure  
 C1863 External Charging Fault  
 C1864 Battery Module Fault  
 C1865 Air Suspension Rear Inflator Solenoid Output Circuit Failure  
 C1866 Air Suspension Rear Inflator Solenoid Output Circuit Open  
 C1867 Air Suspension Rear Inflator Solenoid Output Circuit Short To Battery  
 C1868 Air Suspension Rear Inflator Solenoid Output Circuit Short To Ground  
 C1869 Air Suspension Gate Solenoid Output Circuit Failure  
 C1870 Air Suspension Gate Solenoid Output Circuit Open  
 C1871 Air Suspension Gate Solenoid Output Circuit Short To Battery  
 C1872 Air Suspension Gate Solenoid Output Circuit Short To Ground  
 C1873 Air Suspension RF Air Spring Solenoid Output Circuit Failure  
 C1874 Air Suspension RF Air Spring Solenoid Output Circuit Open  
 C1875 Air Suspension RF Air Spring Solenoid Output Circuit Short To Battery  
 C1876 Air Suspension RF Air Spring Solenoid Output Circuit Short To Ground  
 C1877 Air Suspension LF Air Spring Solenoid Output Circuit Failure  
 C1878 Air Suspension LF Air Spring Solenoid Output Circuit Open  
 C1879 Air Suspension LF Air Spring Solenoid Output Circuit Short To Battery  
 C1880 Air Suspension LF Air Spring Solenoid Output Circuit Short To Ground  
 C1881 Air Suspension RF Height Sensor Circuit Failure  
 C1882 Air Suspension RF Height Sensor Circuit Open  
 C1883 Air Suspension RF Height Sensor Circuit Short To Battery  
 C1884 Air Suspension RF Height Sensor Circuit Short To Ground  
 C1885 Air Suspension RR Height Sensor Circuit Failure  
 C1886 Air Suspension RR Height Sensor Circuit Open  
 C1887 Air Suspension RR Height Sensor Circuit Short To Battery  
 C1888 Air Suspension RR Height Sensor Circuit Short To Ground  
 C1889 Air Suspension LF Height Sensor Circuit Failure  
 C1890 Air Suspension LF Height Sensor Circuit Open  
 C1891 Air Suspension LF Height Sensor Circuit Short To Battery  
 C1892 Air Suspension LF Height Sensor Circuit Short To Ground  
 C1893 Air Suspension LR Height Sensor Circuit Failure  
 C1894 Air Suspension LR Height Sensor Circuit Open  
 C1895 Air Suspension LR Height Sensor Circuit Short To Battery  
 C1896 Air Suspension LR Height Sensor Circuit Short To Ground  
 C1897 Steering VAPS II Circuit Loop Failure

C1898 Steering VAPS II Circuit Loop Open  
C1899 Steering VAPS II Circuit Loop Short To Battery  
C1900 Steering VAPS II Circuit Loop Short To Ground  
C1901 Ride Control RR Shock Actuator Circuit Failure  
C1902 Ride Control RR Shock Actuator Circuit Open  
C1903 Ride Control RR Shock Actuator Circuit Short To Battery  
C1904 Ride Control RR Shock Actuator Circuit Short To Ground  
C1905 Ride Control LR Shock Actuator Circuit Failure  
C1906 Ride Control LR Shock Actuator Circuit Open  
C1907 Ride Control LR Shock Actuator Circuit Short To Battery  
C1908 Ride Control LR Shock Actuator Circuit Short To Ground  
C1909 Ride Control RF Shock Actuator Circuit Failure  
C1910 Ride Control RF Shock Actuator Circuit Open  
C1911 Ride Control RF Shock Actuator Circuit Short To Battery  
C1912 Ride Control RF Shock Actuator Circuit Short To Ground  
C1913 Ride Control LF Shock Actuator Circuit Failure  
C1914 Ride Control LF Shock Actuator Circuit Open  
C1915 Ride Control LF Shock Actuator Circuit Short To Battery  
C1916 Ride Control LF Shock Actuator Circuit Short To Ground  
C1917 Steering EVO Out-of-Range Fault  
C1918 Air Suspension Ride Height Select Switch Circuit Failure  
C1920 Led #1 Circuit Failure  
C1921 VAPS Solenoid Actuator Output Circuit Failure  
C1922 VAPS Solenoid Actuator Output Circuit Open  
C1923 VAPS Solenoid Actuator Output Circuit Short To Battery  
C1924 VAPS Solenoid Actuator Output Circuit Short To Ground  
C1925 VAPS Solenoid Actuator Return Circuit Failure  
C1926 VAPS Solenoid Actuator Return Circuit Open  
C1927 VAPS Solenoid Actuator Return Circuit Short To Battery  
C1928 VAPS Solenoid Actuator Return Circuit Short To Ground  
C1929 Air Suspension Front Compressor Relay Circuit Failure  
C1930 Air Suspension Front Compressor Relay Circuit Open  
C1931 Air Suspension Front Compressor Relay Circuit Short To Battery  
C1932 Air Suspension Front Compressor Relay Circuit Short To Ground  
C1933 Solenoid Current Out Of Range  
C1934 HPU (Hydraulic Pump Unit) Pressurisation Failure  
C1935 Chime Circuit Failure  
C1936 Hydraulic Pump Relay Circuit Failure  
C1937 Steering Wheel Angle Sensor Offset Failure  
C1938 Invalid Steering Wheel Angle Sensor ID  
C1939 Brake Pressure Switch Input Circuit Failure  
C1940 Brake Pressure Switch Mechanical Failure  
C1942 Unrecognized Powertrain Configuration  
C1943 Airbag Deployment Indication Input Fault  
C1944 Gauge Driver Circuit Fault  
C1945 Park Switch Indicates Park with Vehicle Moving  
C1946 Seat Track Position Switch Circuit Open  
C1947 Seat Track Position Switch Circuit Short to Ground  
C1948 Seat Track Position Switch Circuit Resistance Out of Range  
C1949 Accelerometer Sensor Circuit Open  
C1950 Accelerometer Sensor Circuit Failure  
C1951 Lateral Accelerometer Sensor Circuit Open  
C1952 Yaw Rate Sensor Circuit Open  
C1953 Master Cylinder Pressure Sensor Circuit Open  
C1954 Master Cylinder Pressure Sensor Circuit Failure  
C1955 Steering Angle Sensor Circuit Open  
C1956 Steering Angle Sensor Circuit Failure  
C1957 Dynamic Stability Control Valve RF Circuit Failure  
C1958 Dynamic Stability Control Valve LF Circuit Failure  
C1959 Lateral Accelerometer Sensor Circuit Failure  
C1960 Driver Brake Apply Circuit Fault  
C1961 Park Lamp Relay Coil Circuit Failure  
C1962 Park Lamp Relay Coil Short to Battery



C1963	Stability Control Inhibit Warning
C2767	Reserved - TBD