

**Holden Isuzu RODEO 4WD RESET procedure if the 4WD light is on.**

RA Rodeo 2003 > 4WD reset procedure

Here's how to reset it:

1. Ignition off, hold all 3 buttons (2H, 4H & 4L) in simultaneously
2. Switch ignition "ON" position (last position before starting)
3. Hold in this state for 30 seconds. Light will go off

