

## **Programming Central Door Locking Remotes to Nissan Models**

### **e.g 2001 Maxima, N16 Pulsar**

**IMPORTANT:** Before entering programming mode, make sure you have all of the remote controls you will be programming to the vehicle.

Once you program the remote, all previously programmed remotes will be erased from the memory.

The other remotes will not work again until you program the remotes in again.

1. Close and lock all the doors with the driver's side power lock/unlock switch.

2. Insert key into ignition and remove it from the ignition key barrel at least six times within 10 seconds. Your Hazard Lamps will flash if you have performed this step successfully.

NOTE: Withdraw the key completely from the ignition barrel each time. (If this procedure is performed too fast, the system will not enter programming mode.)

3. Insert the key into the ignition barrel and turn to the Accessories position.

4. Within 5 seconds, push any button on the remote control. Your Hazard Lamps should flash.

NOTE: Do not press the button more than one time in the above step. If the button is pressed more than one time, the programming procedure will not be successful.

5. If there are any remaining remotes (including the old ones), unlock then lock all the doors using the driver's side power lock/unlock switch and within 5 seconds, push any button on the next remote. Your Hazard Lamps should flash. Repeat this step for each remote (including any existing remotes).

6. Turn the key to the OFF position, remove the key from the ignition, unlock doors using the driver's side power lock/unlock switch and open the driver side door.