

Programming Central Locking Remotes

2004 RA Rodeo

1. **Open the driver's door.**
2. **Insert key into ignition.**
3. **Turn the ignition switch from the Accessories position to the LOCK position three times within 3 seconds.**
4. **Within 10 seconds, close and open the door two times.**
5. **Turn the ignition switch to the Accessories position and then to the LOCK position three times again within 3 seconds.**
6. **Within 10 seconds, close and open the door. Verify that the power door locks cycle once to confirm that the system is in programming mode.**
7. **Within 20 seconds, press the LOCK button on the transmitter you are programming. Verify that the door locks cycle once.**
8. **Within 20 seconds, press the UNLOCK button on the remote. Verify that the door locks cycle once to confirm that the system has accepted the remote's code.**
9. **Repeat steps 7 and 8 for each remote to be added.**
10. **Remove key from ignition.**