VE COMMODORE Remote Control Programming

SELECT

- 1. Remote Function Actuation (RFA)
- 2. Special Function

Before continuing, ensure there are no DTC's present and battery is fully charged.

ADD ADDITIONAL REMOTE

This procedure will not erase a remote not present. It will add a remote without affecting others.

Turn ignition On and press Enter

Dash will beep and the scan tool displays remote key No. 1,2,3,4

Each remote will display Programmed or Not Programmed

Whilst on this screen hold down the lock and unlock buttons on the remote you wish to program for approximately 10 seconds until you hear 2 beeps and the scan tool screen displays programmed.

ERASE AND REPROGRAM REMOTE

This procedure will erase all remotes other than the one that is used.

Turn ignition on and press Enter

Dash will beep and the scan tool displays remote key No. 1,2,3,4

Each remote will display Programmed or Not Programmed

Whilst on this screen hold down the lock and unlock buttons on the remote you wish to program for approximately 10 seconds until you hear 2 beeps and the scan tool screen displays programmed.

To program any additional remotes you must now return to the previous menu and Add an additional remote.

