




1. Select [ISUZU] > [INTERNATIONAL] > [ISUZU UTE] > [4J11-TC]

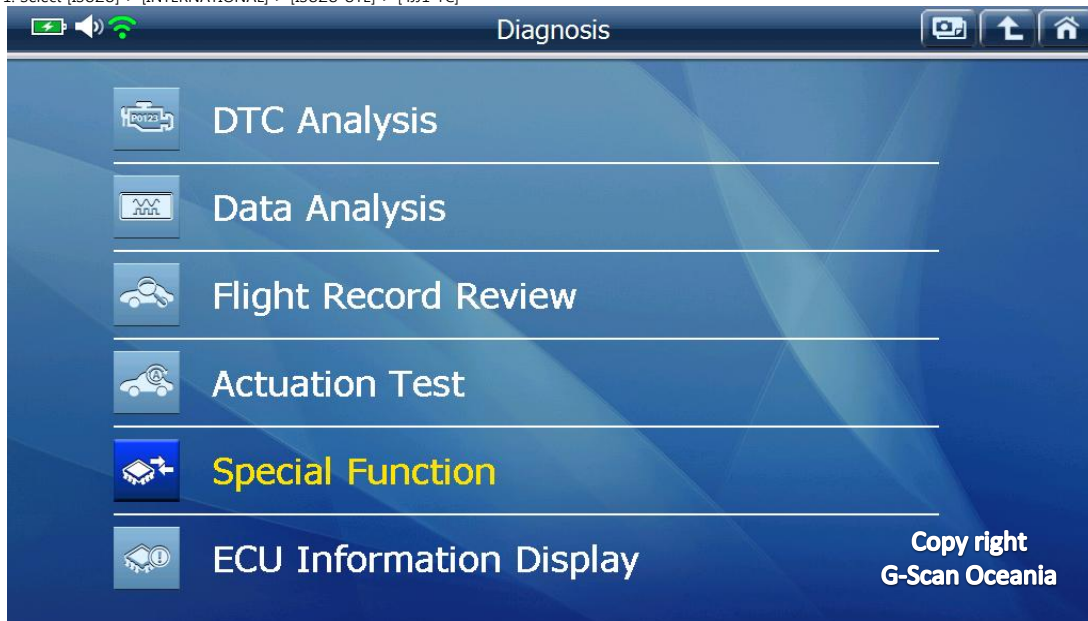

2. Select [Injector programming]

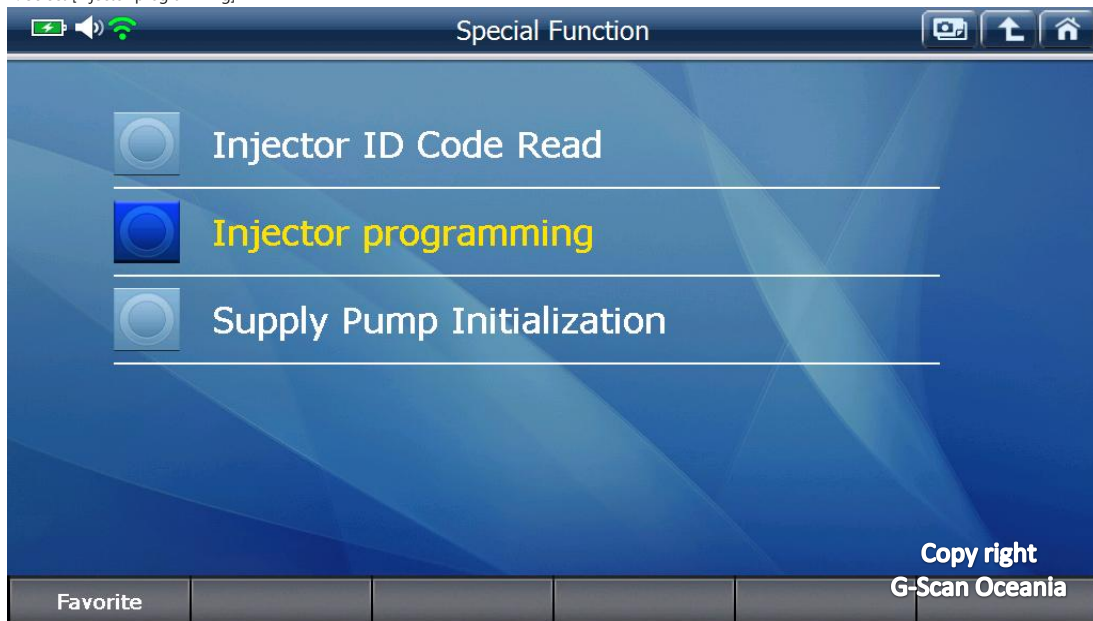

3. Notice

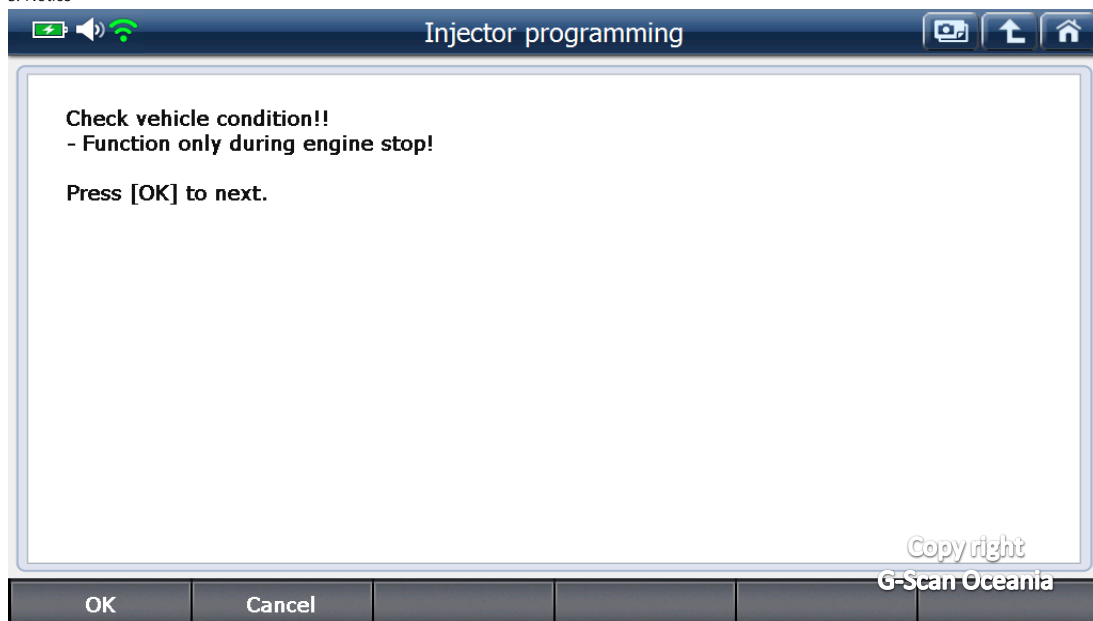

4. Read current Injector code.

Injector programming

Please select cylinder :

[F1] Cylinder 1 : 5FD200C60BF905F3C800DF58
[F2] Cylinder 2 : 5F0F15F111090605001D06B4
[F3] Cylinder 3 : 5F030FE00E061202E313F5AE
[F4] Cylinder 4 : 5FDA00CC0CF400EFC2E9E297

Copyright
G-Scan Oceania

F1 F2 F3 F4 Exit

5. Input new injector code.

Injector programming

Input ID code :

KEYBOARD

0	1	2	3	4
5	6	7	8	9
A	B	C	D	E
F	G	H	I	J
K	L	M	N	O
P	Q	R	S	T
U	V	W	X	Y
Z	<-	Enter		

Copyright
G-Scan Oceania

OK Cancel

6. Confirm injector code

Injector programming

Injector ID : 012345678901234567890123

Press [OK] to next.

Copyright
G-Scan Oceania

OK Back

7. Notice

