



1. Select Astra-G immobilizer

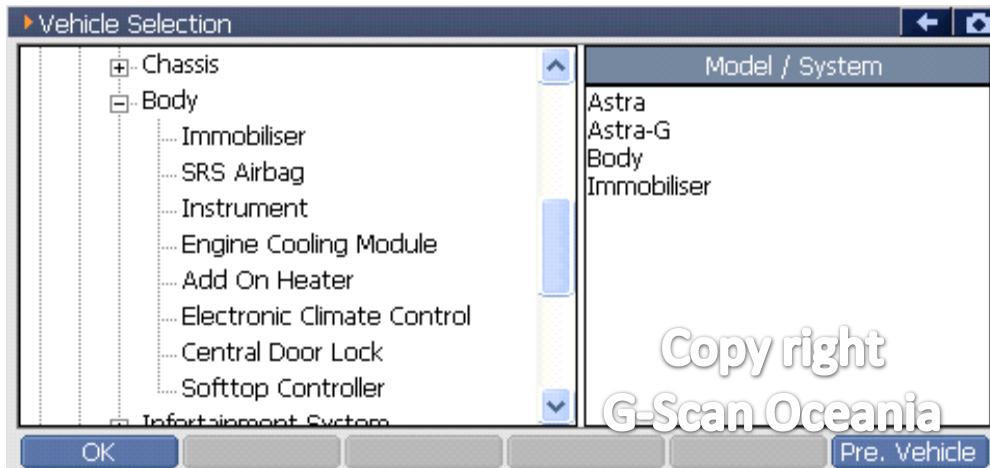

2. Select special function



3. Select Reset engine controller

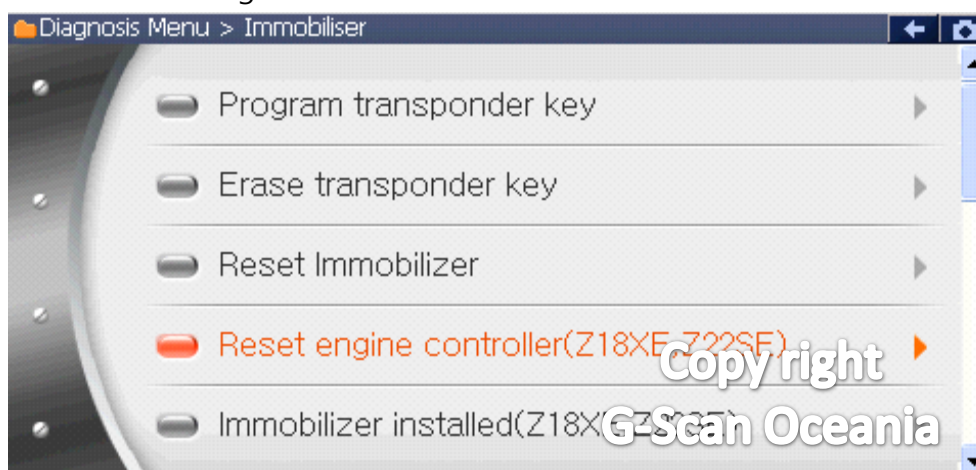

4. Input security code

► Immobiliser > Reset engine controller(Z18XE,Z22SE)

Input security code(4-digit number) :

1	2	3
4	5	6
7	8	9
<-	0	Enter

OK No

Copyright G-Scan Oceania

5. Notice

► Immobiliser > Reset engine controller(Z18XE,Z22SE)

Note :

- See checking procedure before programming.

Press [OK] to next.

OK No

Copyright G-Scan Oceania

6. Notice

► Immobiliser > Reset engine controller(Z18XE,Z22SE)

Warning!!

- Engine will not start after reset.
- Do this only before replacing the engine control unit.

Press [OK] to next.

OK No

Copyright G-Scan Oceania

7. Ignition off



8. Ignition on

