




1. Select diesel engine

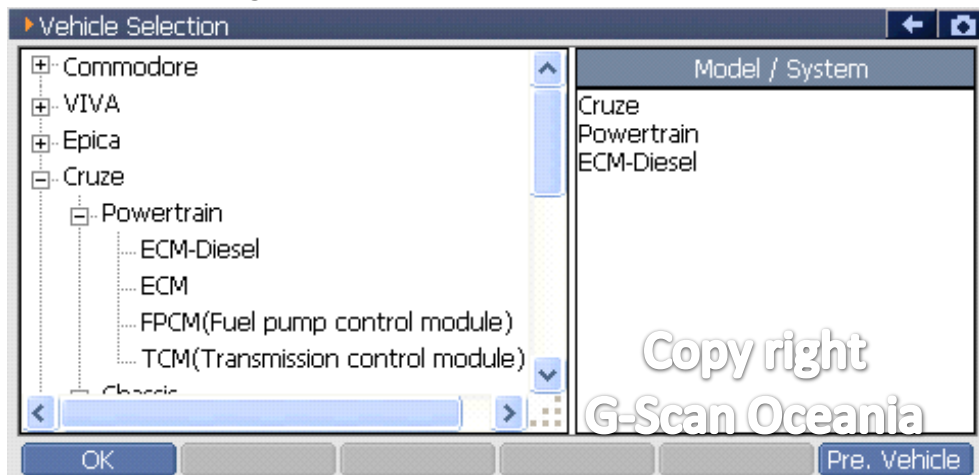

2. Select [Special function]

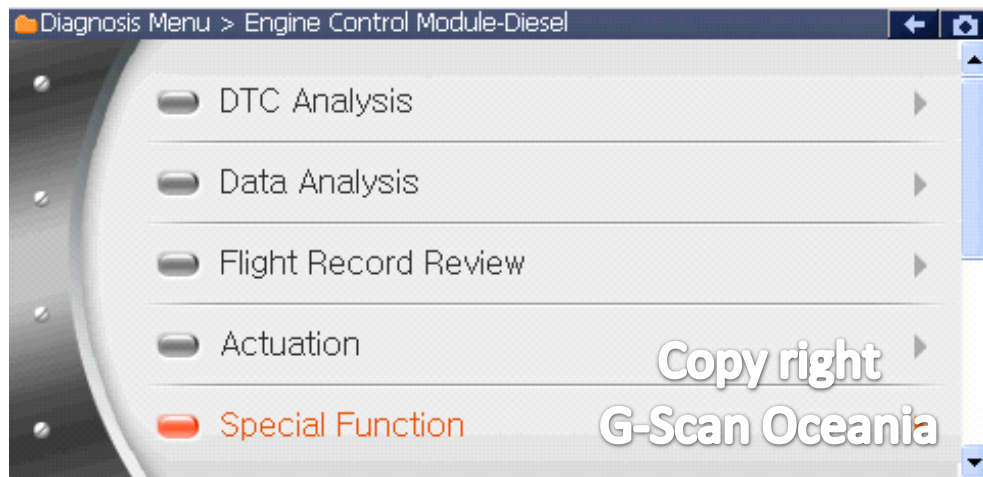

3. Select [DPF reset]

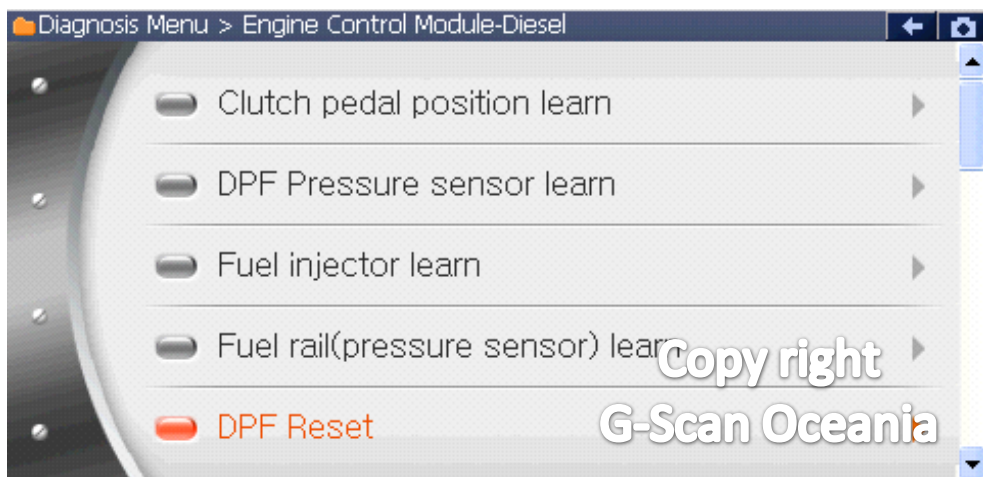

4. Check the precondition



5. Starting the reset



6. Turn ignition off



** G-scan wait 15s for the reset

7. Turn ignition on

