




1. Select diesel engine

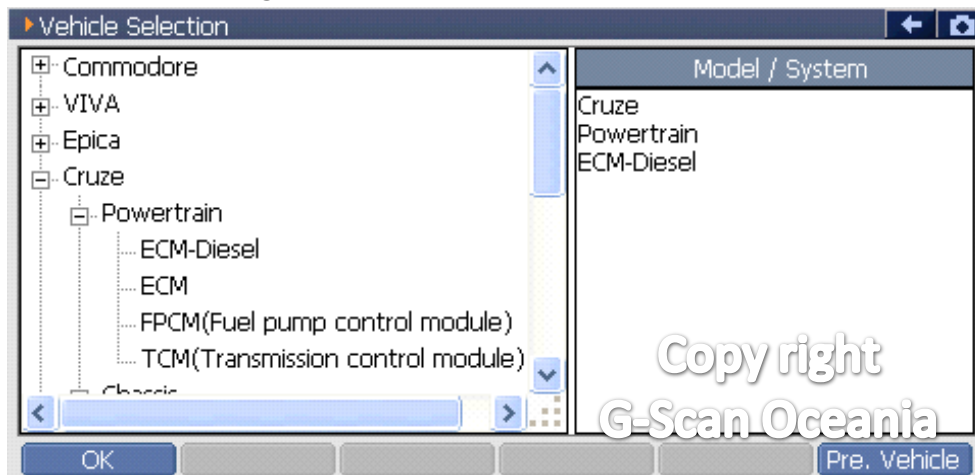

2. Select [Special function]

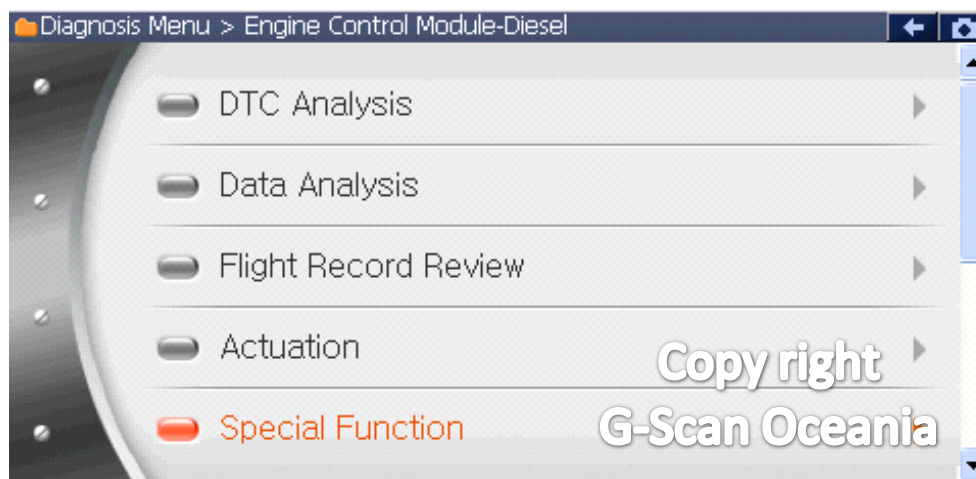


3. Select [Engine oil life reset]

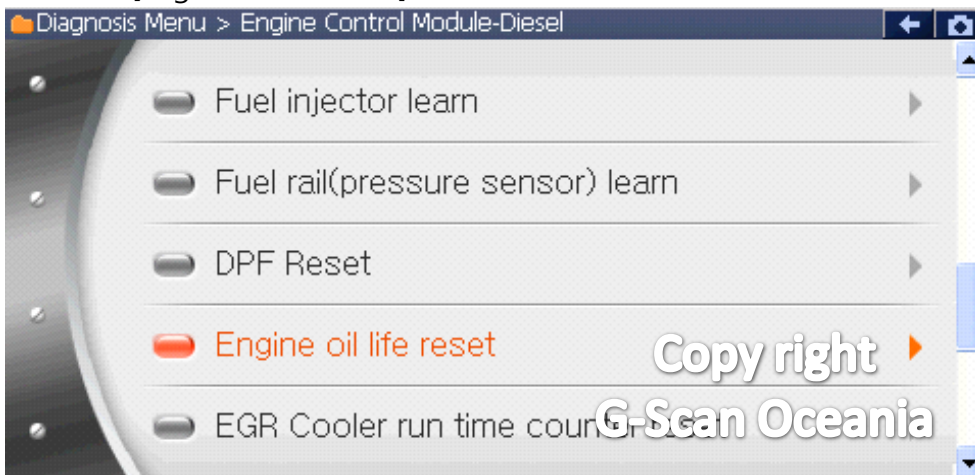


4. Check the precondition



5. Starting the reset

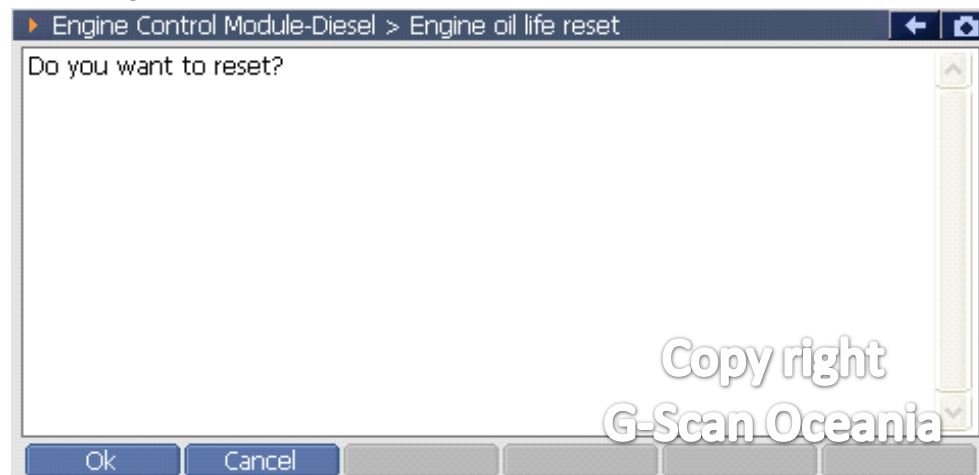

6. Turn ignition off

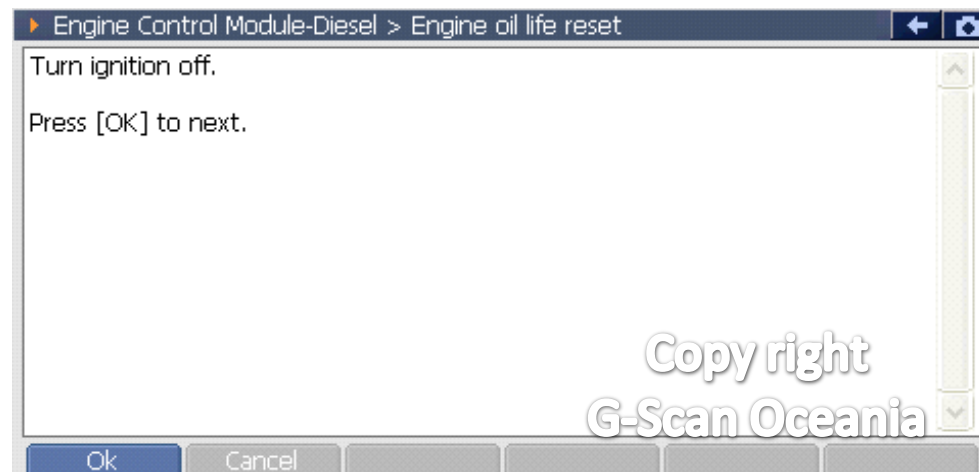

** G-scan wait 60s for the reset

7. Turn ignition on

