



1. Select engine.

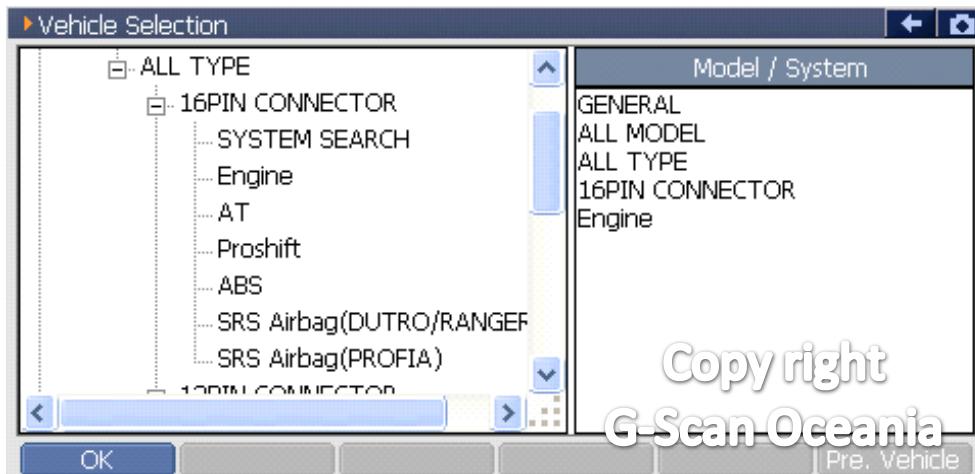

2. Select special function

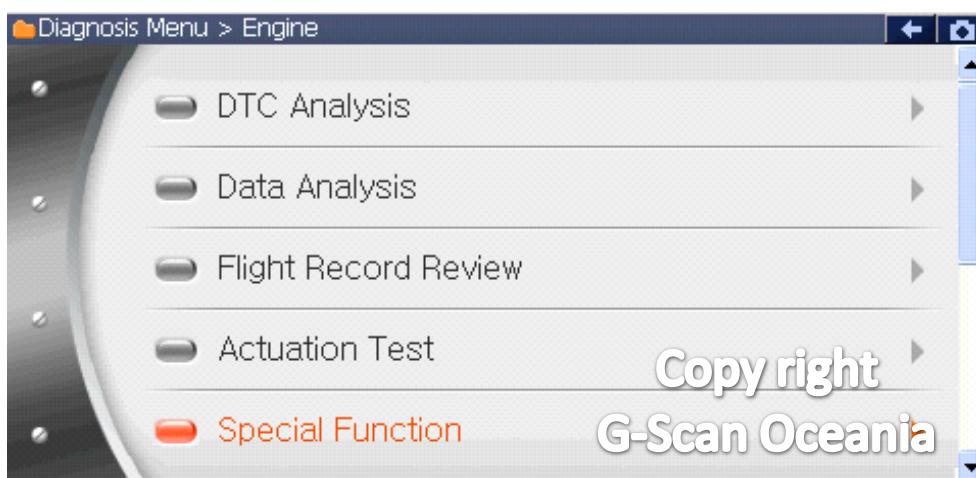


3. Select forced DPR regeneration




4. Preconditions



5-1. Regeneration status

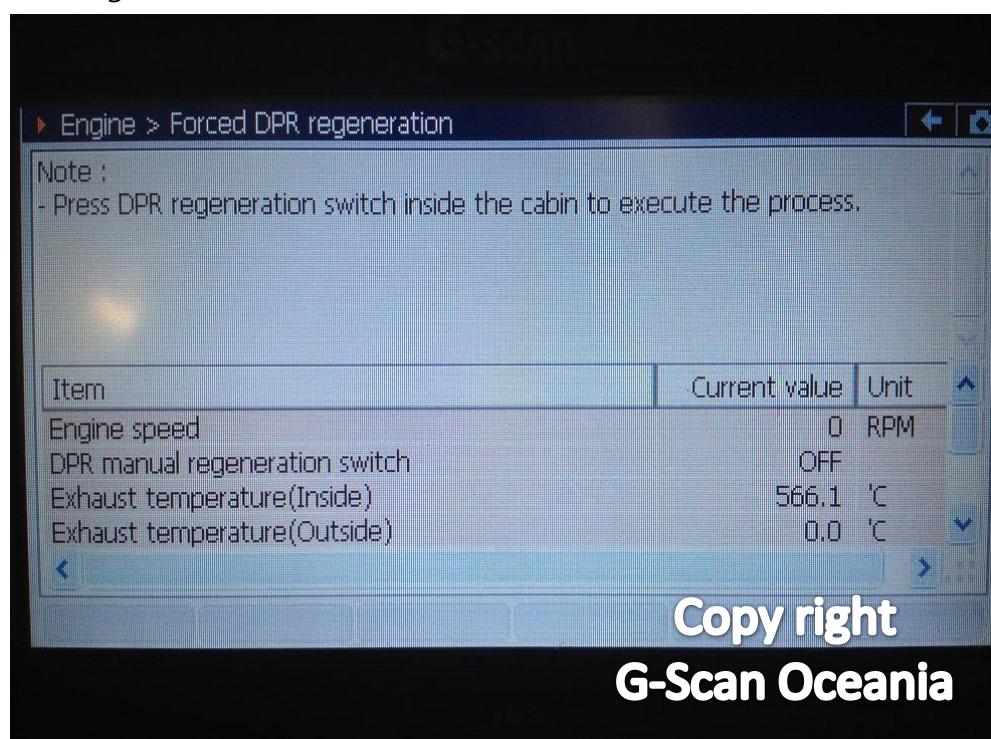

5-2. Regeneration status

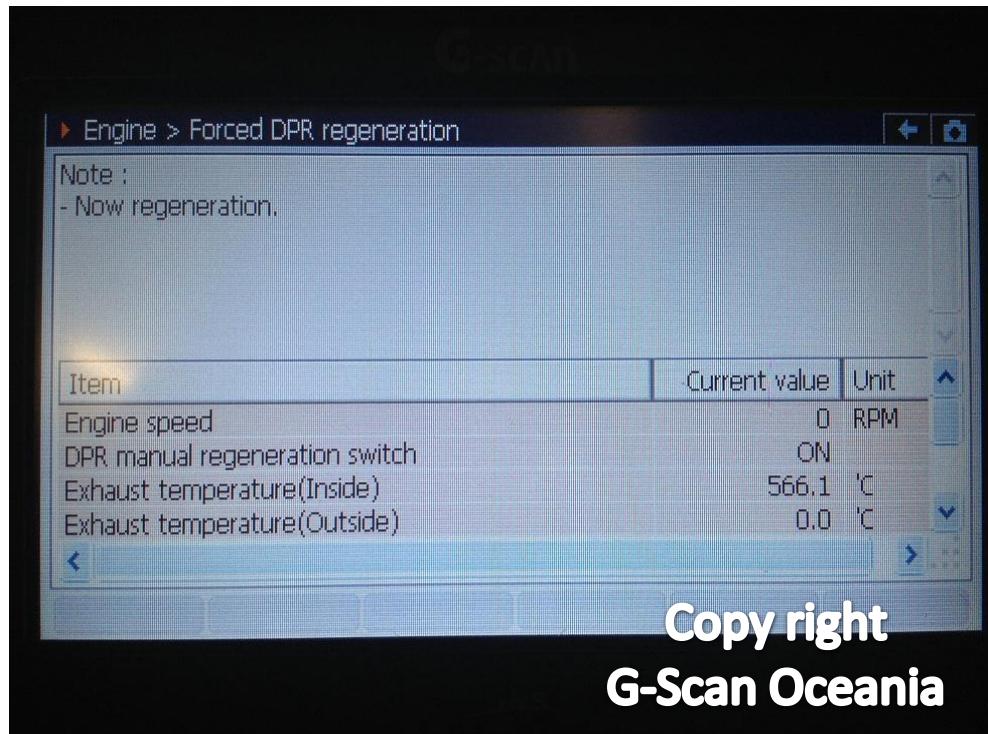

6. Complete.

