




1. Select engine.

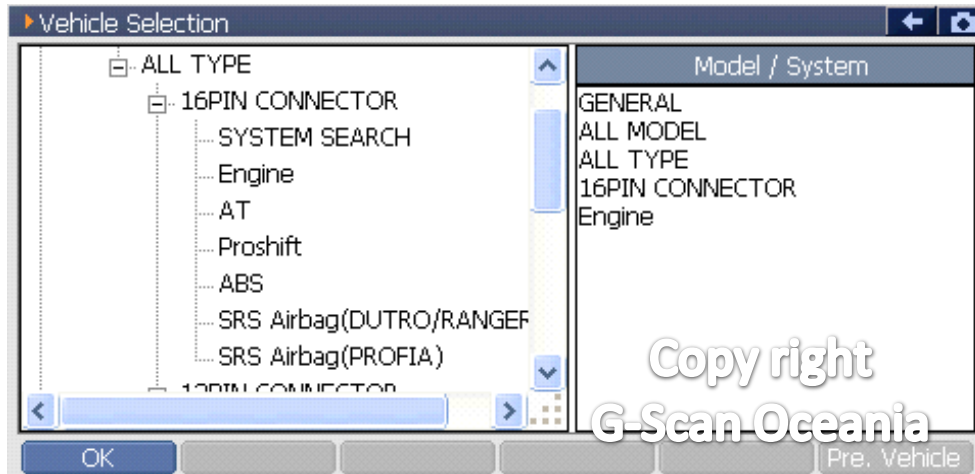


2. Select special function

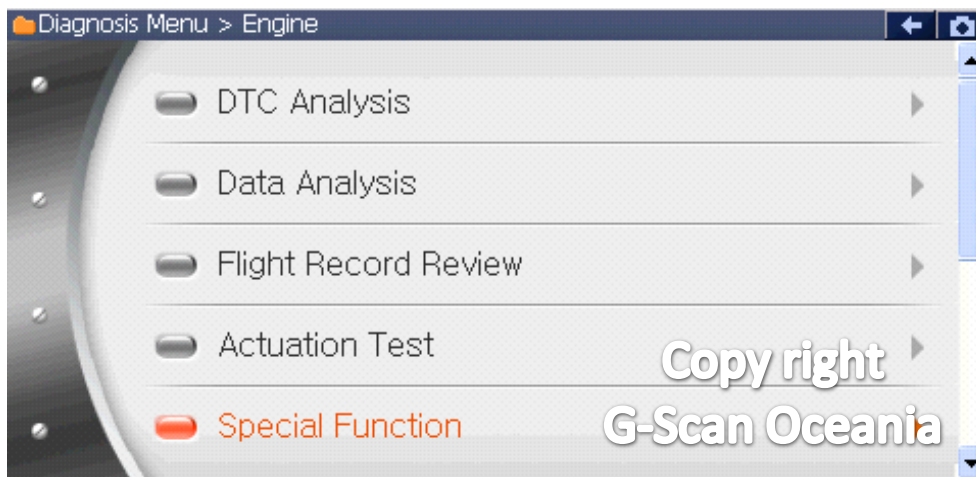

3. Select DPR status

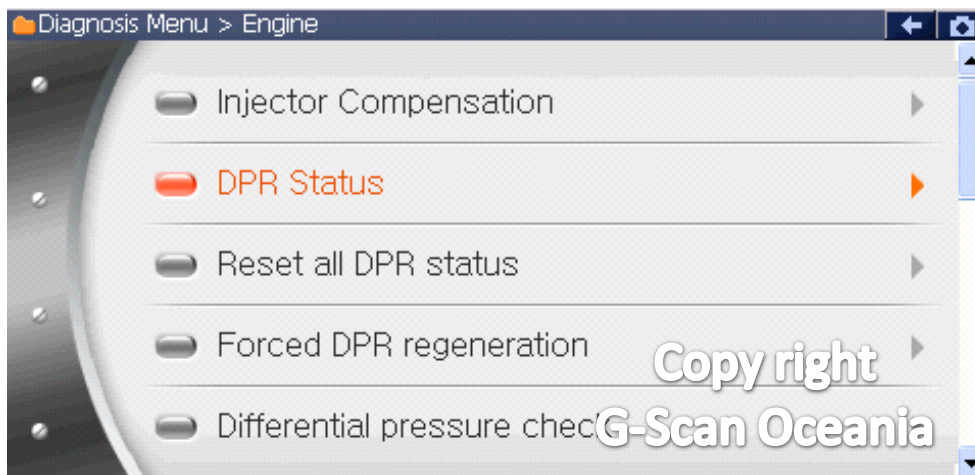

4. Information

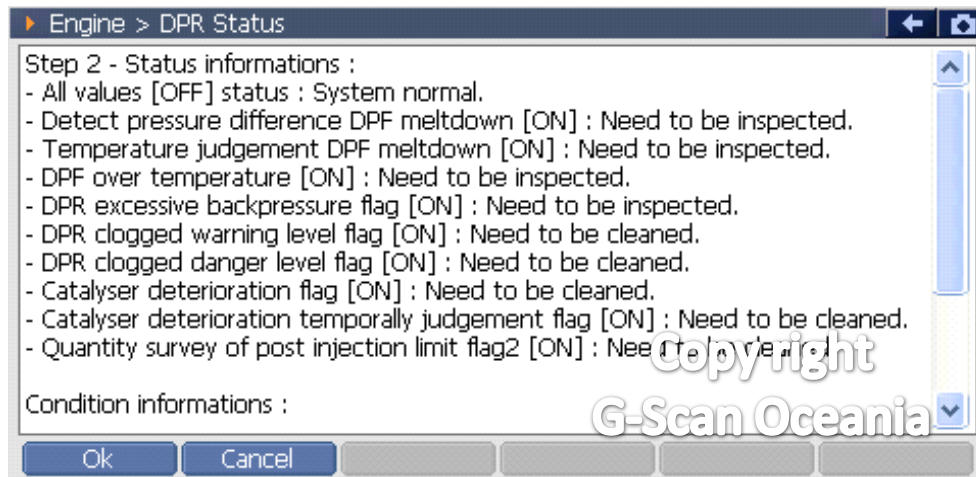

5. DPR Status

