




1. Select engine.

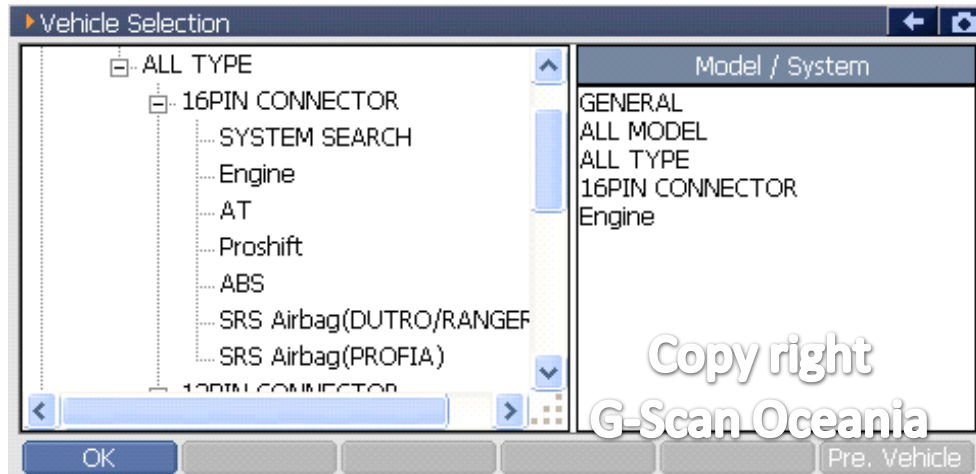


2. Select special function

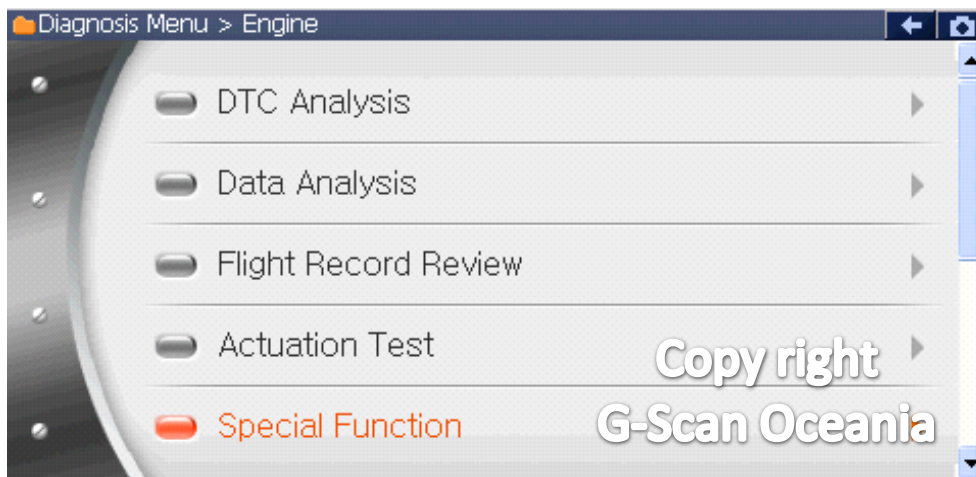

3. Select injector compensation

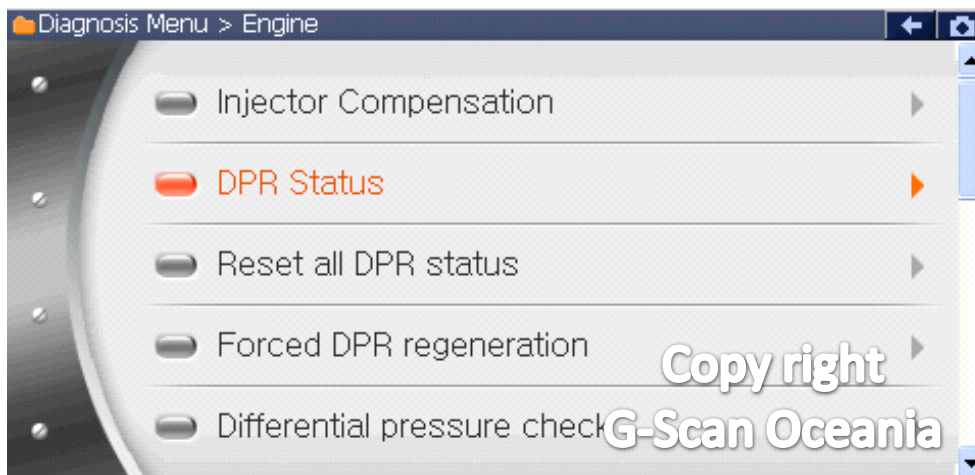


4, Information

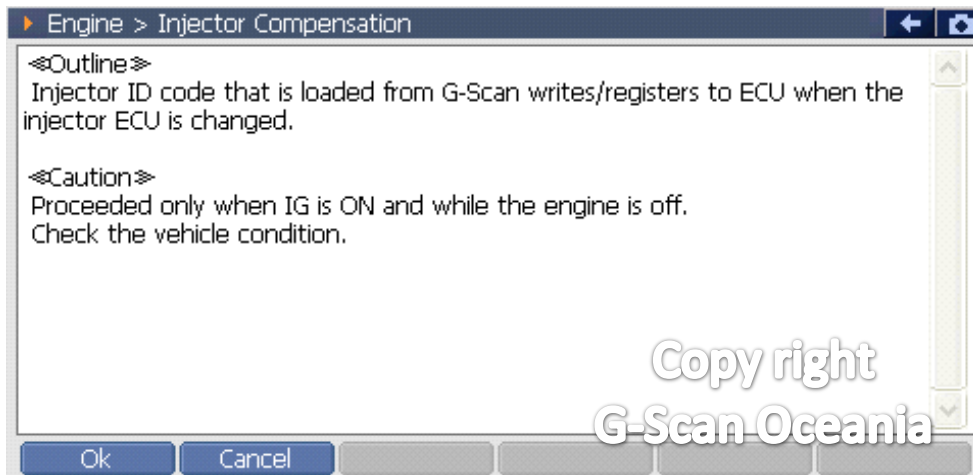

5-1. Programmed injector code



5-2. Programmed injector code

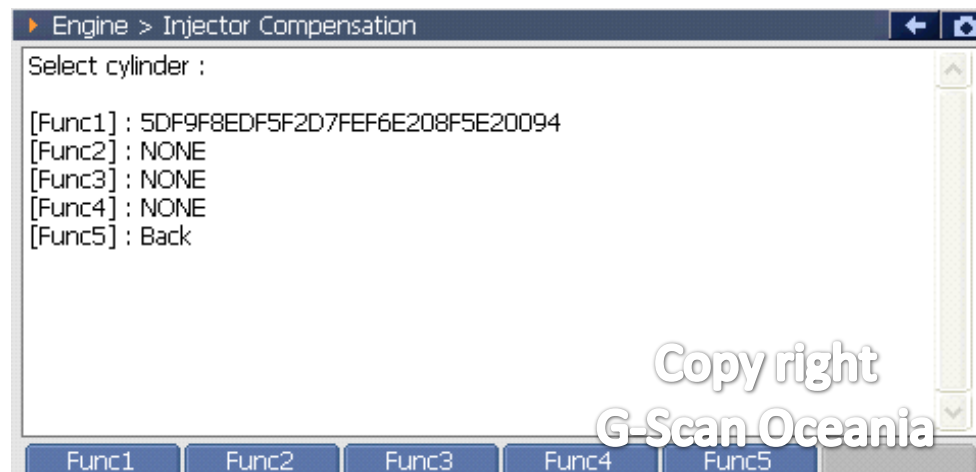

7. Input new injector code.

Engine > Injector Compensation

Input :

5DF1F6ECF3EF1900FD12F9F6FE00AD

OK Cancel Func3 Func4

KEYBOARD

0	1	2
3	4	5
6	7	8
9	A	B
F	<-	Enter

Copyright G-Scan Oceania