




1. Select engine.

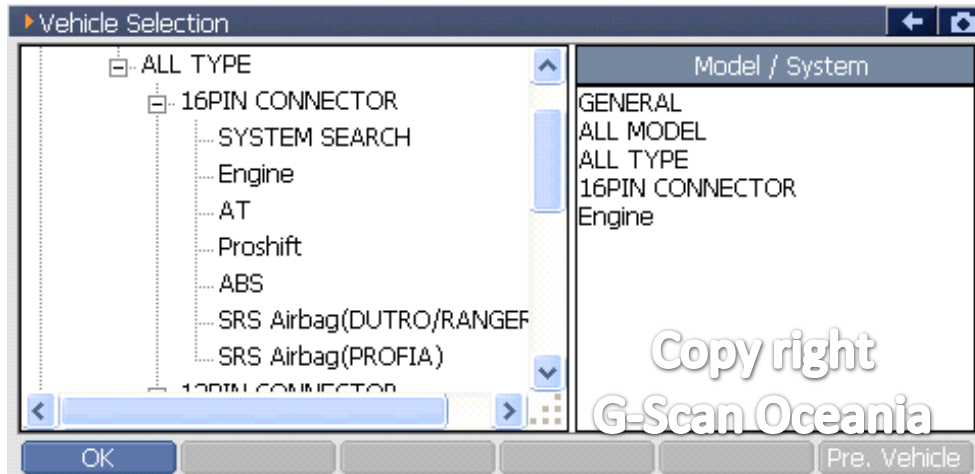


2. Select special function

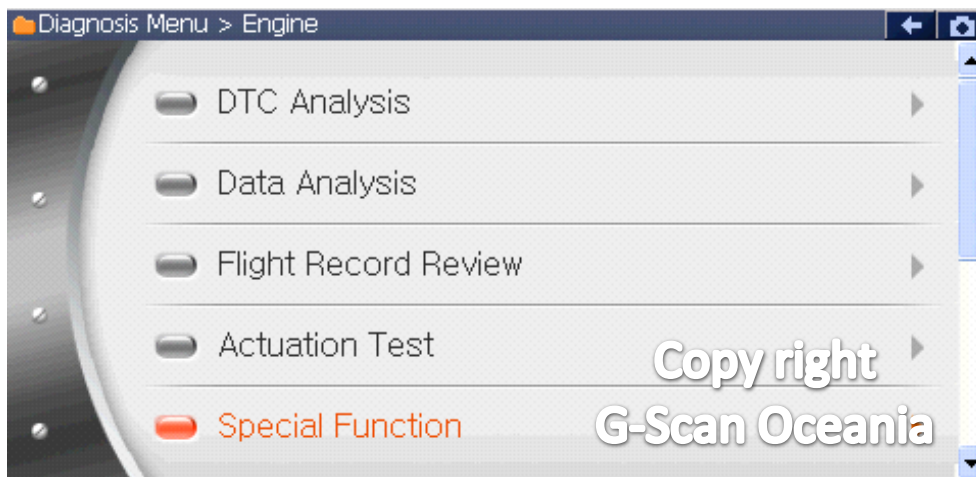


3. Select supply pump specification learning.

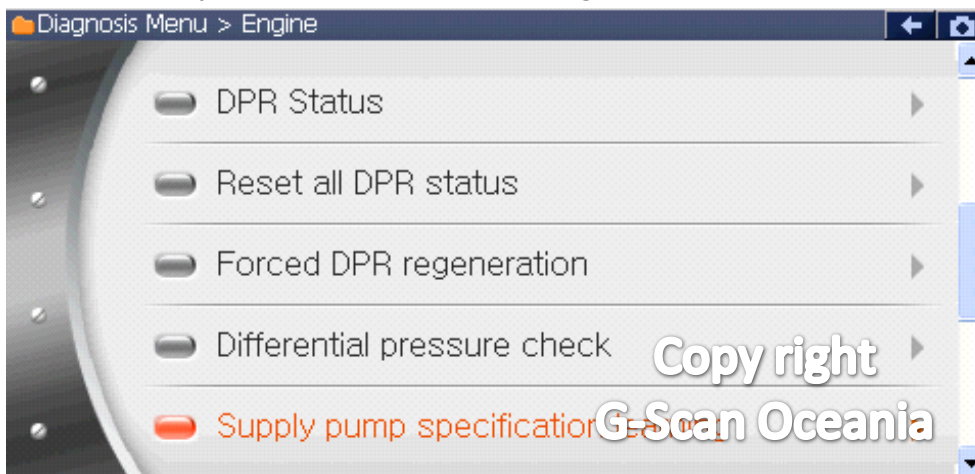

4. Preconditions

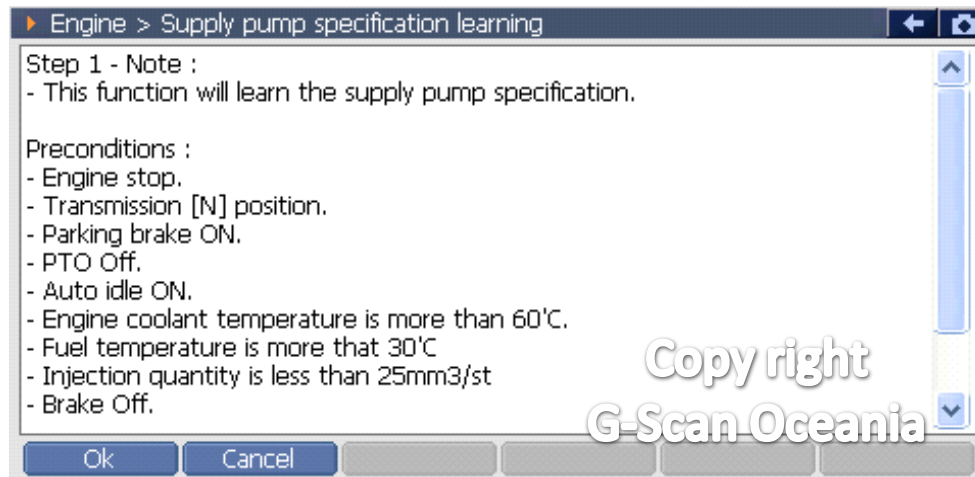


5. Turn IG. On.

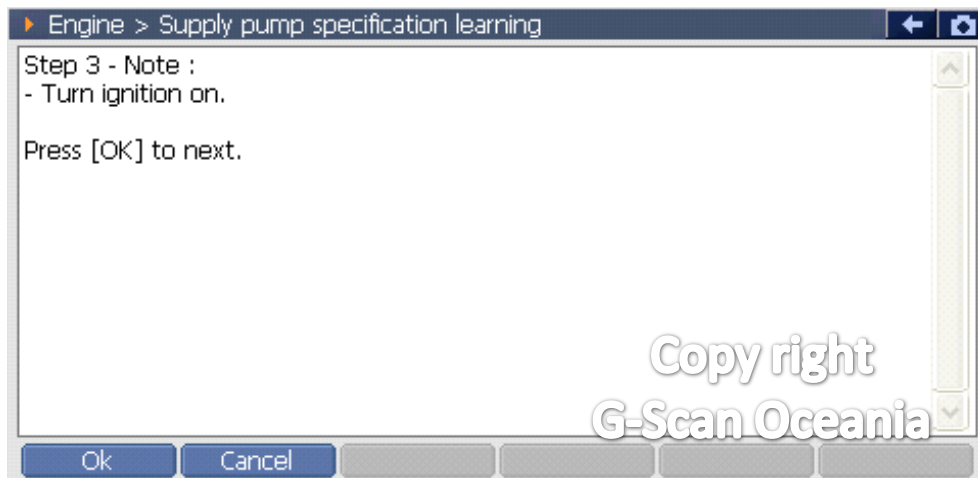


6. Turn IG. Off.



7. Turn IG. On

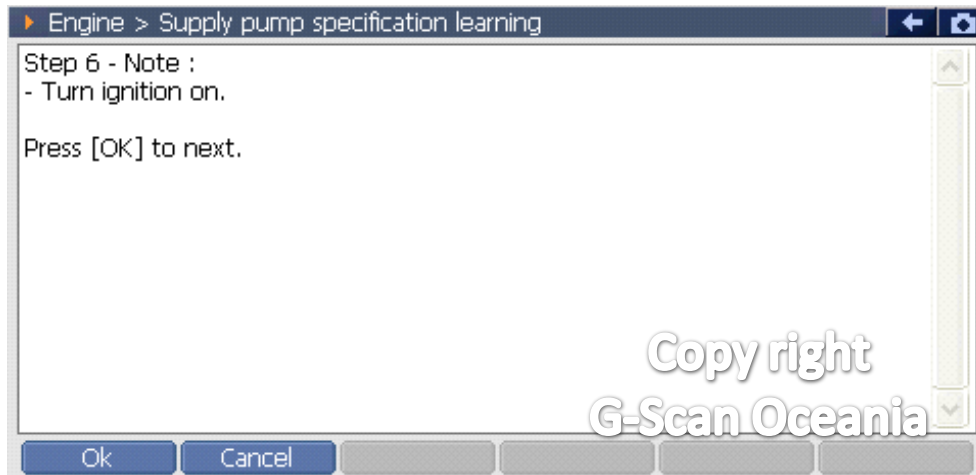

8. Learning status

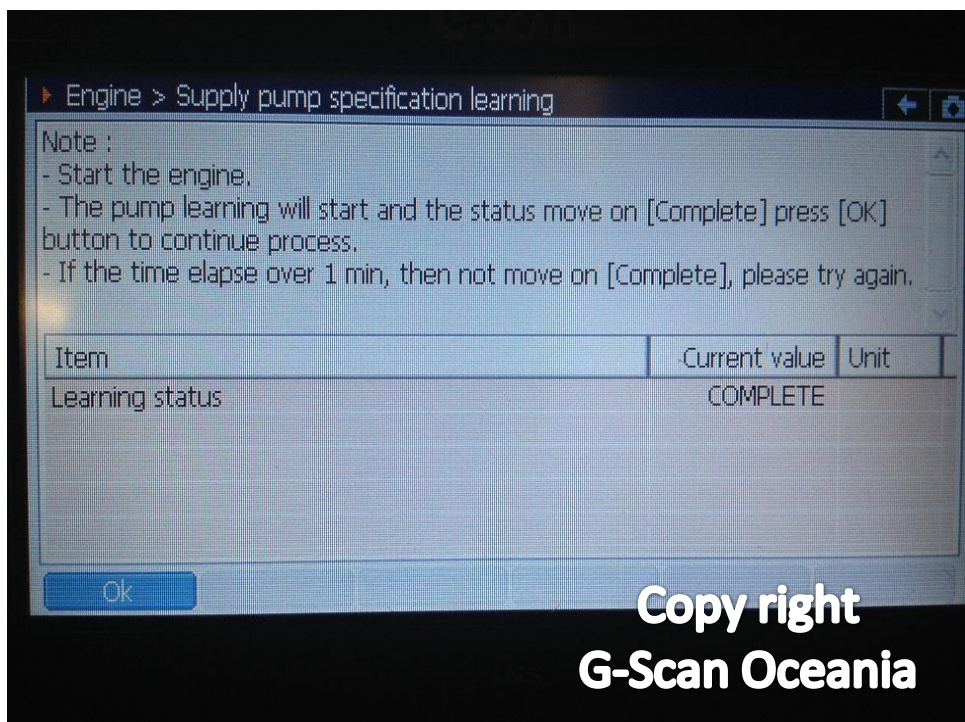

9. Turn IG. Off



10. Turn IG. On.

