




1. Select engine.

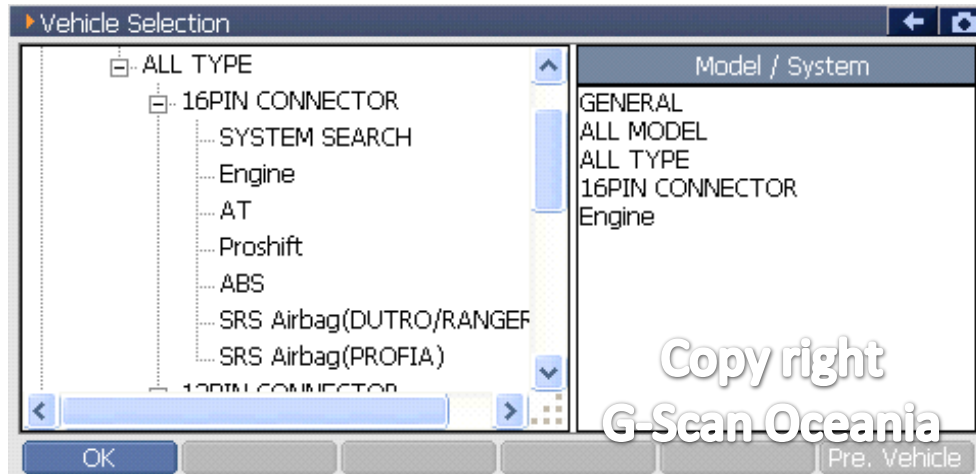

2. Select special function

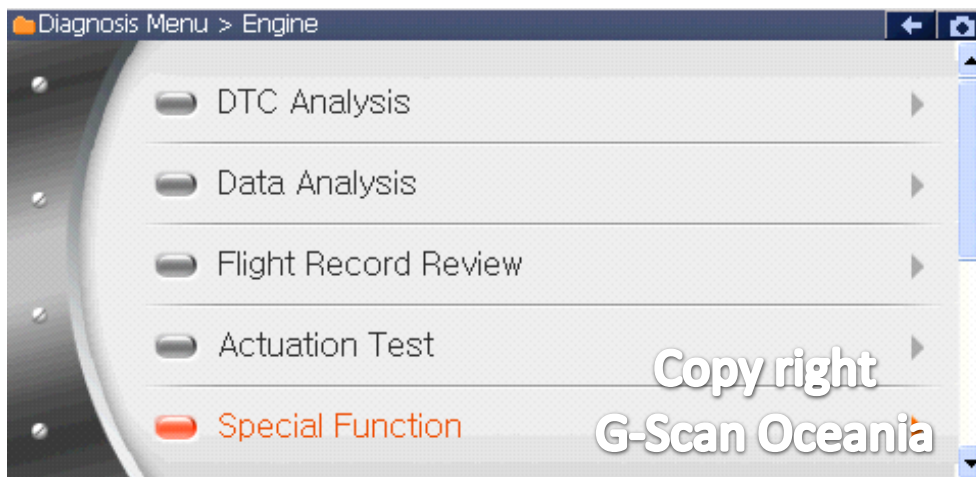

3. Select initialize intake throttle valve

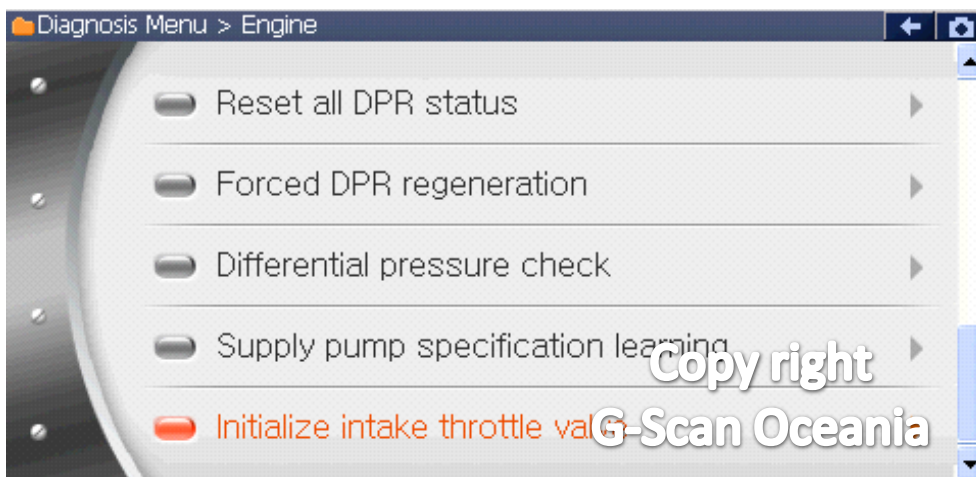

4. Preconditions

