


1. Select [Cruze -> Powertrain -> Transmission control module] menu




2. Select [Special function]

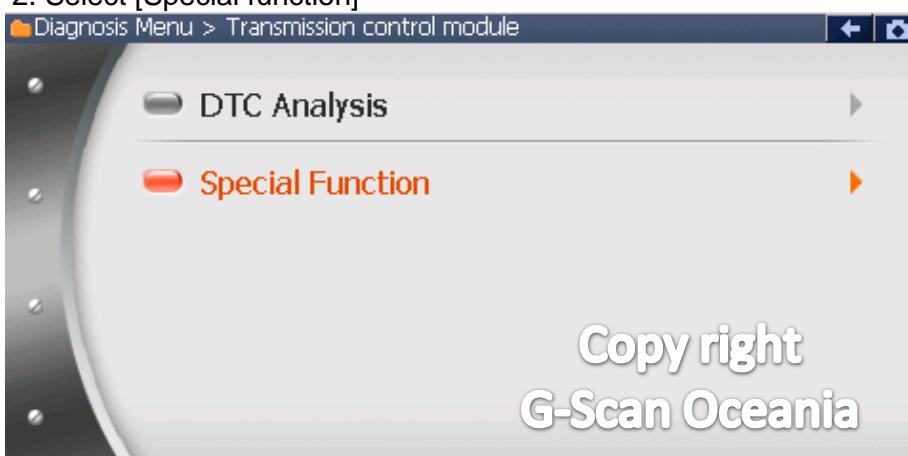

3. Select [Solenoid cleaning]




4. Notice

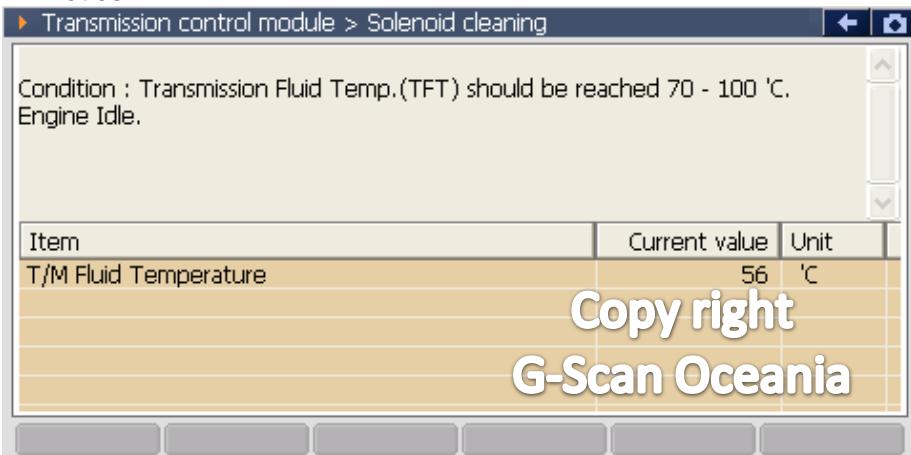

5. Notice



6. Notice

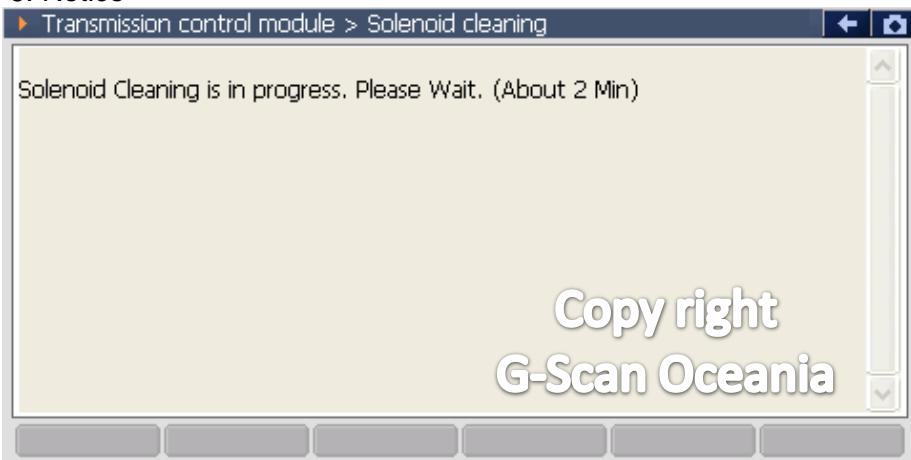

7. Notice

