1. Select [Infortainment sysyem] > [Read security PIN code]




2. Select [Special function]




3. Select [Read security PIN code]



## 4. Notice

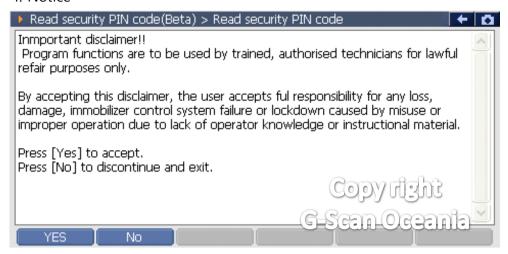

## 5. Notice

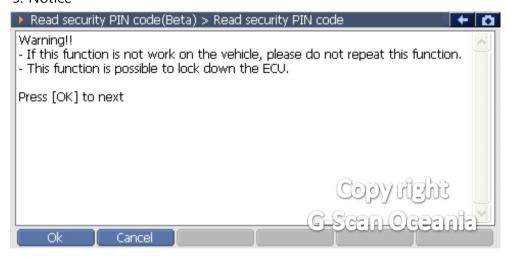

## 6. Notice

