
1. Select the EURO5



2. Select the [Special function]



3. Select the [DPD status resetting]

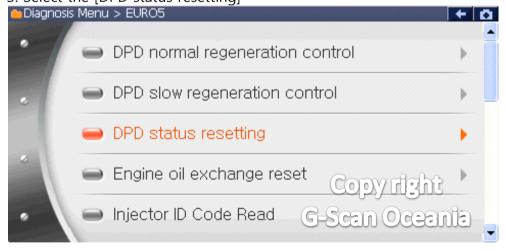

4. Press [OK] to continue



5. Turn ignition off



- ** After pressing [OK], wait about 5 seconds for resetting to complete.
- 6. Turn ignition on



7. Complete.