



1. Select 2.8L Diesel(LWH)

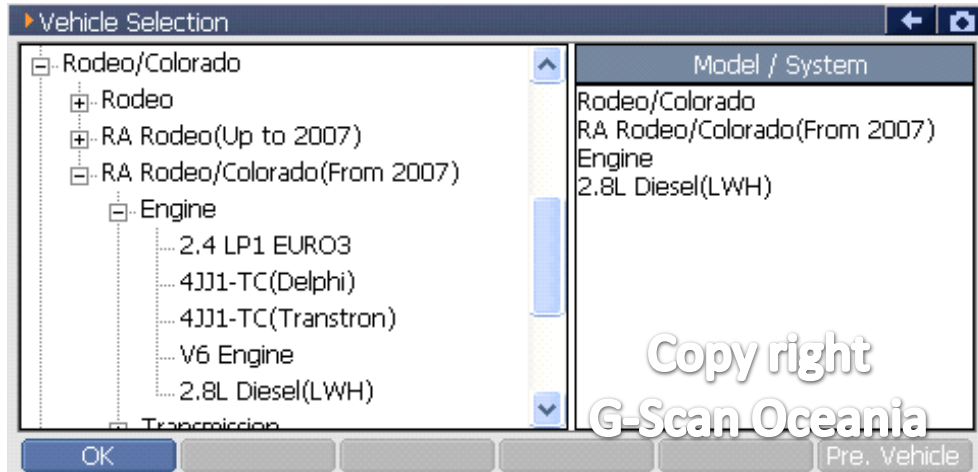


2. Select special function




3. Select Fuel injector learn

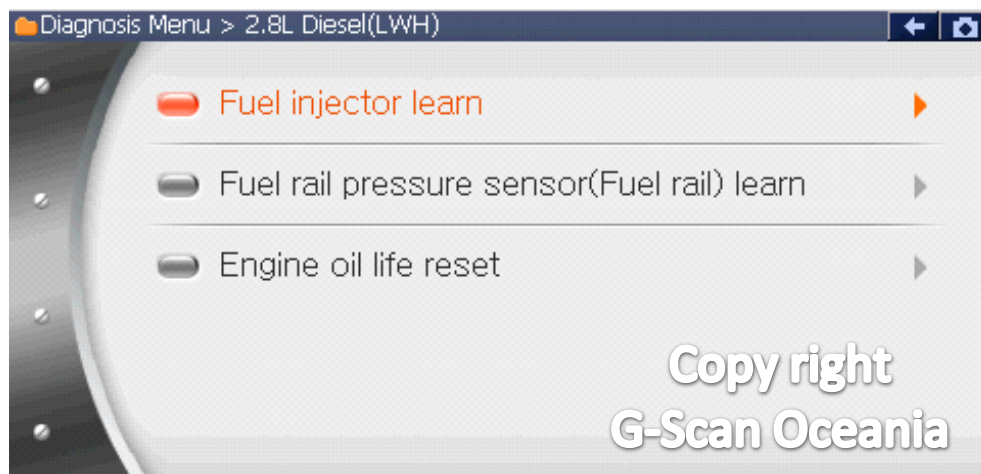

4. Preconditions

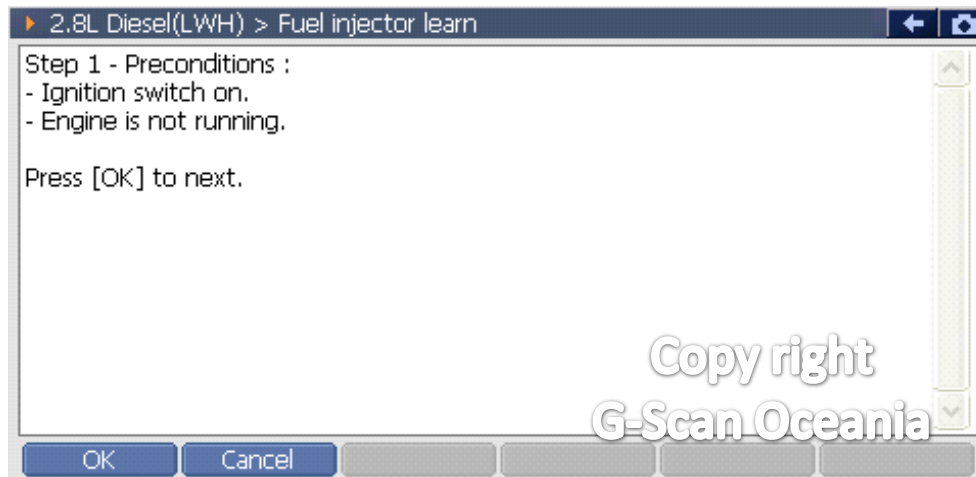

5. Turn IG. Off

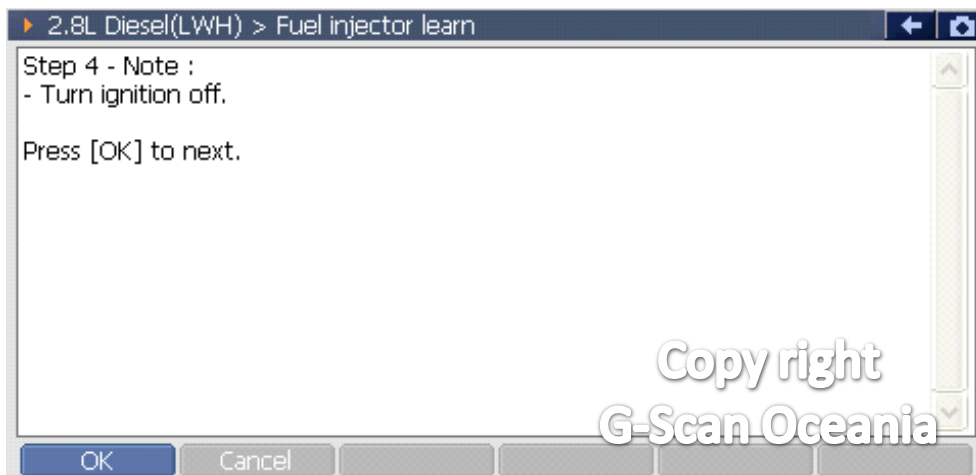

6. Turn IG.On

