




1. Select Auto transmission(6SP)

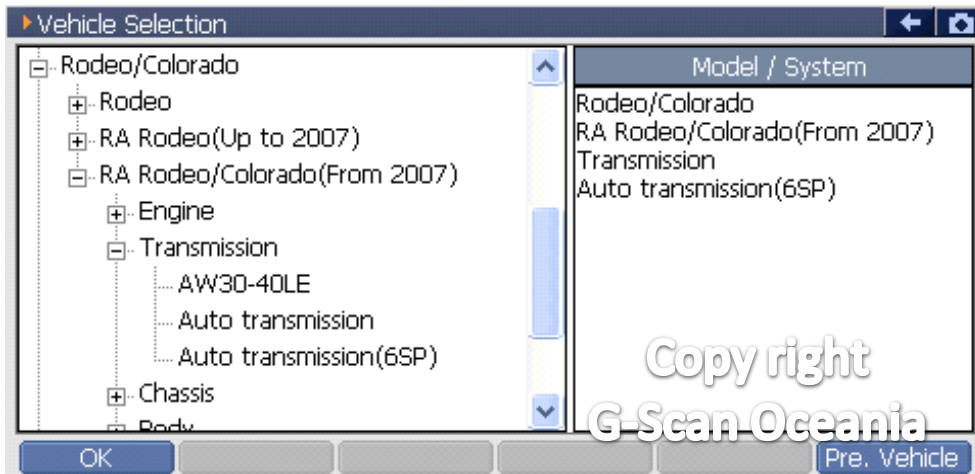

2. Select special function

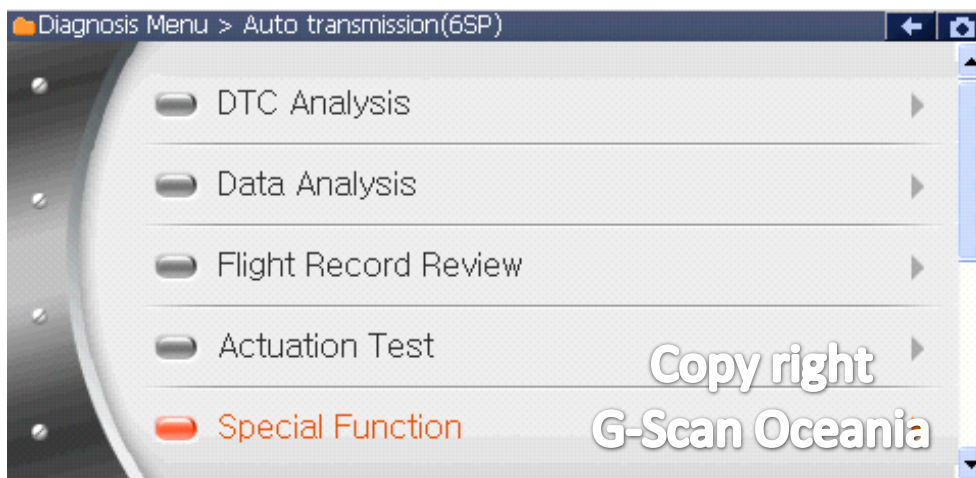

3. Select Transmission adaptive pressure reset

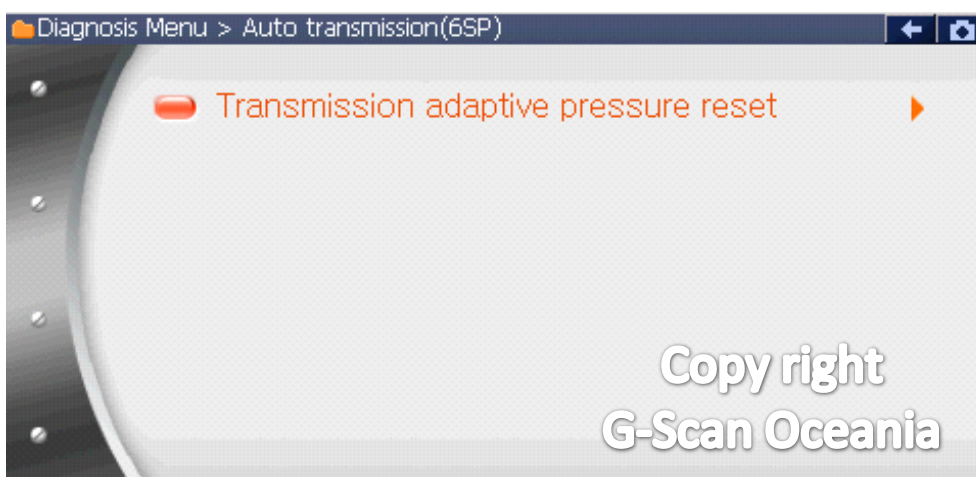

4. Notice

