


1. Select 2.8L Diesel(LWH)

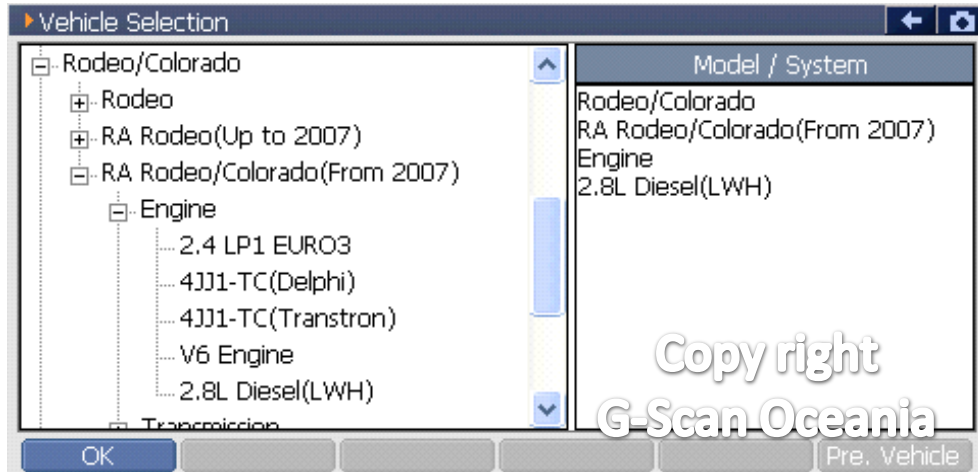


2. Select special function



3. Slect Engine oil life reset



4. Preconditions

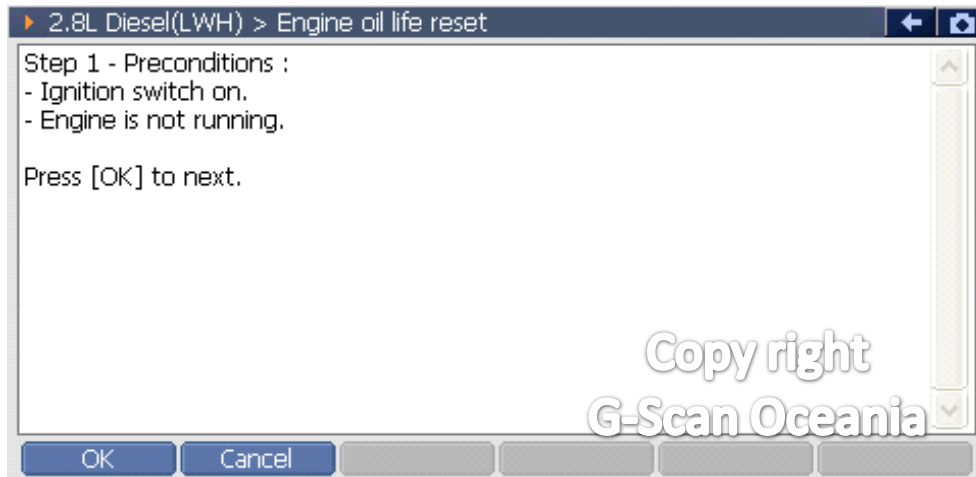

5. Turn IG. Off



6. Turn IG. On

