


1. Select [BCM(Body control module)]




2. Select subsystem [BCM_Keyless Entry]

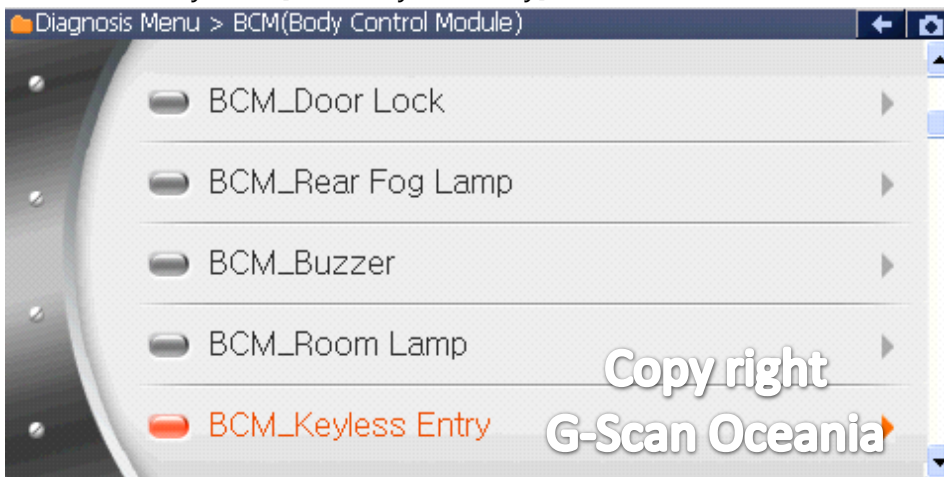


** Depending on the vehicle's options, it is possible there is a subsystem "Intelligent key".

3. Select [Special Function]

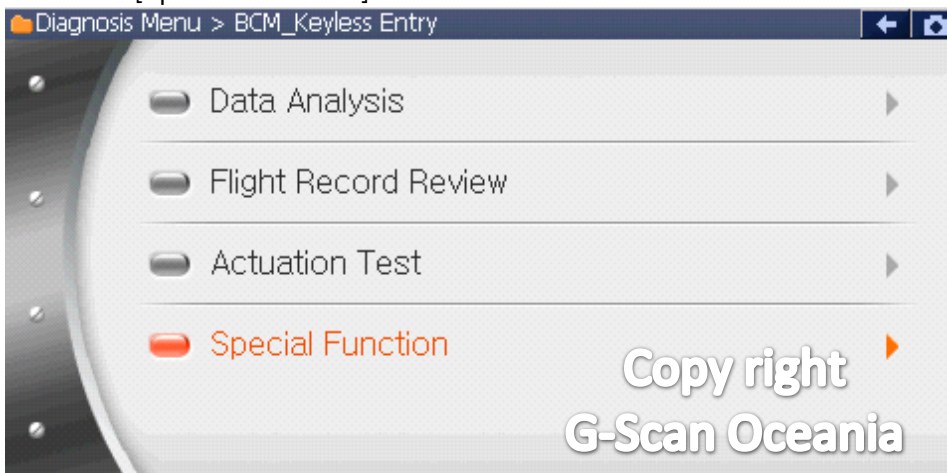

4. Select [REMO CONT ID Confir]

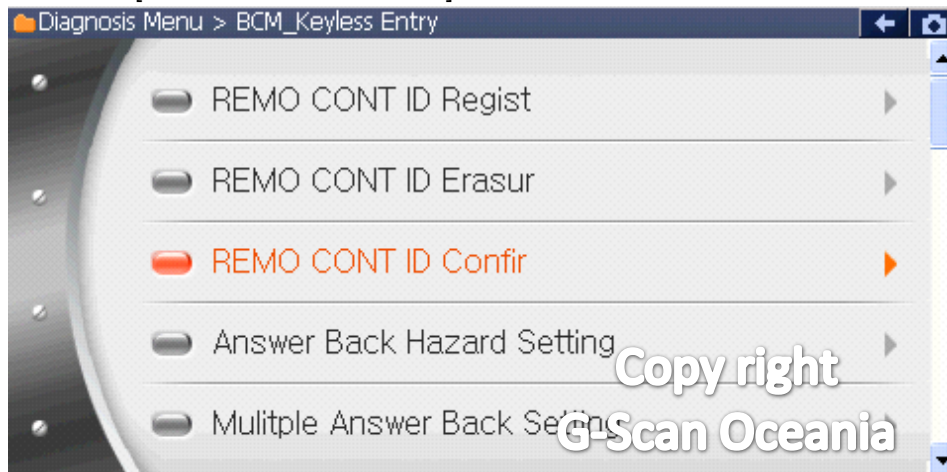

5. Complete

