




1. Select correct system

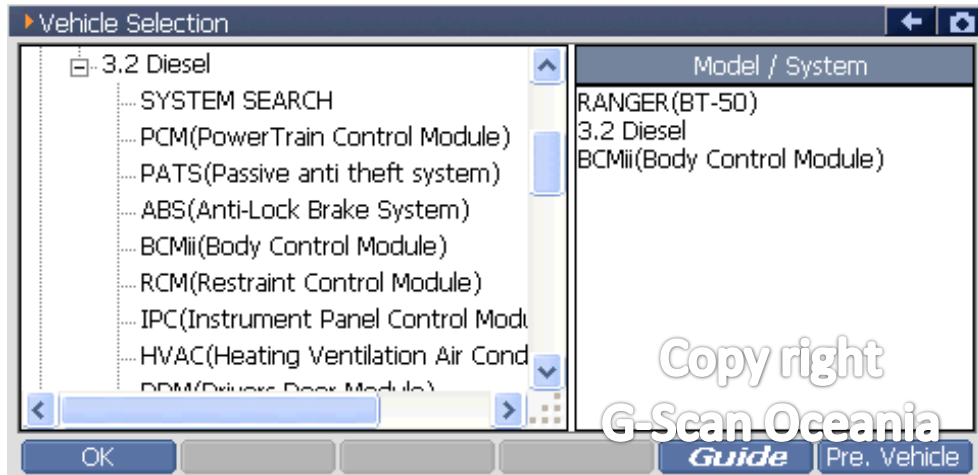


2. Select [Special function].

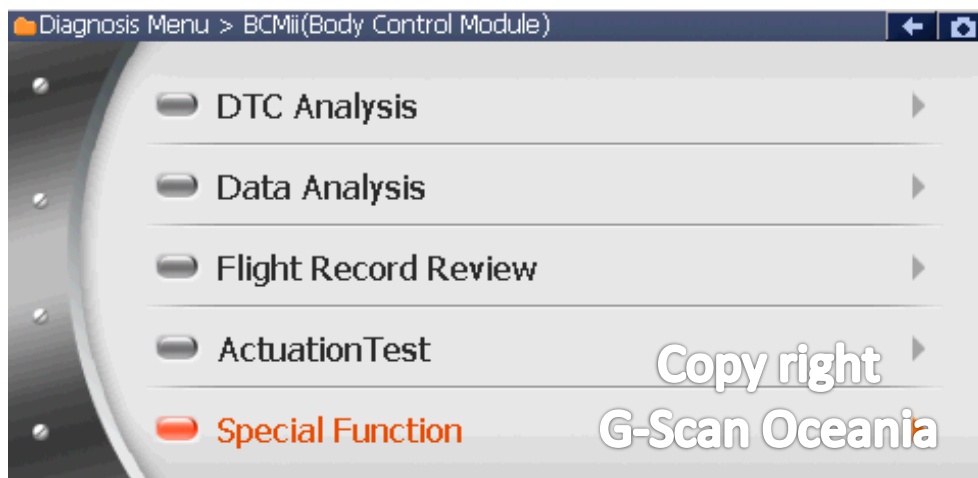


3. Select [Battery monitoring system reset].

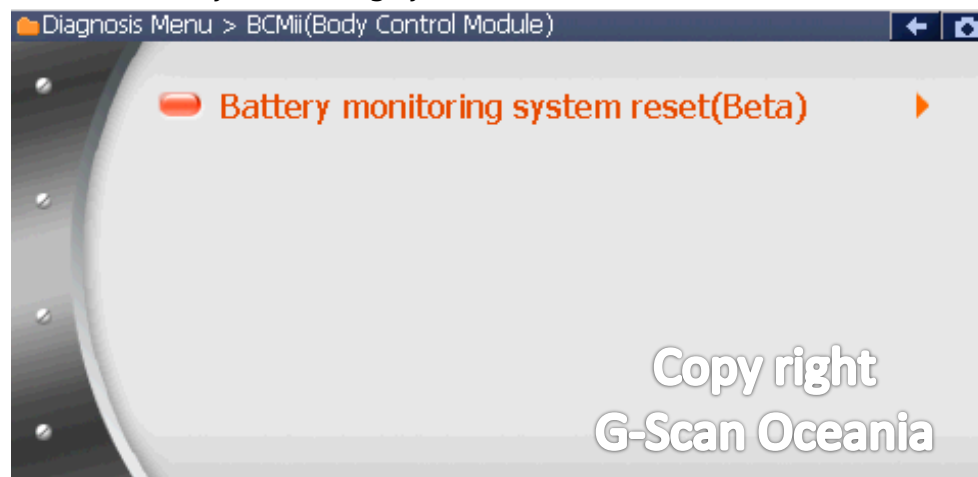

4. Note.

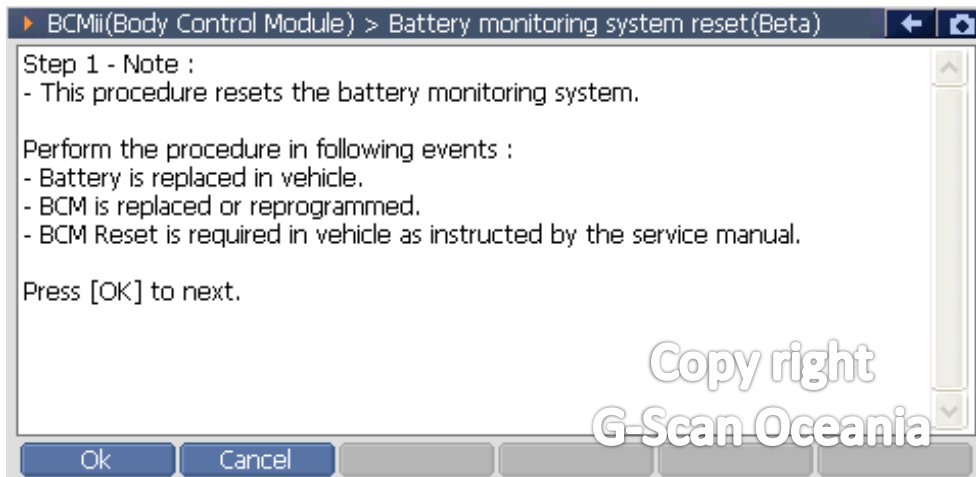

5. Turn ig on.

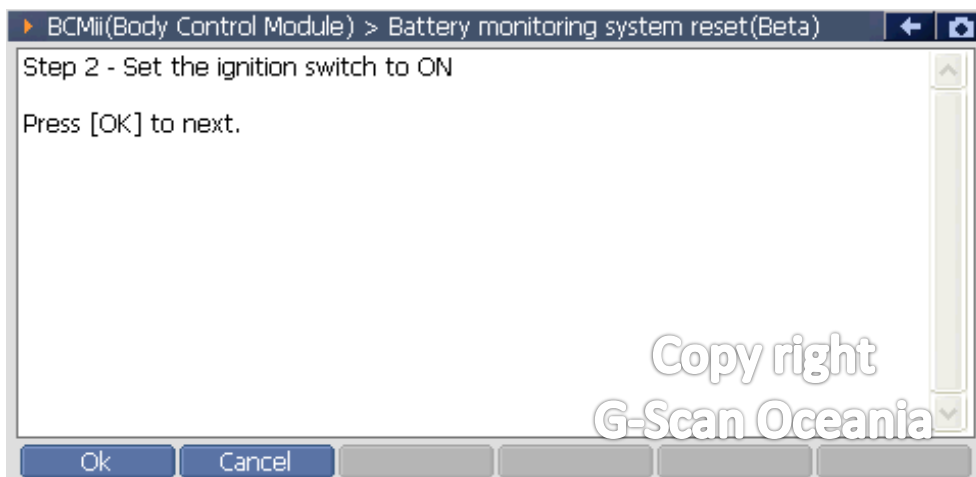

6. Complete.

