



1. Select [Immobilizer]

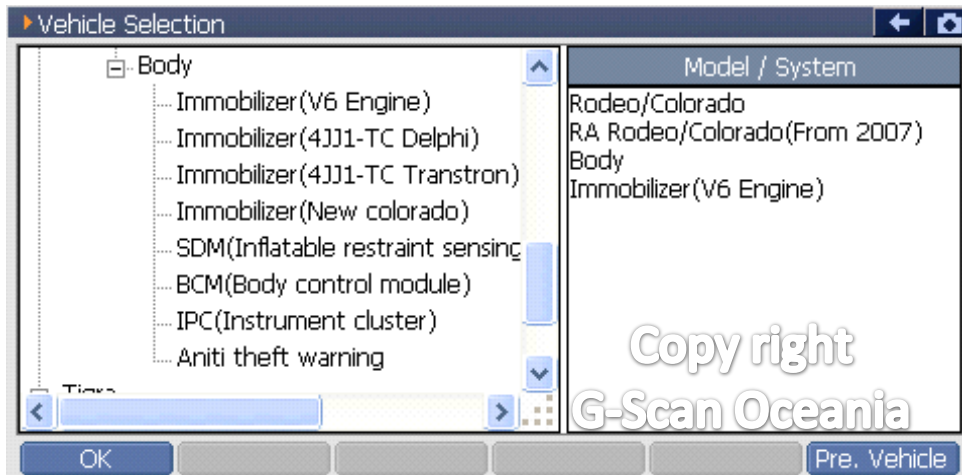

2. Select special function

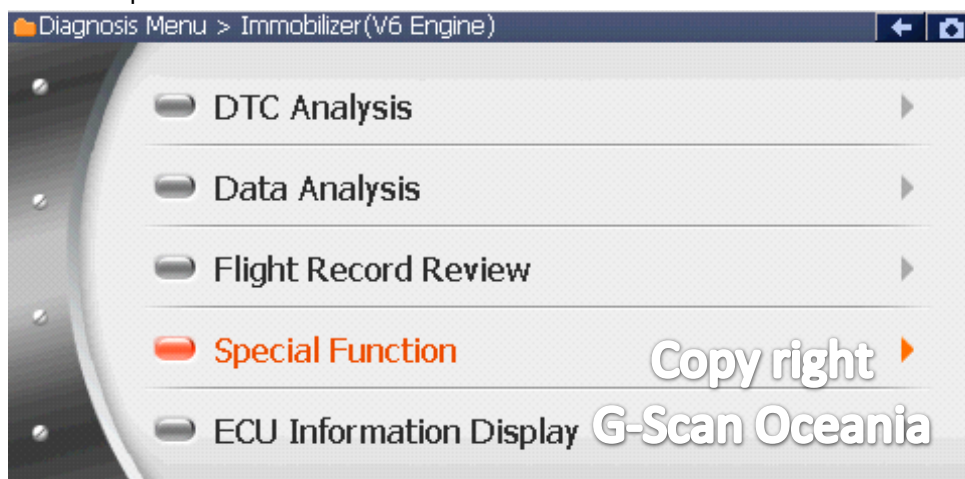

3. Select Program transponder key



4. Input security number

Immobilizer(V6 Engine) > Program transponder key

Input security code(4-digit number) :

4562

OK No

**** Before the programming, you must confirm that code is correct.**

5. Insert non programmed key.

Immobilizer(V6 Engine) > Program transponder key

Insert non-programmed key.

Press [OK] to next.

OK No

6. Turn IG.Off

Immobilizer(V6 Engine) > Program transponder key

Turn ignition OFF

Press [OK] to next.

OK No

7. Turn IG. On.



8. Turn IG.Off



9. Turn IG. On.

