 
 



1. Select [Anti theft warning]

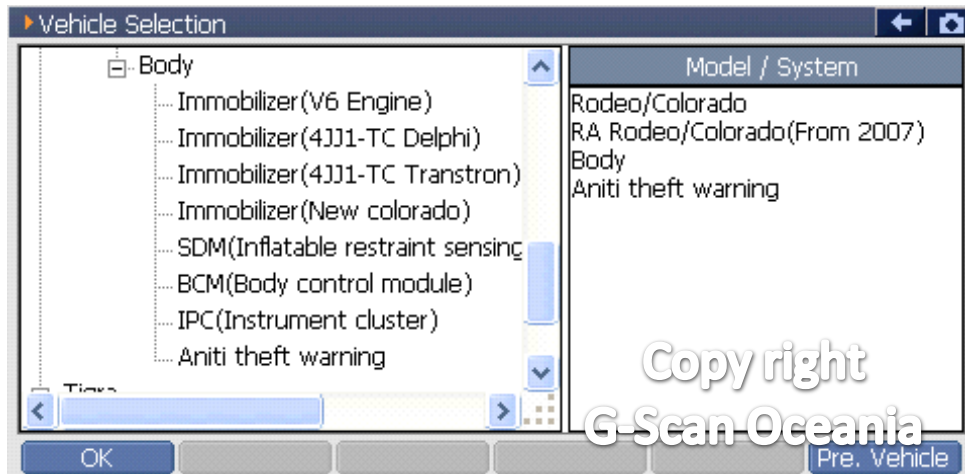

2. Select special function

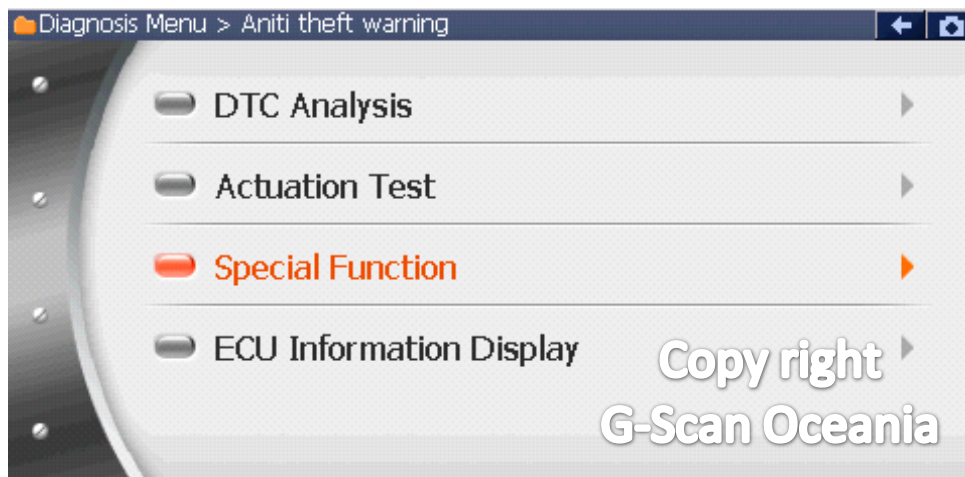

 3. Select program remote keys

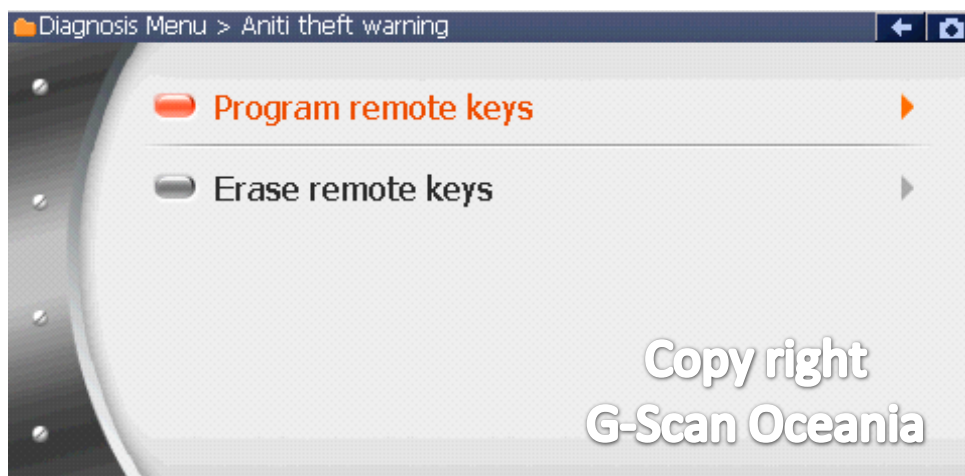

4. Input security number

Aniti theft warning > Program remote keys

Input security code(4-digit number) :

1	2	3
4	5	6
7	8	9
	Enter	

OK No

Copy right
G-Scan Oceania

** Before the programming, you must confirm that code is correct.

5. Note

Aniti theft warning > Program remote keys

Activate remote key several times within 10 seconds!!

OK No

Copy right
G-Scan Oceania