




1. Select engine.

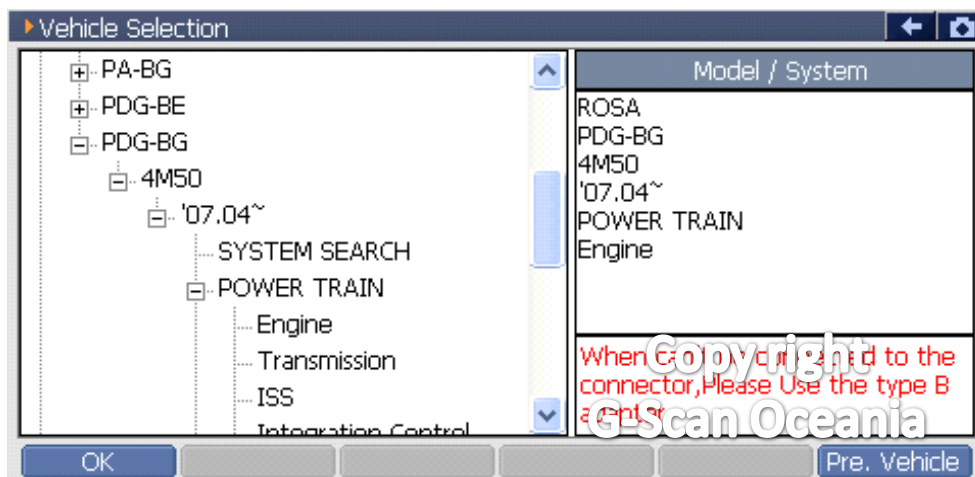


2. Select [Special function]

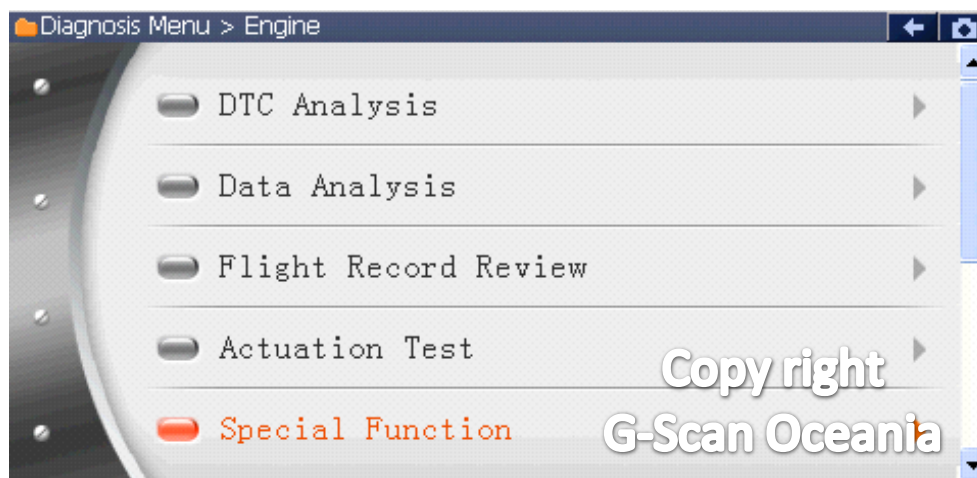


3. Select [DPF Regeneration].

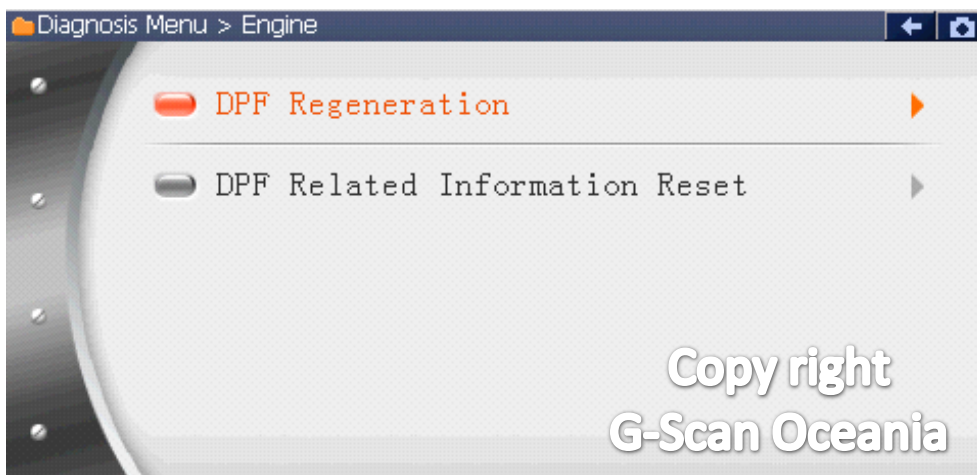


#### 4. Information

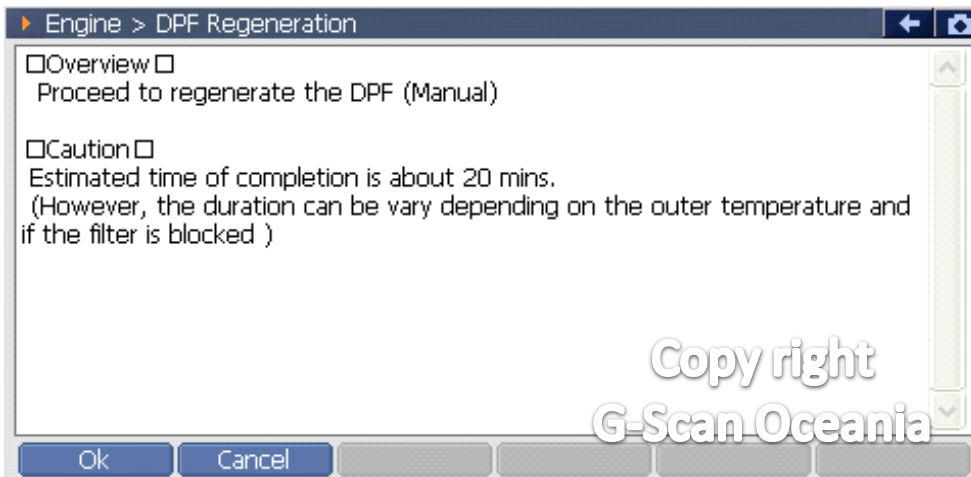


#### 5. Note

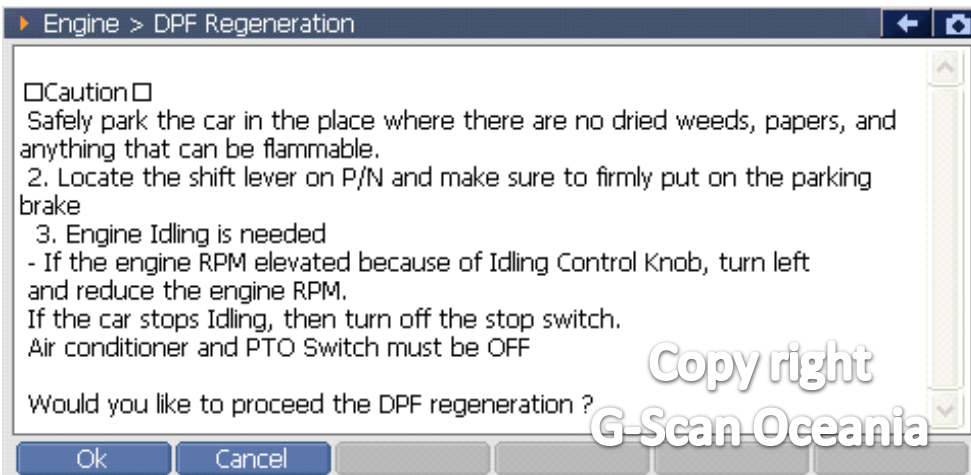

#### 6. Note

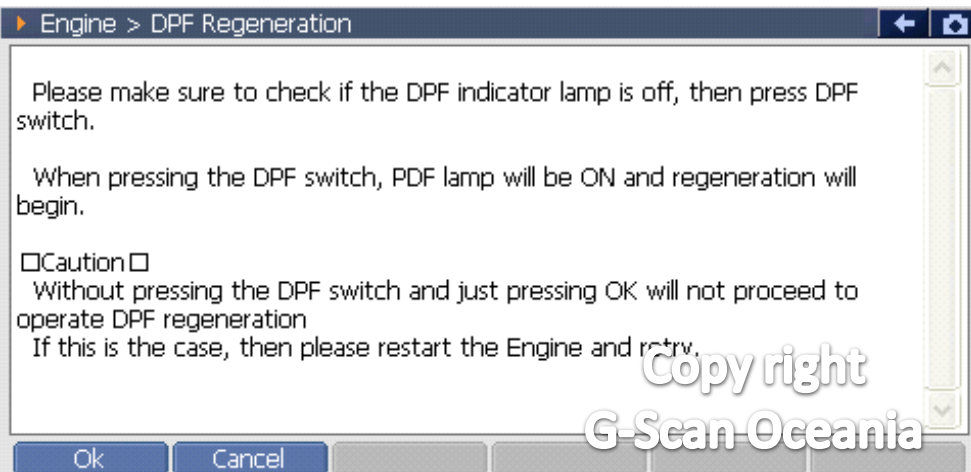

7. DPF in progress.

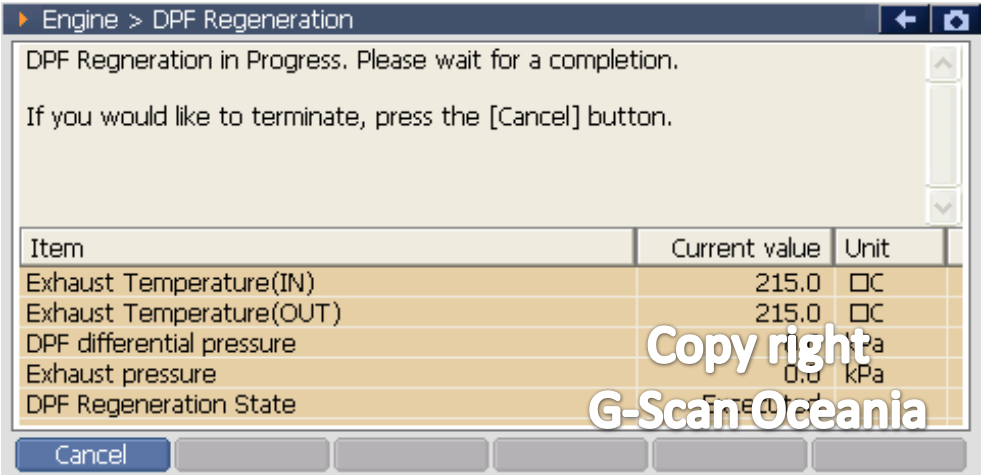

8. Complete.

