




1. Select engine.

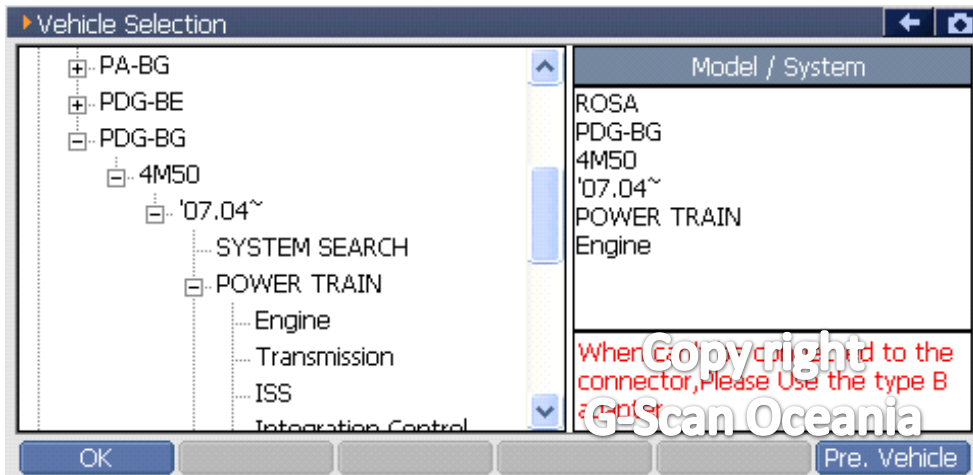


2. Select [Special function]

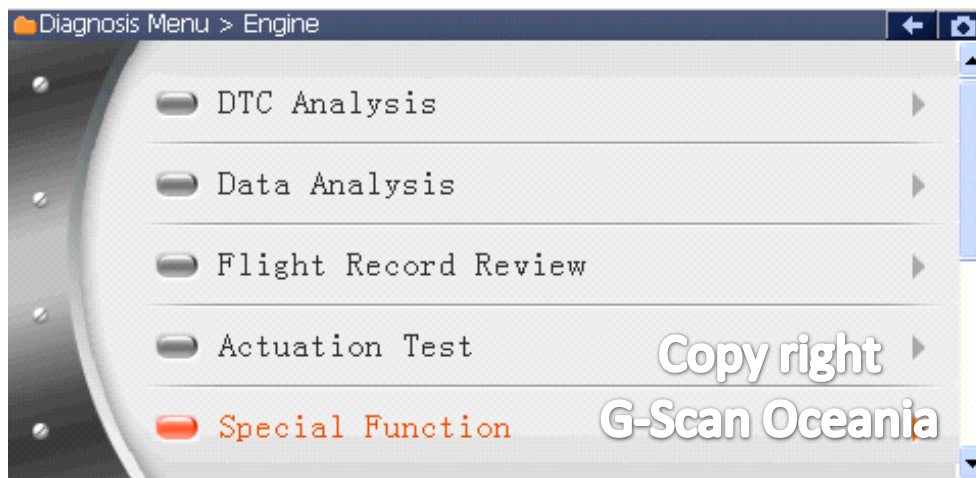

3. Select [DPF Related information reset]

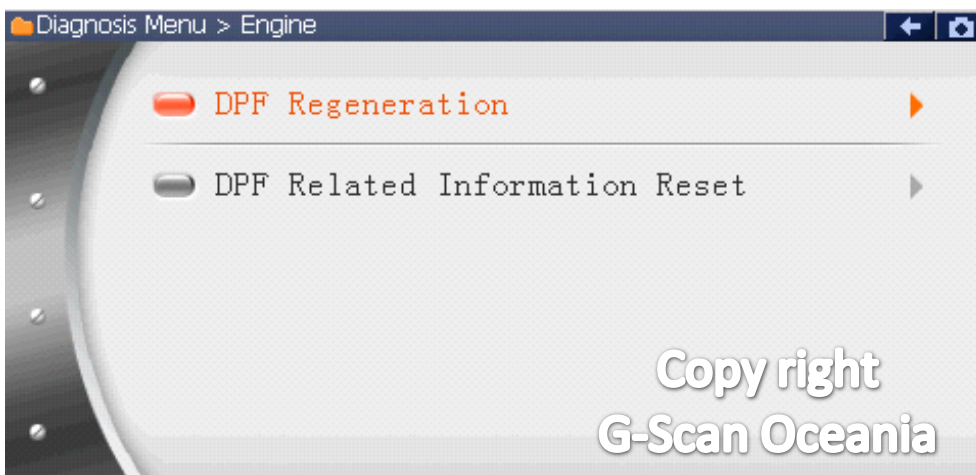

4. Information

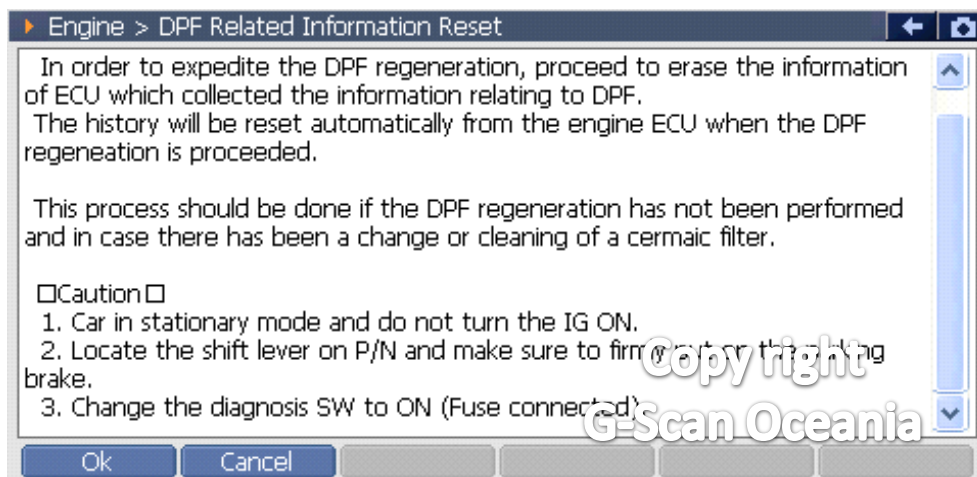

5. Note.



6. Complete.

