




1. Select the General>ALL>16PIN connector>00->EPB

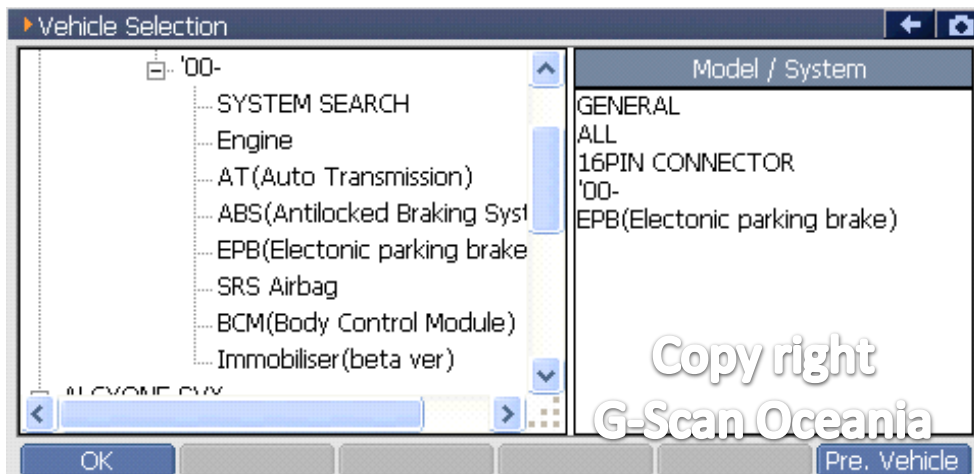

2. Select the Special function

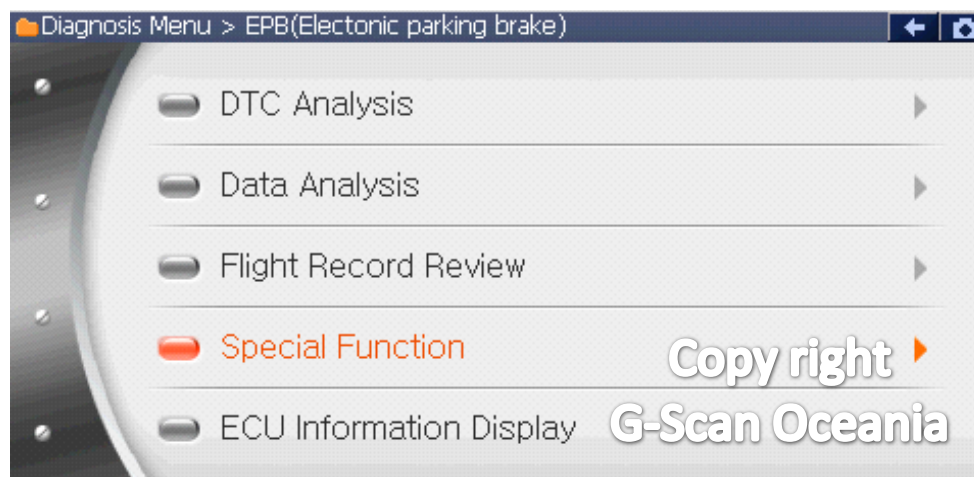

3. Select the Clutch engagement position setting

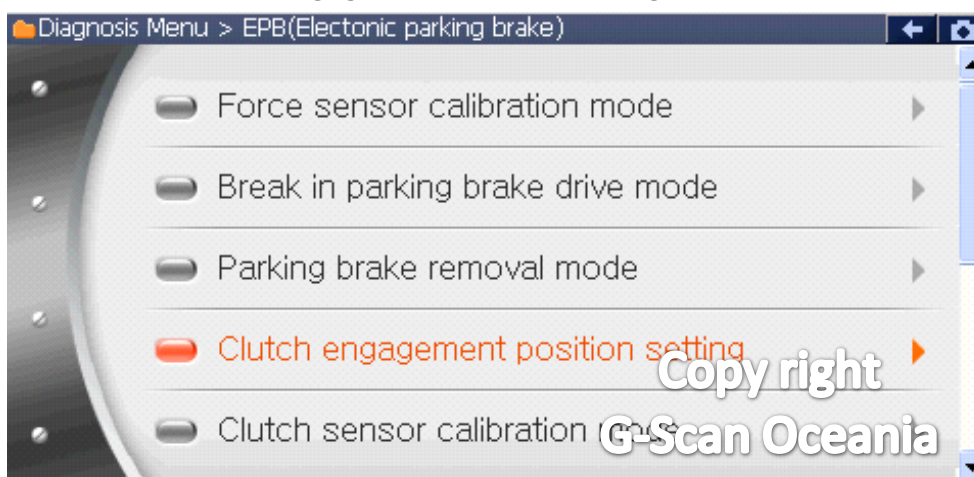

4. Notice




** After this step, the G-scan will show the current setting value and the current value.

5. Confirm the change



6. Input value

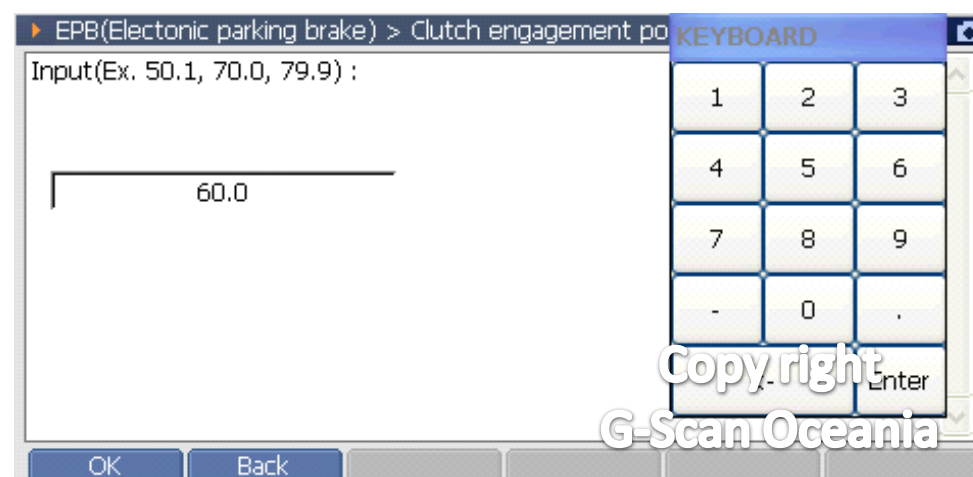

** The input value must be entered in the correct format like this XX.X.