



1. Selecte the General>ALL>16PIN connector>00->EPB

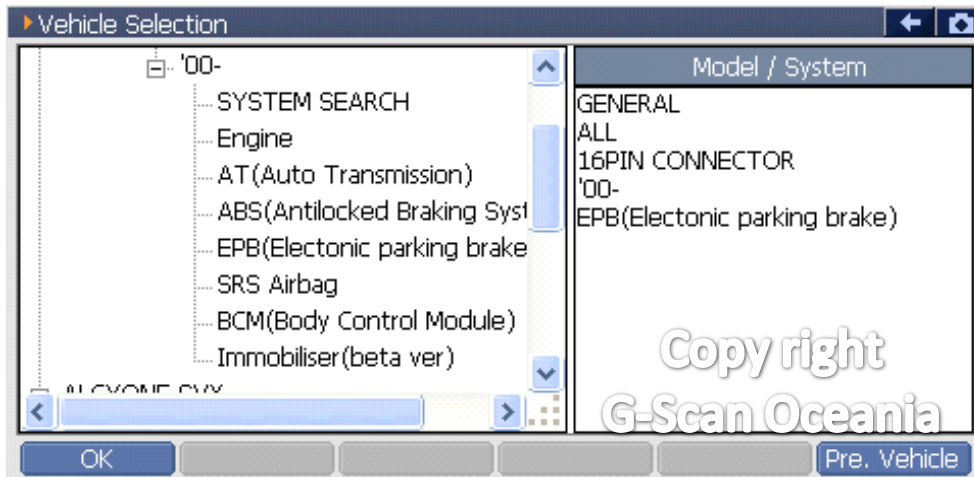


2. Select the Special function

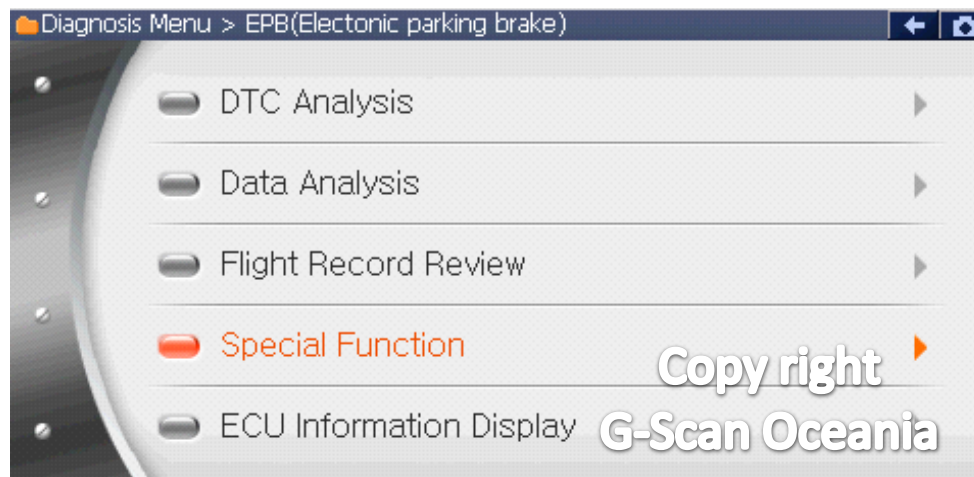

3. Select the Clutch sensor calibration mode



4. Notice

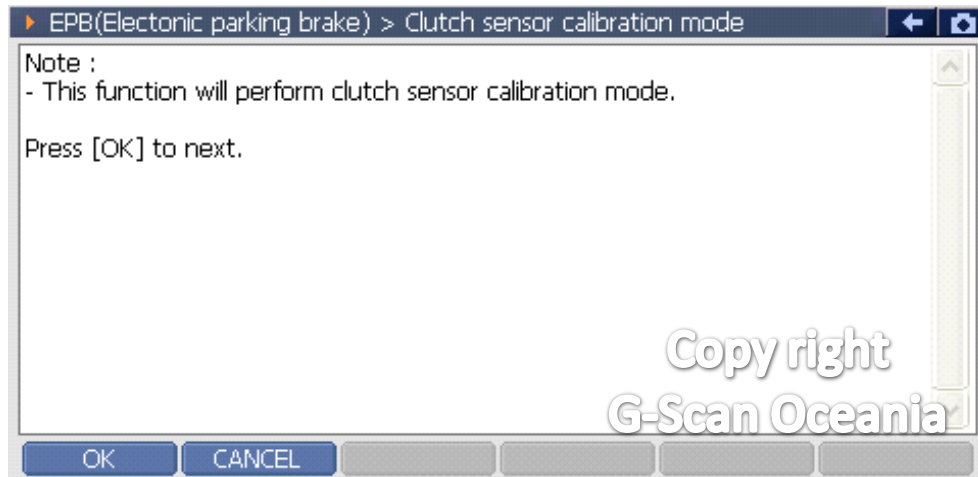

** G-scan will perform the calibration. Please follow the sequence.