



**** After this function, must do [Shift actuator bleed] function!!**


1. Select [ASM] system

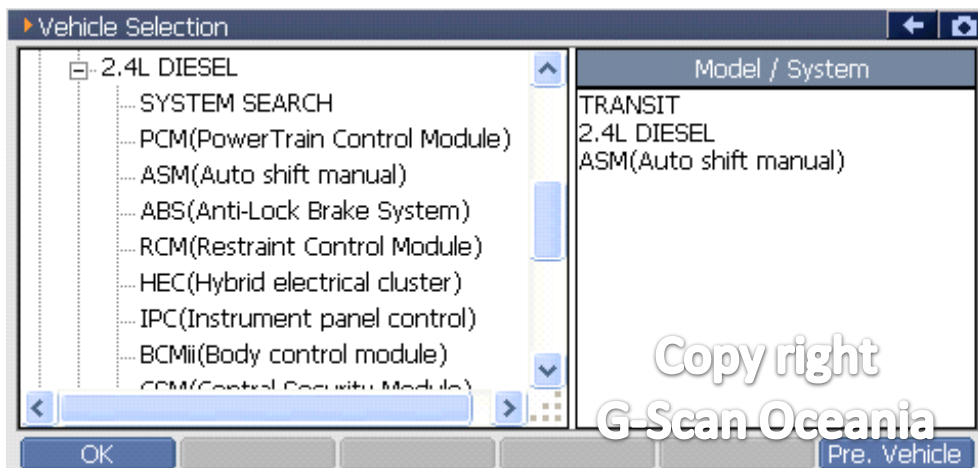


2. Select [Special function]

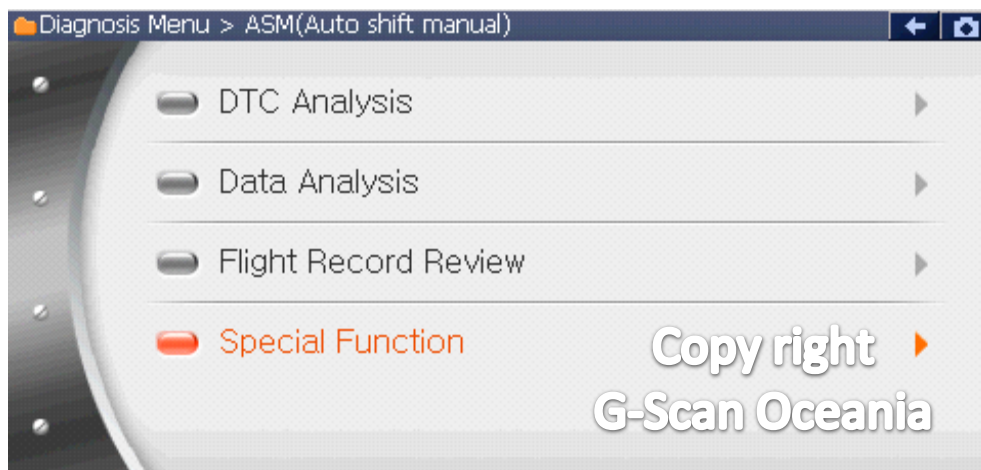


3. Select [Depressurize ASM system]

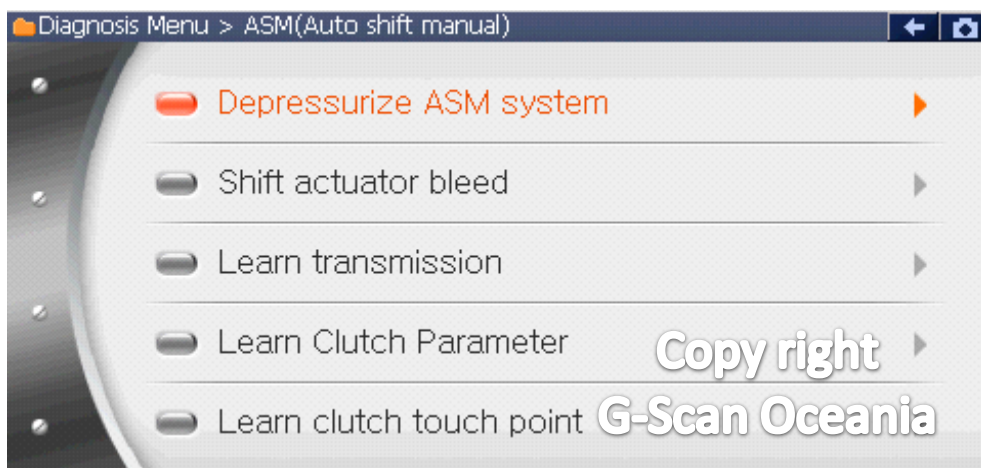


4. Preconditions

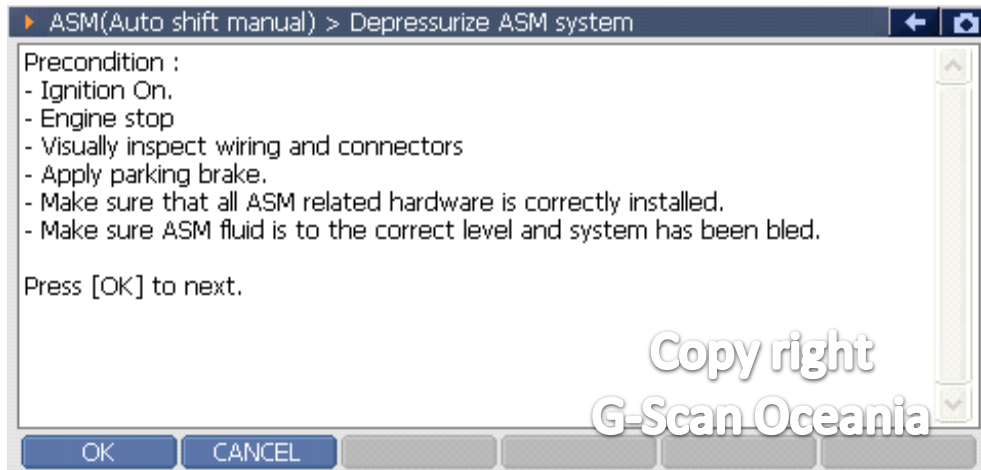

5. Select [N] gear.

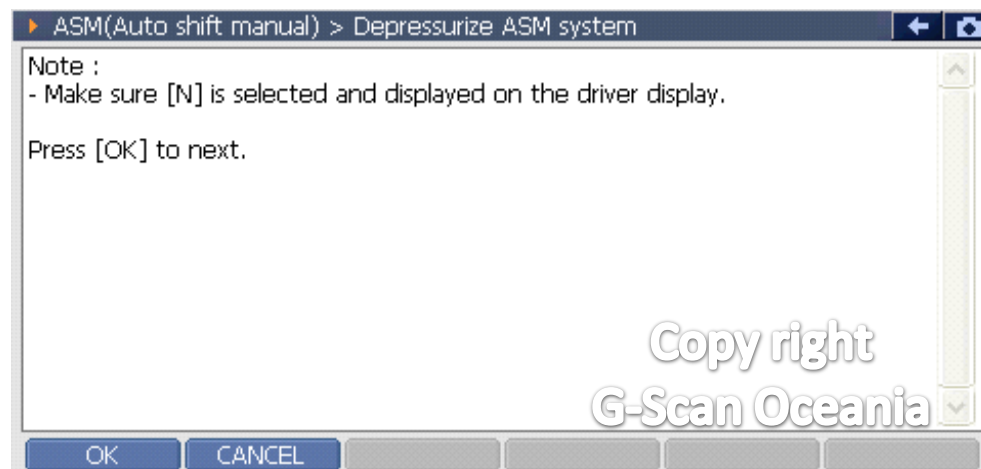


6. Starting depressurize.

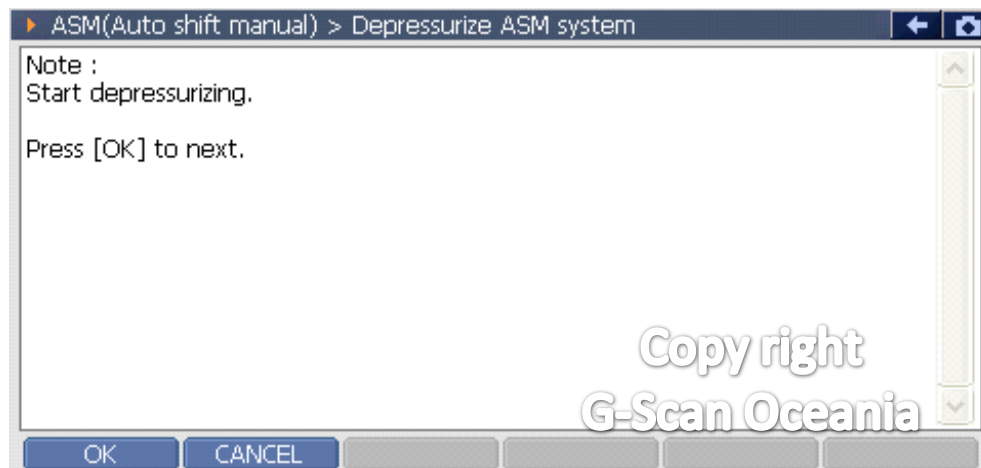


**** This procedure will take some mins.**

7. Notice

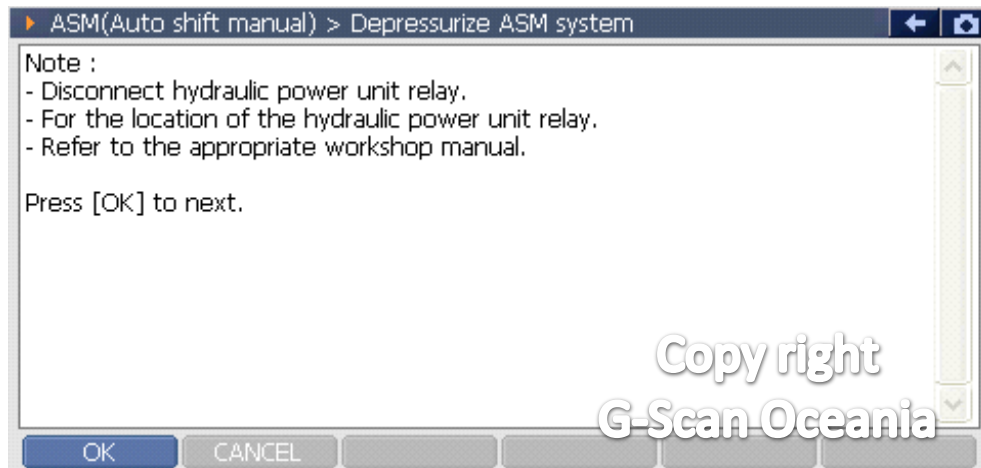

8. Notice

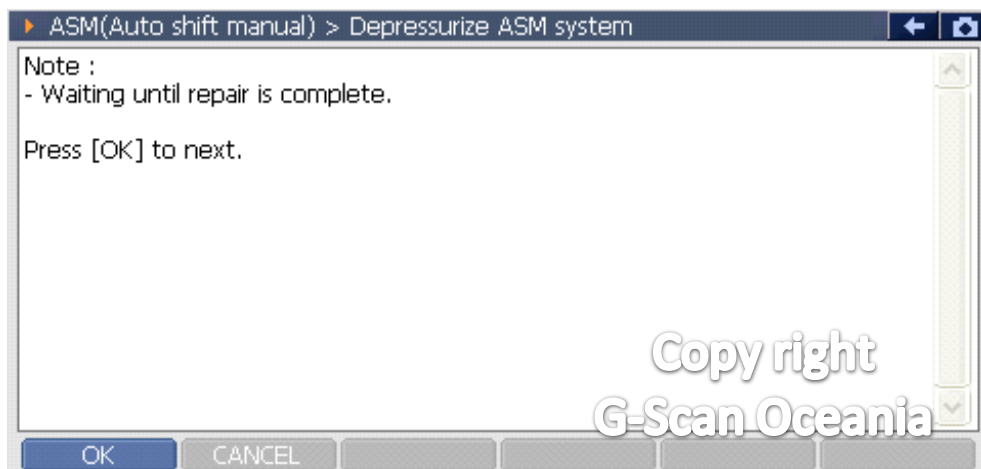

9. Notice

