



1. Select [ASM] system

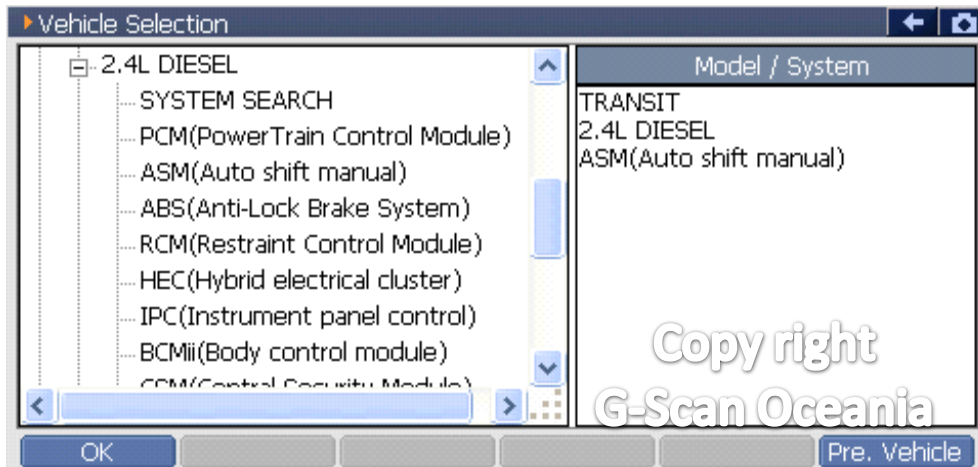


2. Select [Special function]



3. Select [Learn transmission]

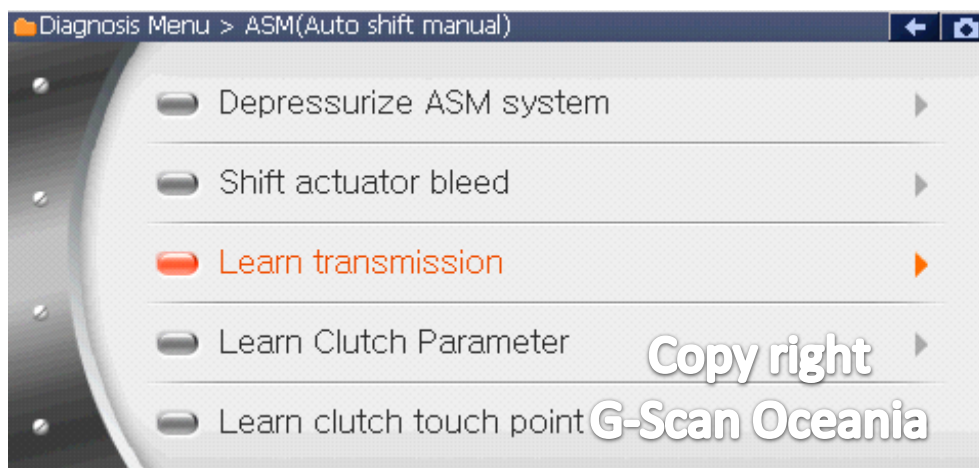

4. Preconditions

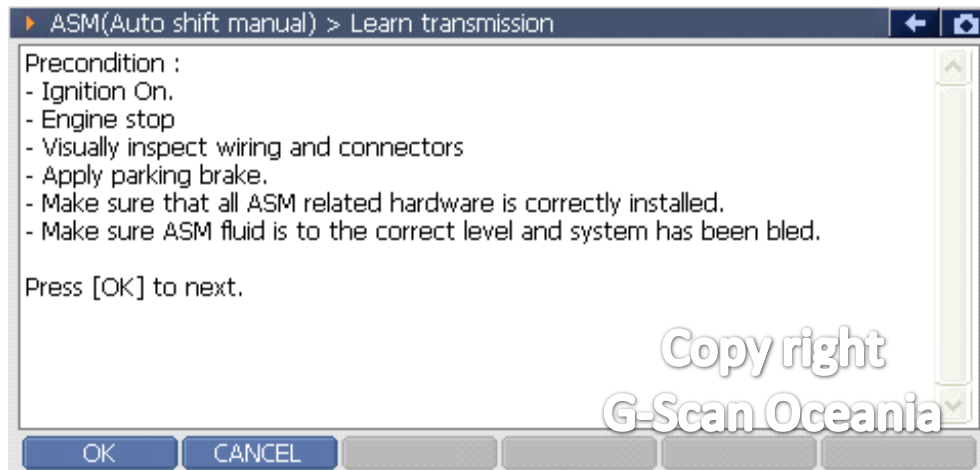

5. Select [N] gear.

