



** Before do this function, please confirm the to need and equipped.

** Please check the fuel gauge must over the half.


1. Select [PCM] system

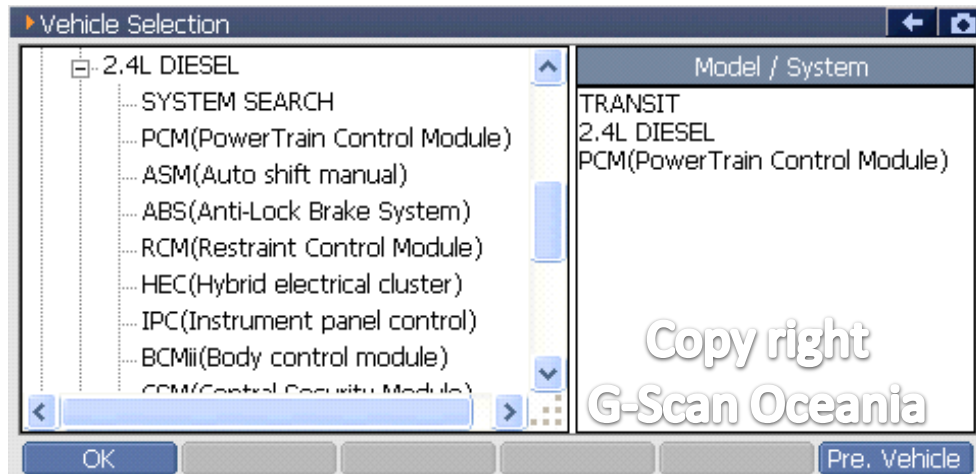


2. Select [Special function]

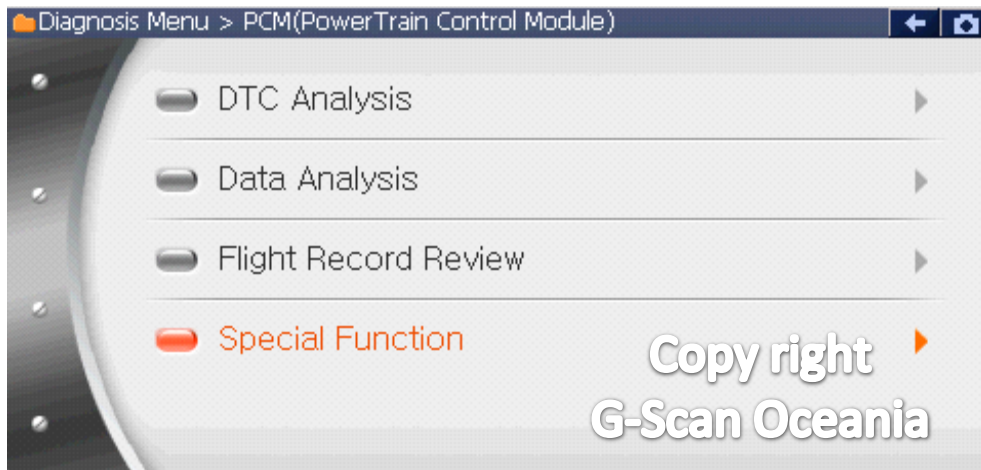


3. Select [DPF regeneration]

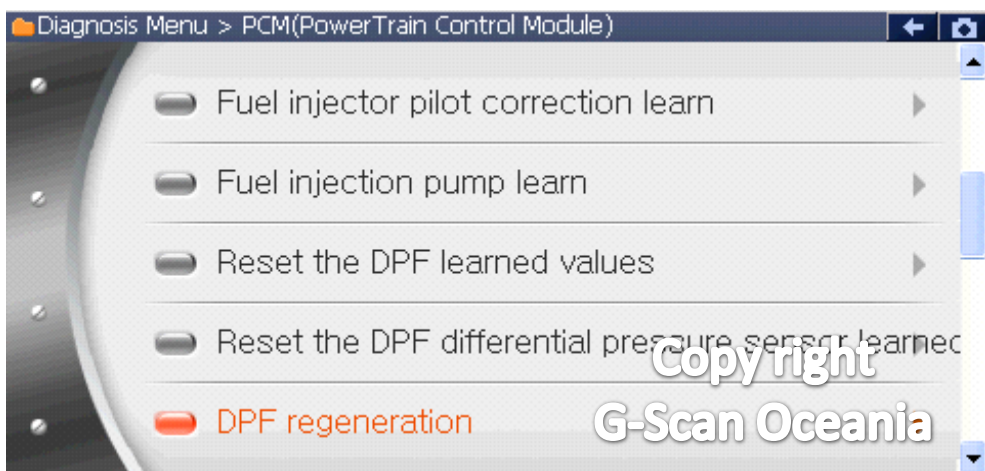


4. Notice

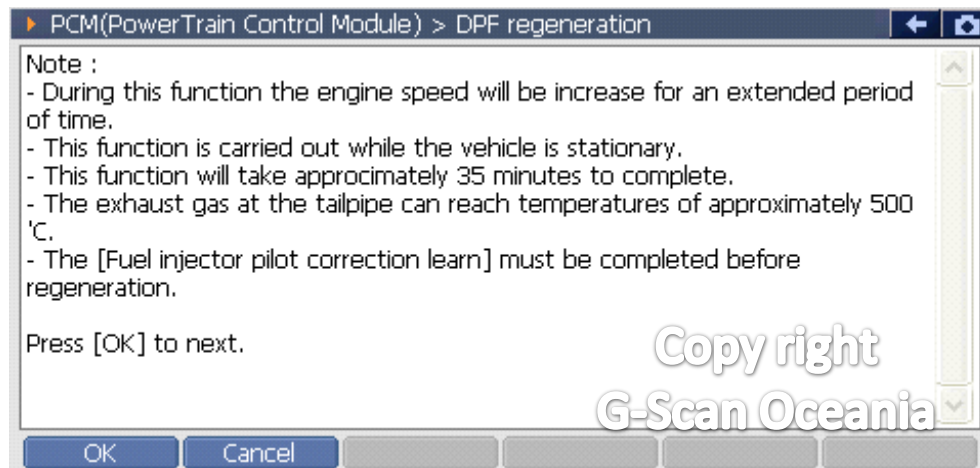

5. Notice

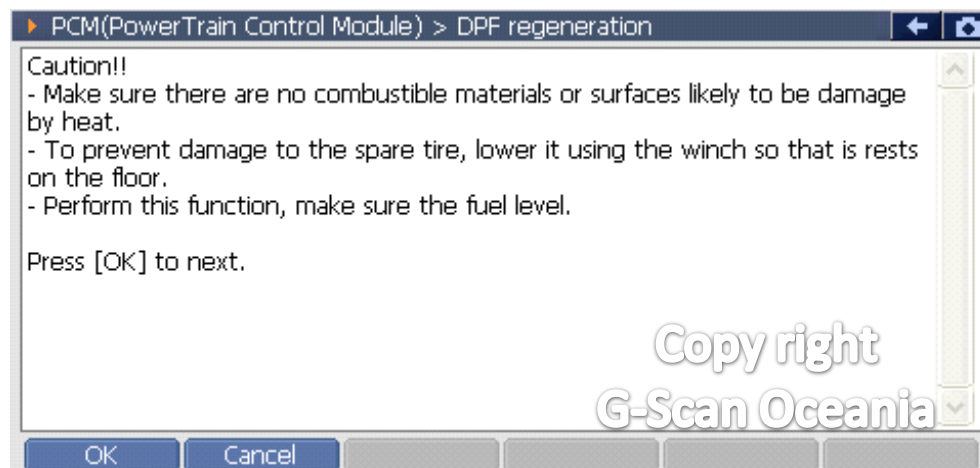


6. Notice

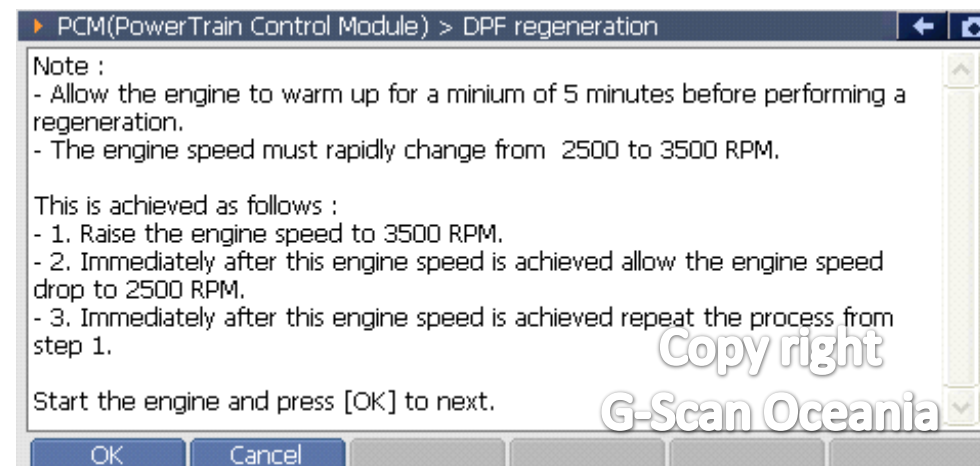

** G-scan will show the precondition factor. Please check that sensor values

7. Notice

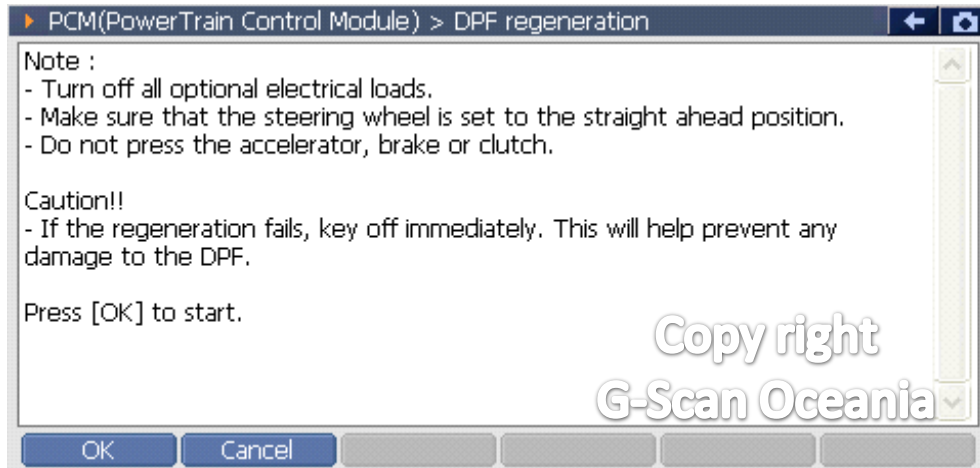

**** This function take maximum 90 Mins.**

8. Turn ignition off



9. Turn ignition on

