




1. Select [PCM] system

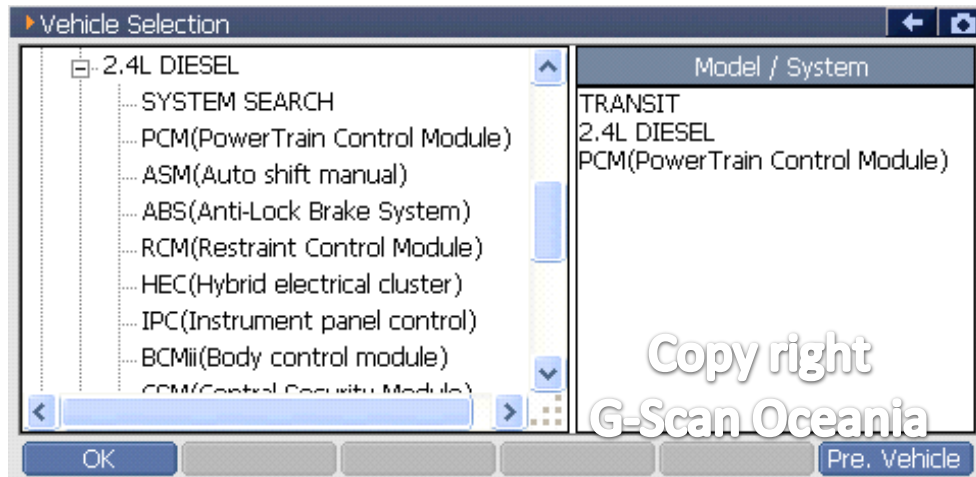

2. Select [Special function]

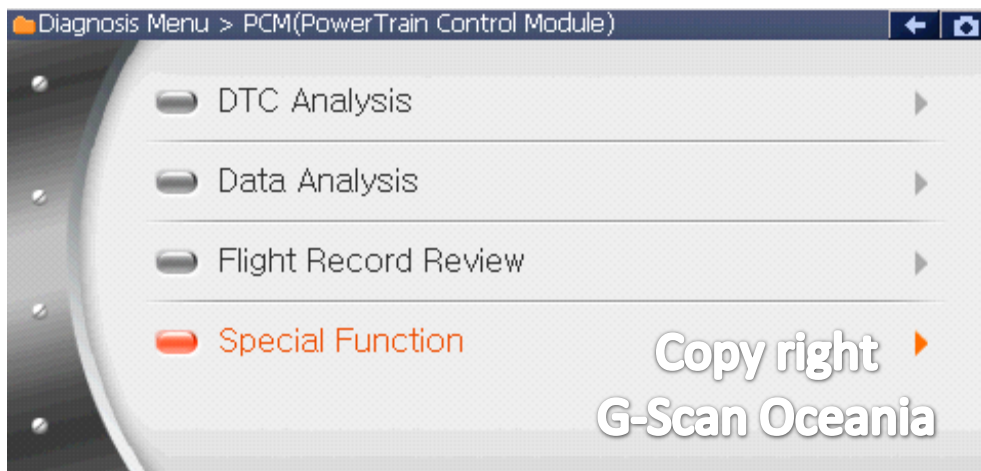

3. Select [Reset the exhaust gas temperature value]

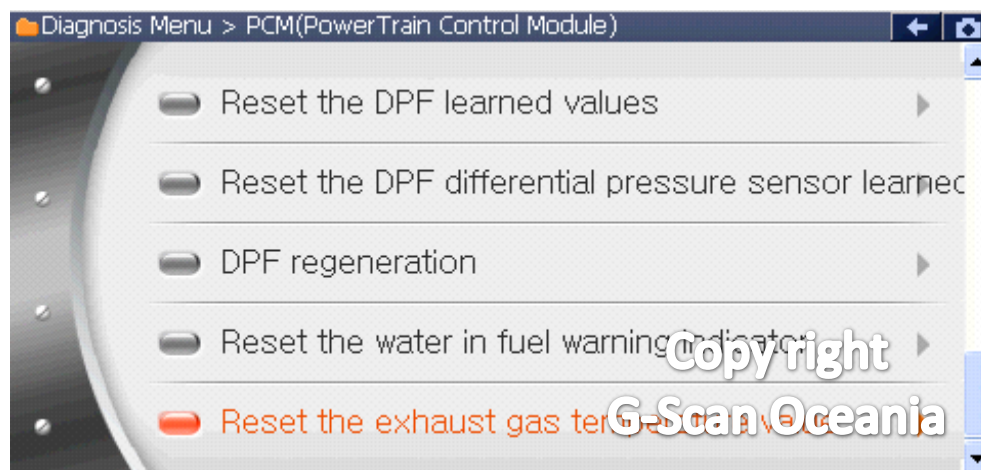

4. Notice

