




1. Select [PCM] system

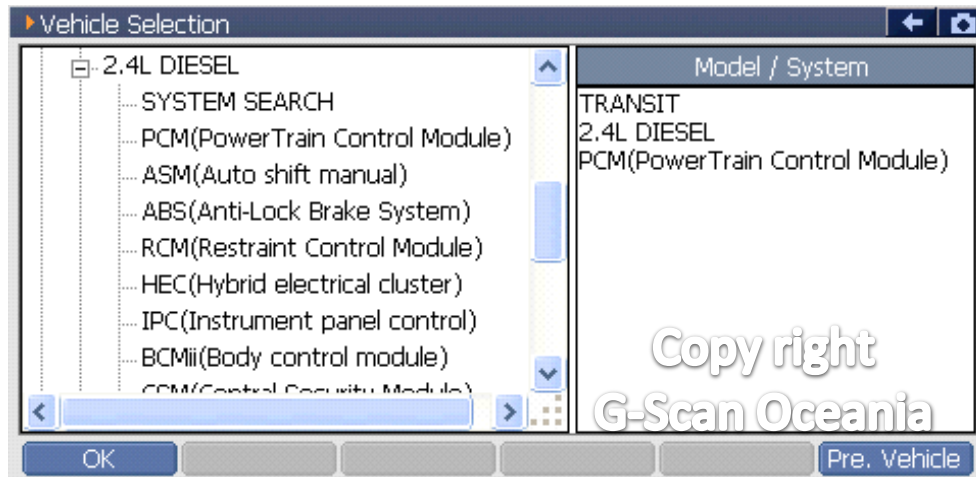


2. Select [Special function]

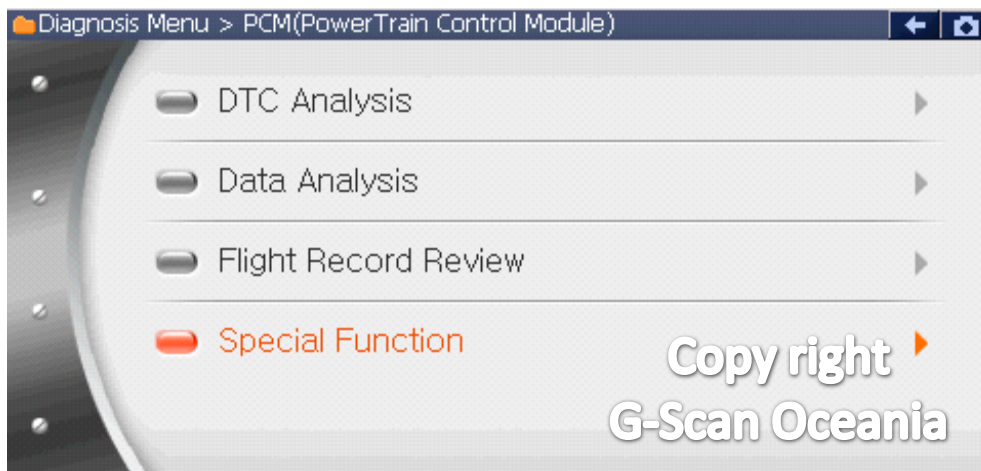


3. Select [Fuel injector correction factors]

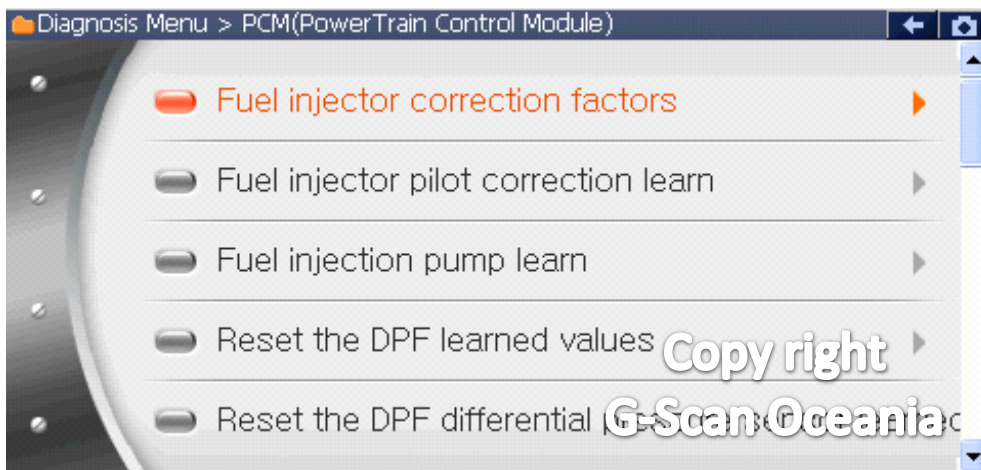

4. Notice

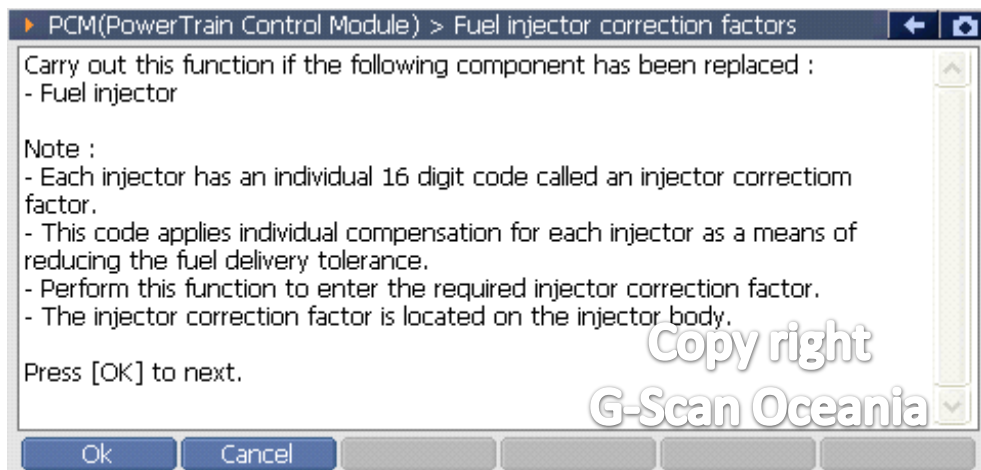


5. Showing current programmed injector code.

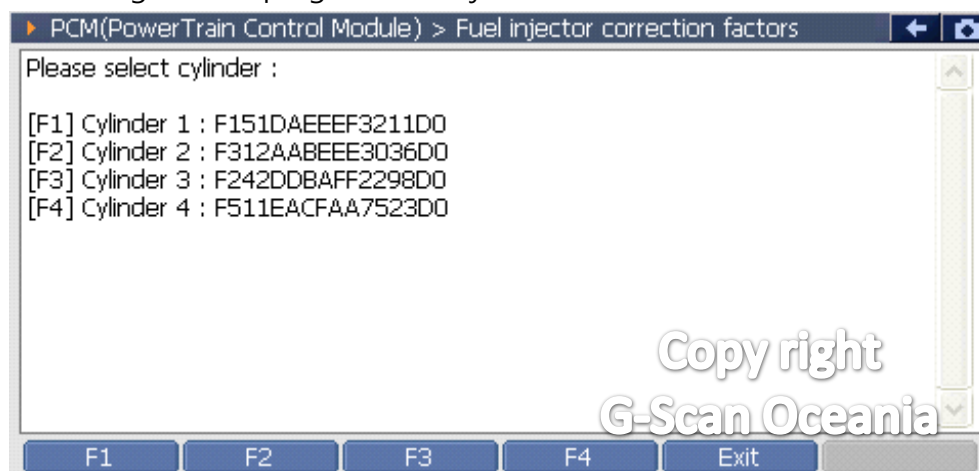


**** Select the injector number and put in the correct injector code.**


6. Confirm the injector code

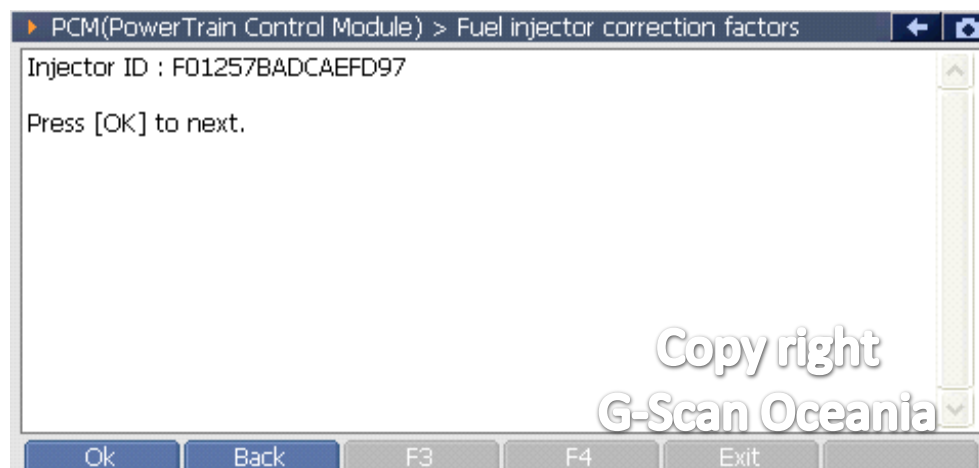


7. Turn ignition off

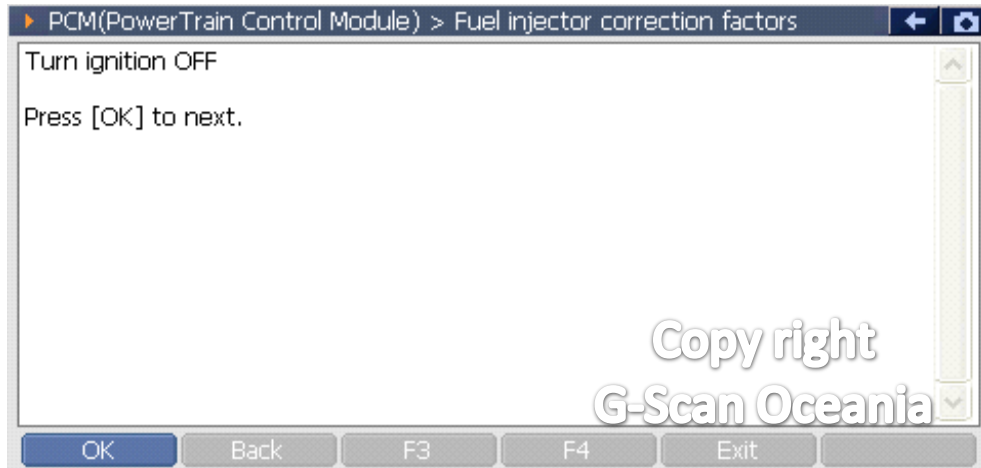

8. Turn ignition on

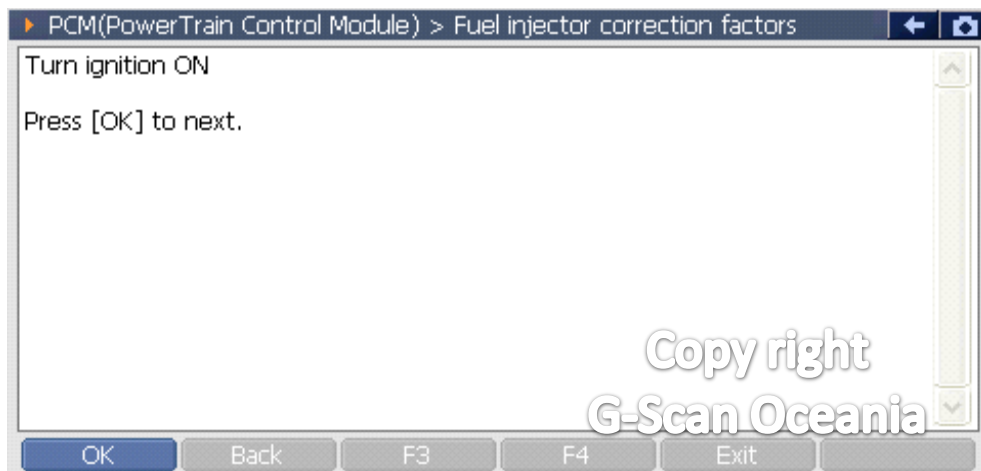

9. Success message.

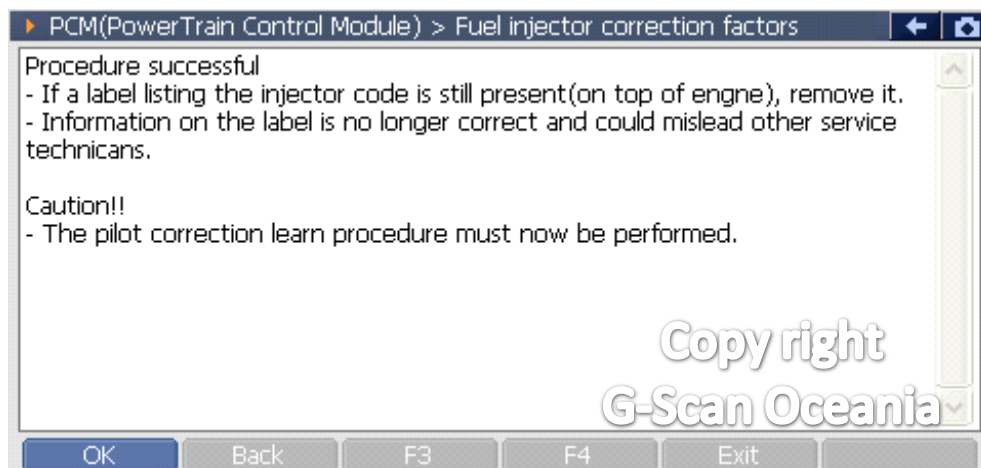

**** After this function, must do [Fuel injector pilot correction learn]**