


**** IG on and Engine stop for the diagnostic ABS system.**


1. Select [ABS] system

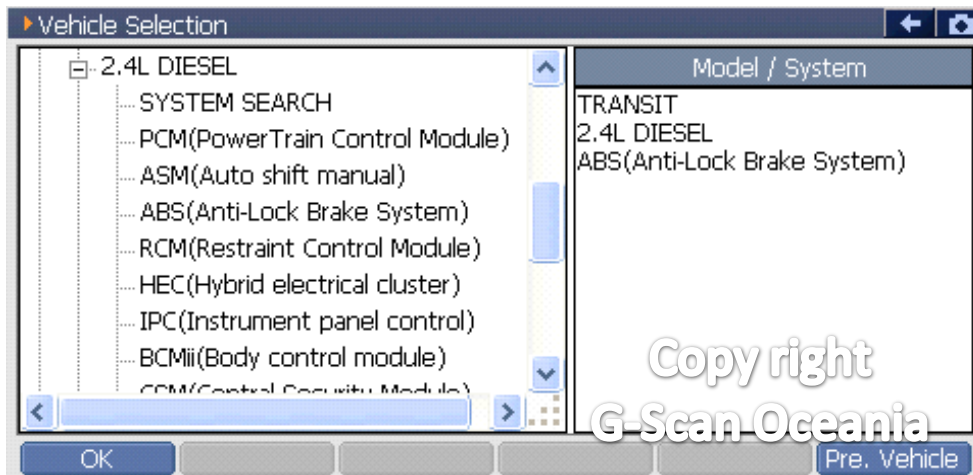

2. Select [Special function]



3. Select [Calibration longitudinal acceleration sensor]

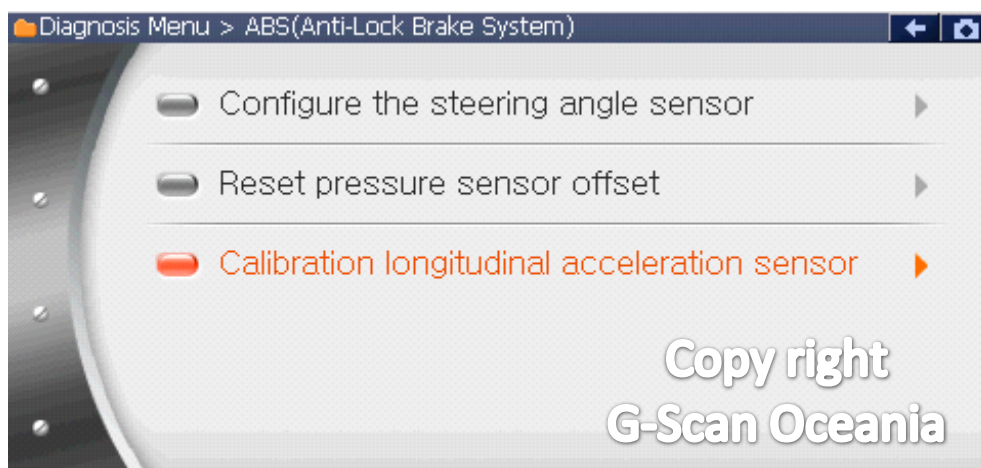

4. Notice

