



**** Before do this function, please confirm the to need and equipped.**


1. Select [PCM] system

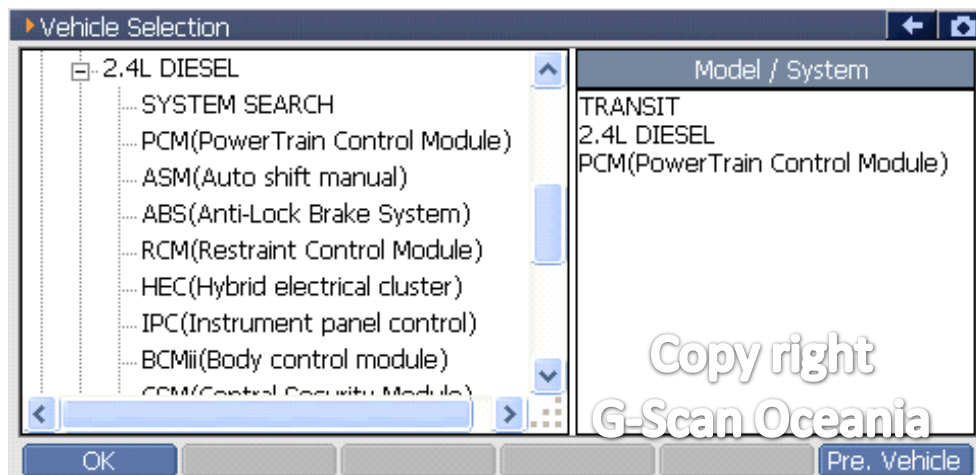

2. Select [Special function]

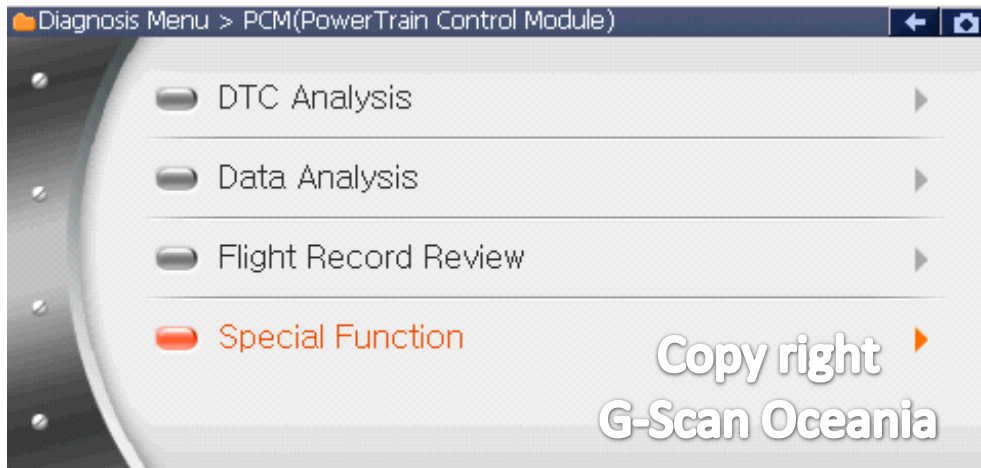

3. Select [Reset differntial pressure sensor leanred values]

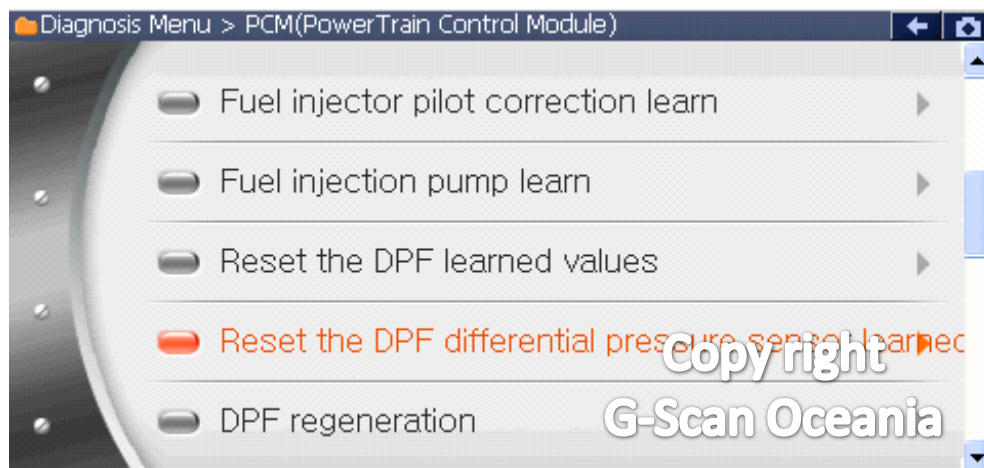

4. Notice

