

- ** Before replacing the module, you must know the vehicle's security number (4 Digit)!!
- ** If you want to replace the ECM, you must first confirm that it is configured with exactly the same options. (e.g. AT/MT type, EBCM type...)

A. Immobilizer (VTM) replace.

- 1. Reset engine control**
- 2. Replace Immobilizer unit(VTM).**
- 3. Program immobilizer function(In engine system)**
- 4. Program the keys.(In immobilizer(VTM) system)**
 - ** Must have at least 2 keys!!
- 5. Engine start**
- 6. Engine stop and ignition on**
- 7. Erase DTCs in immobilizer and ECM**

B. Engine control unit replacement

- 1. Replace ECM**
- 2. Program immobilizer function(In engine system)**
- 3. Engine start**
- 4. Engine stop and ignition on**
- 5. Erase DTCs in immobilizer and ECM**

Copy right
G-Scan Oceania