



1. Select correct system

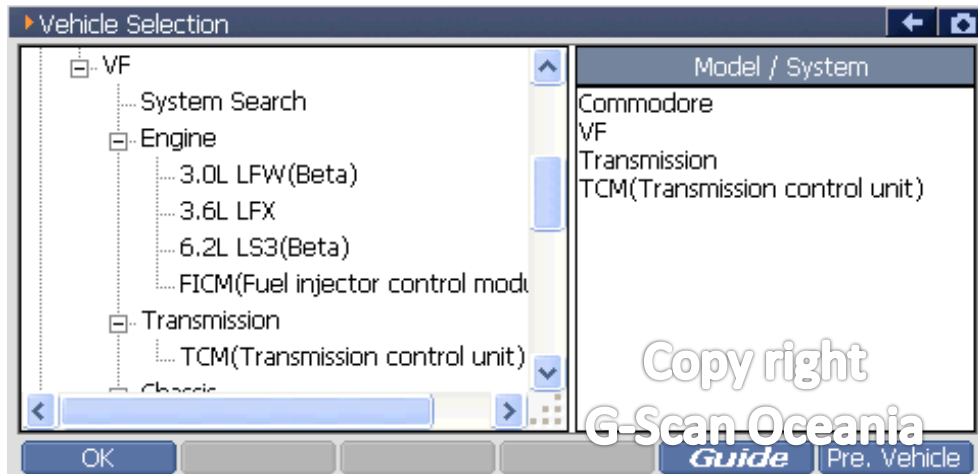


2. Select [Special function].

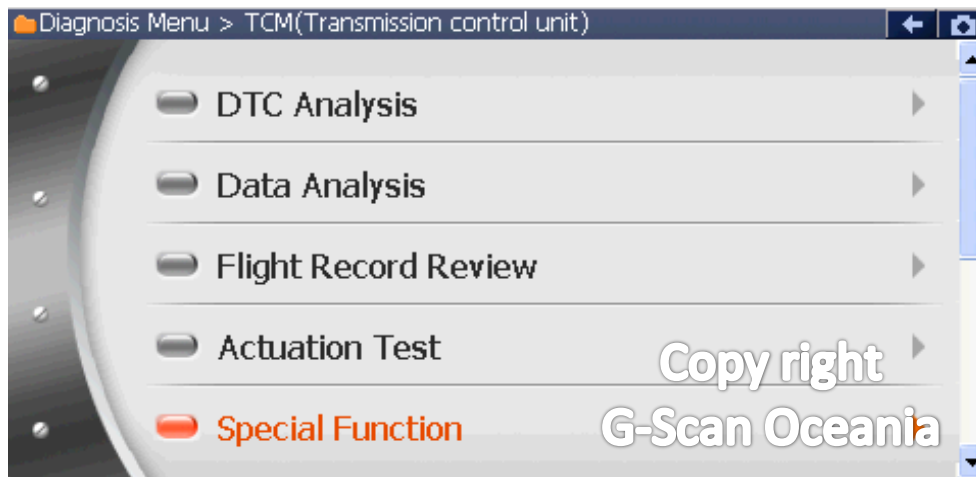

3. Select [Transmission adaptive pressure reset].



4. Note.

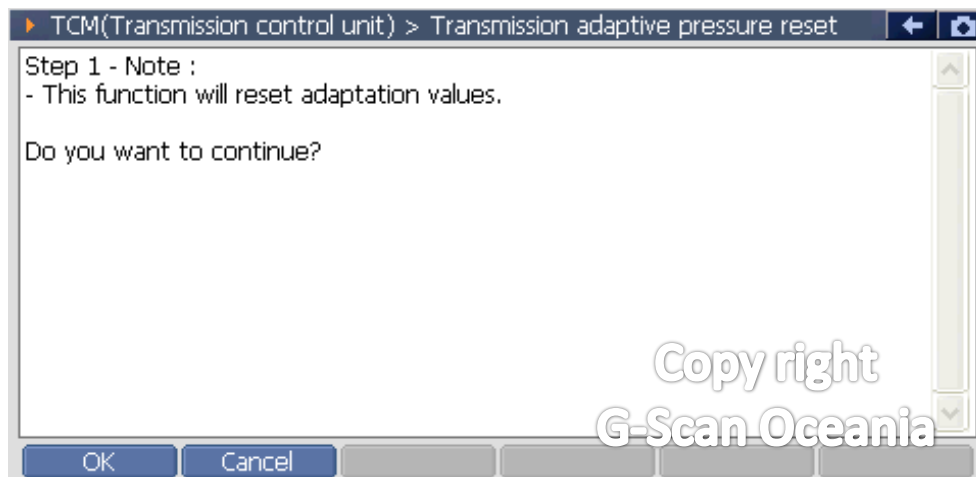

5. Complete.

