




1. Select correct system

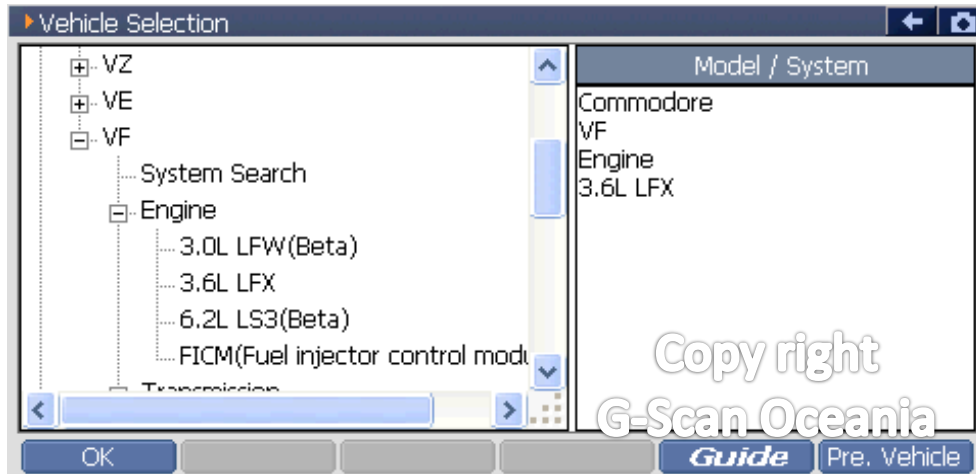


2. Select [Special function].

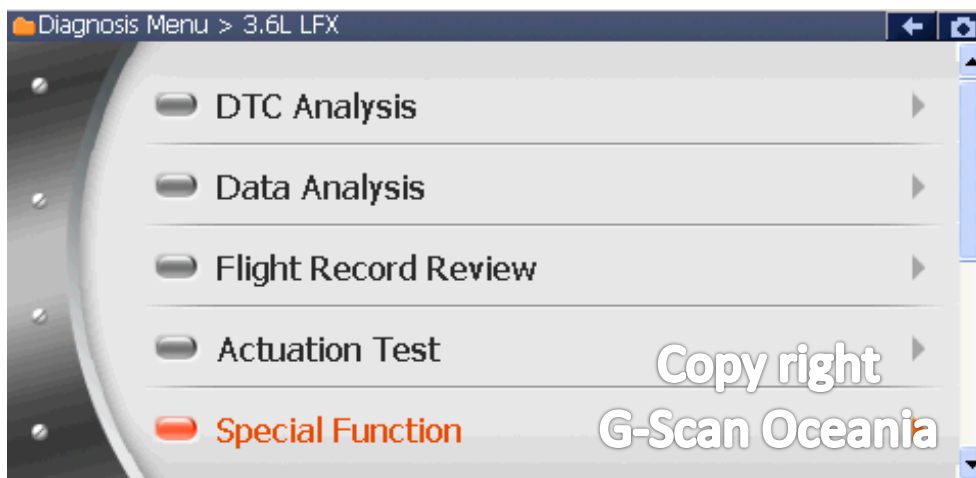

3. Select [Brake pedal position sensor learn].

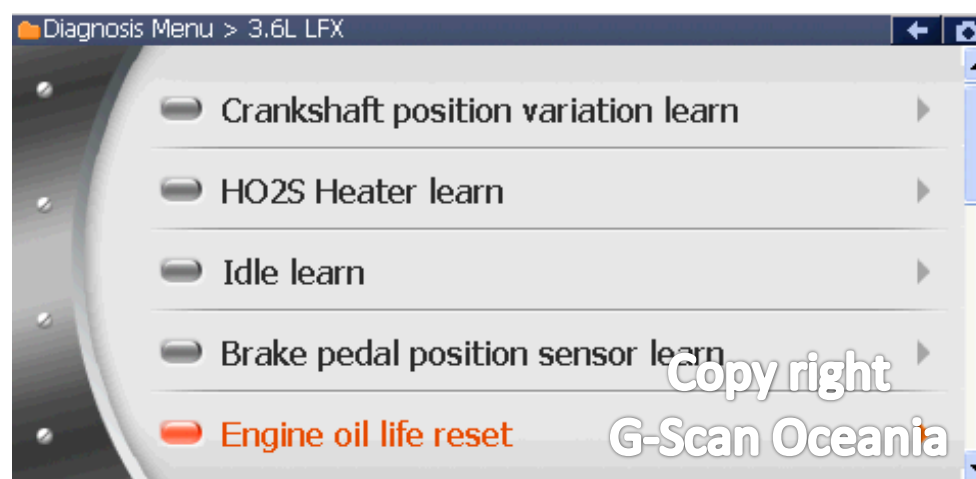

4. Note.

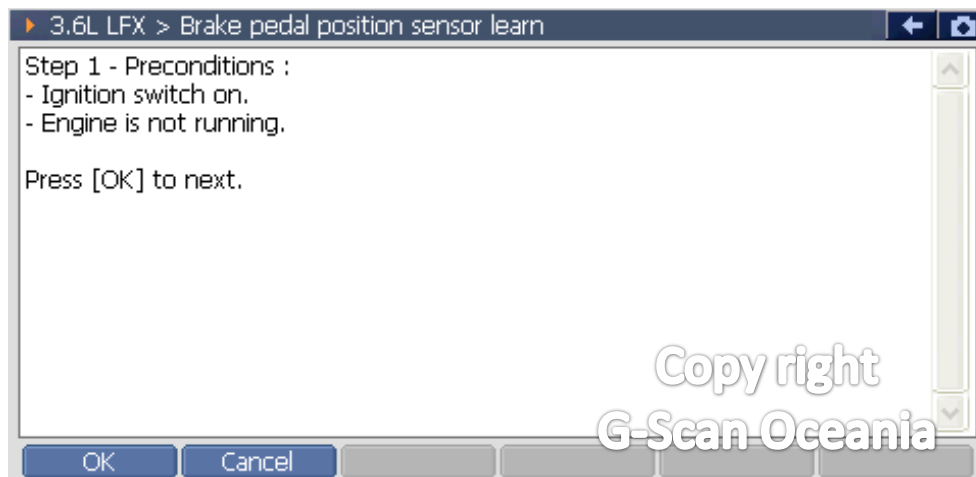

5. Complete.

