


1. Select correct system

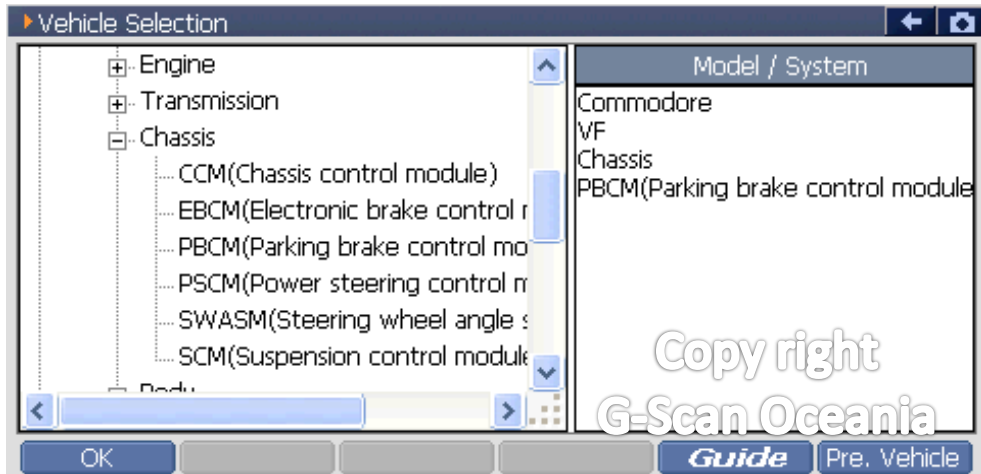


2. Select [Special function].



3. Select [Park brake calibration].



4. Note.

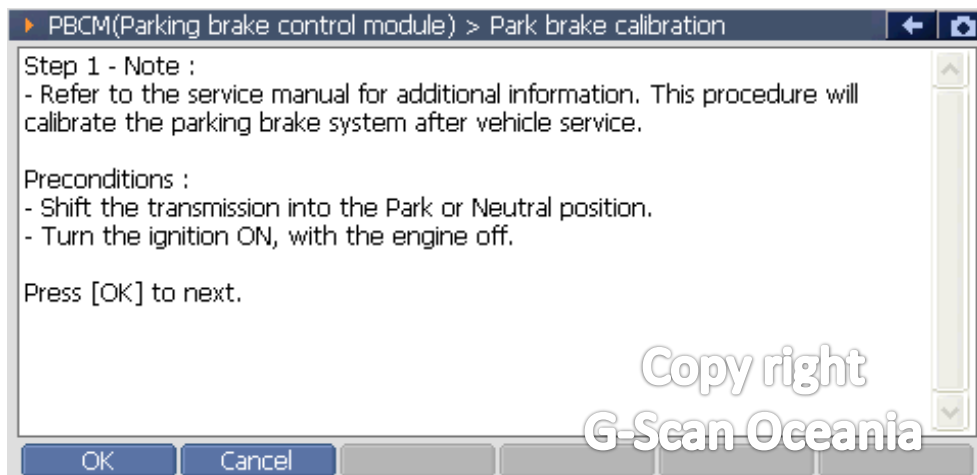

5. Complete.

