



**** Caution!! This function will erase every programmed keys.**

1. Select the Body > Immobilizer


2. Select the [Special function]

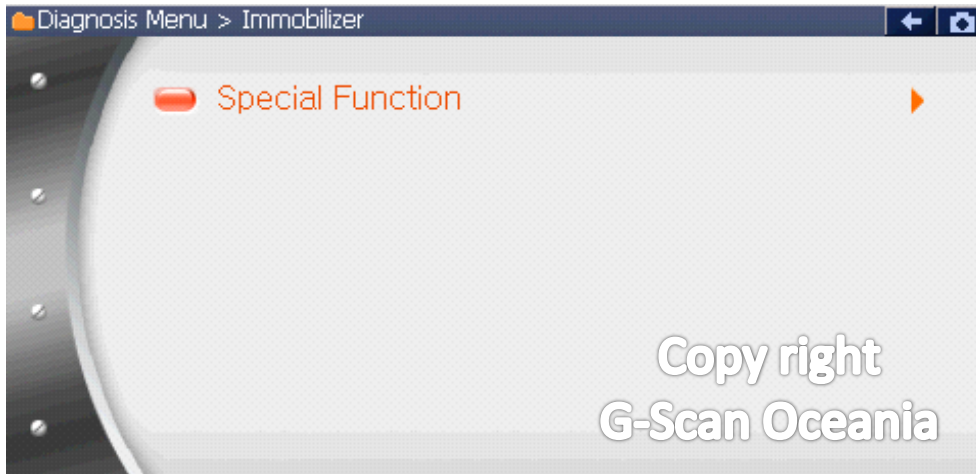

3. Select the [Key programming]

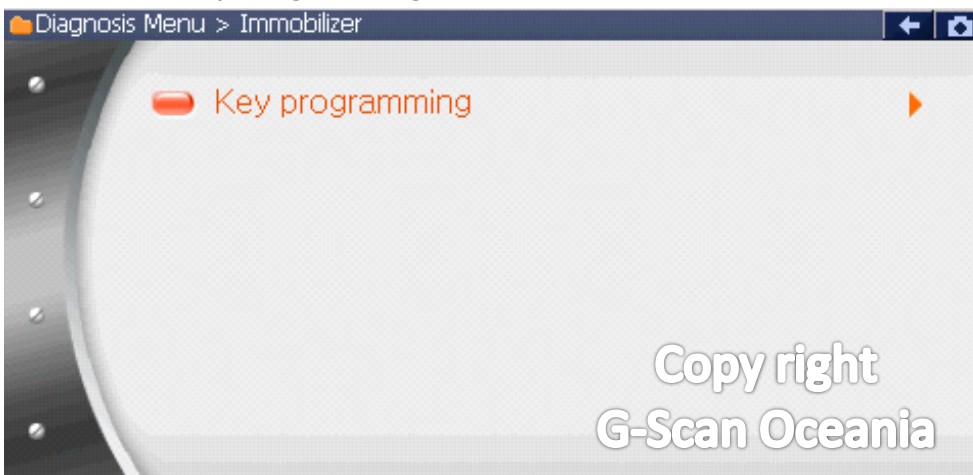


4. Notice.

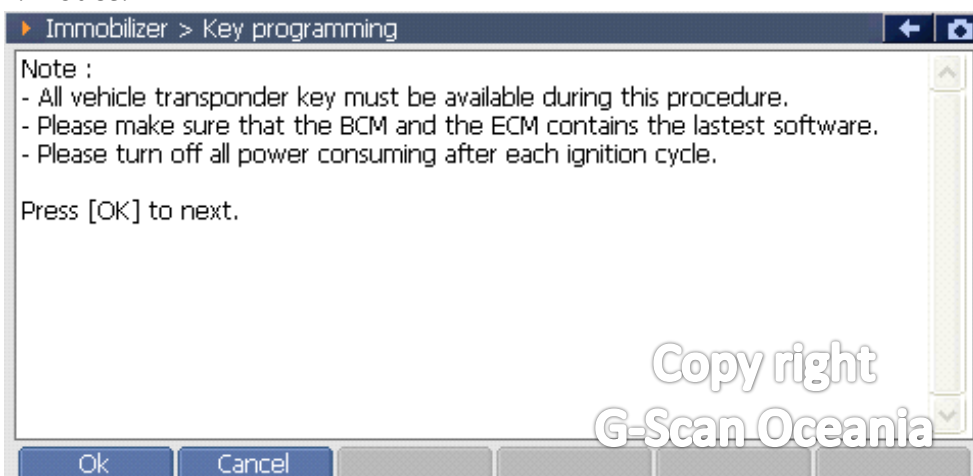


**** After this step, G-scan will show [PIN] enter screen.**

**** If you want to program keys, need a correct 4 digit PIN number.**


7. Notice

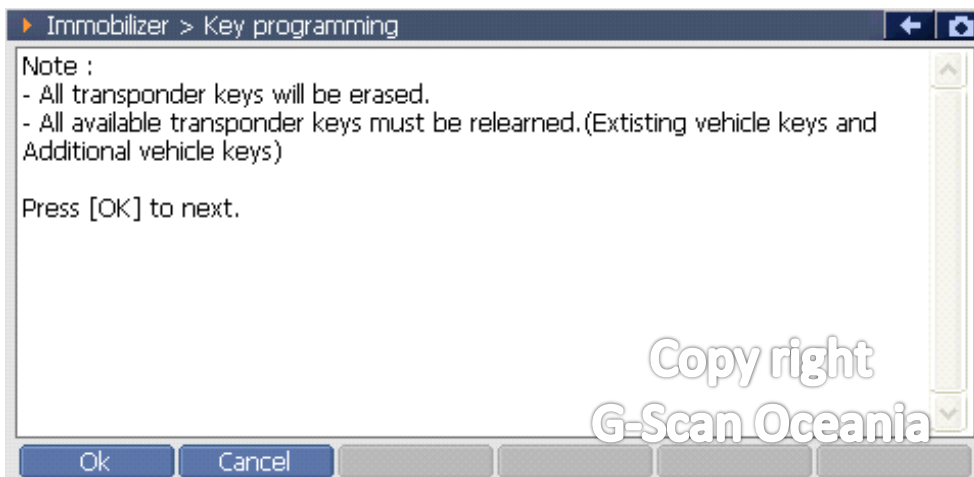


8. Notice

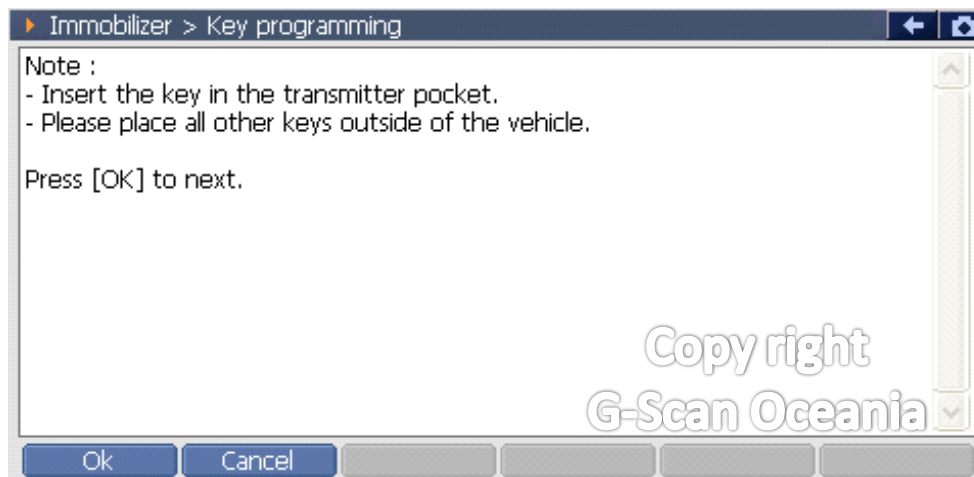


9. Press button.

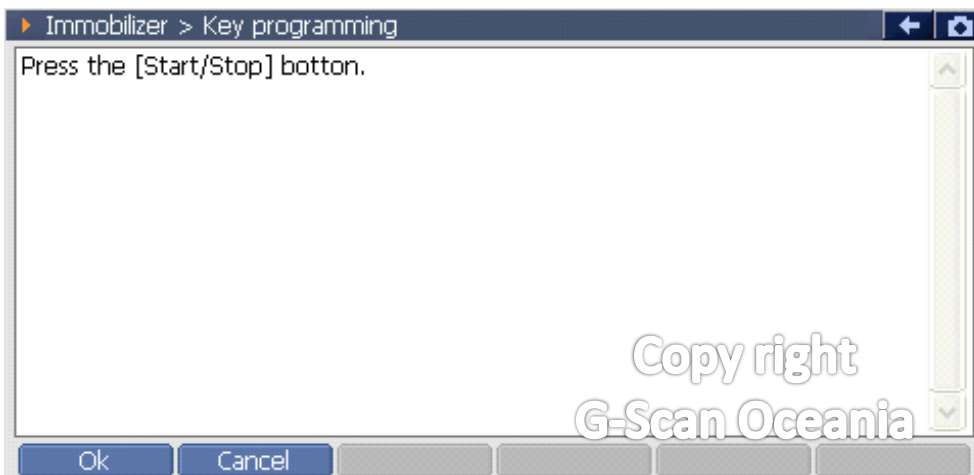

10. Deleted all keys.

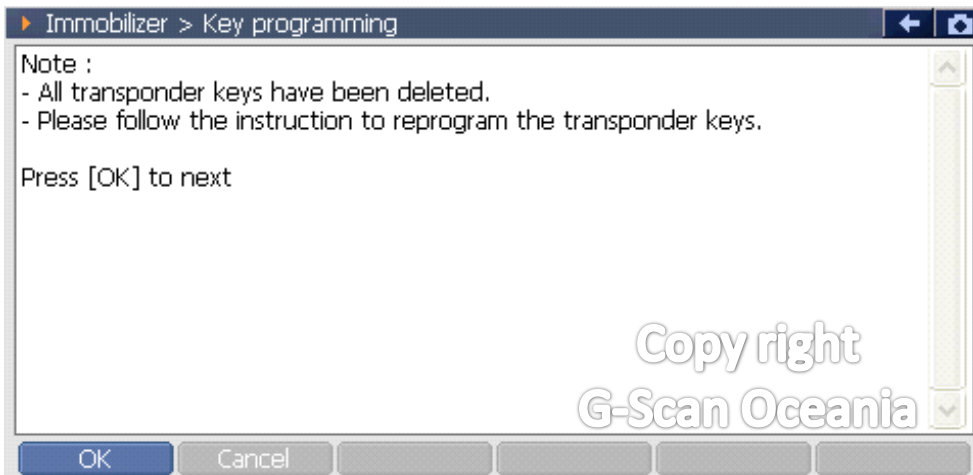


11. Insert key.

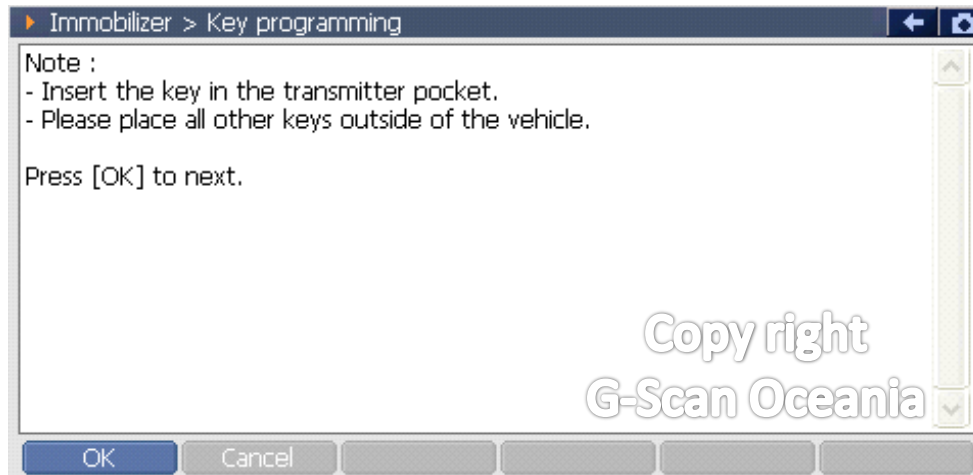


** The transmitter pocket is in console box.


12. Complete.

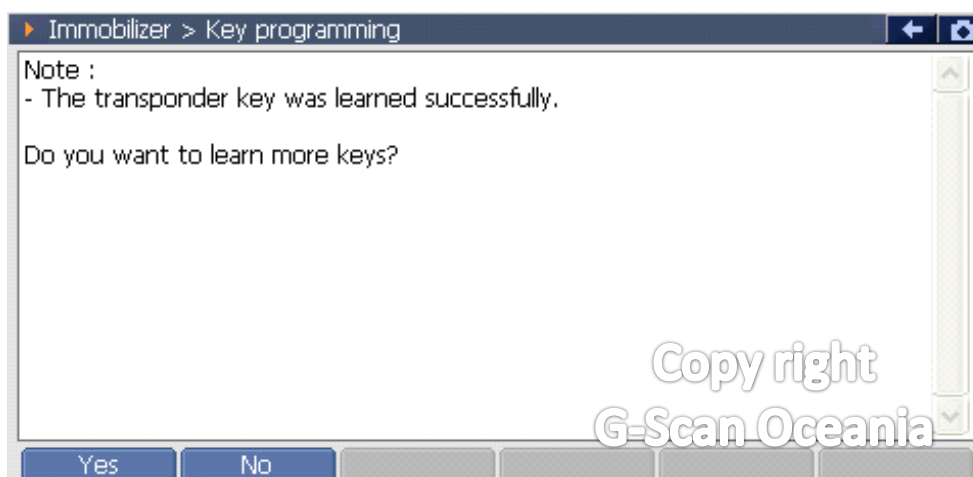

13. Notice

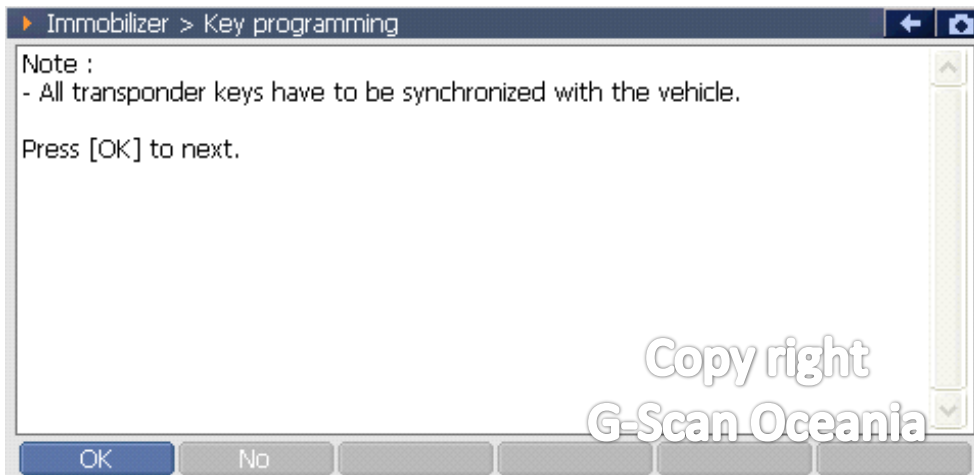

14. Notice

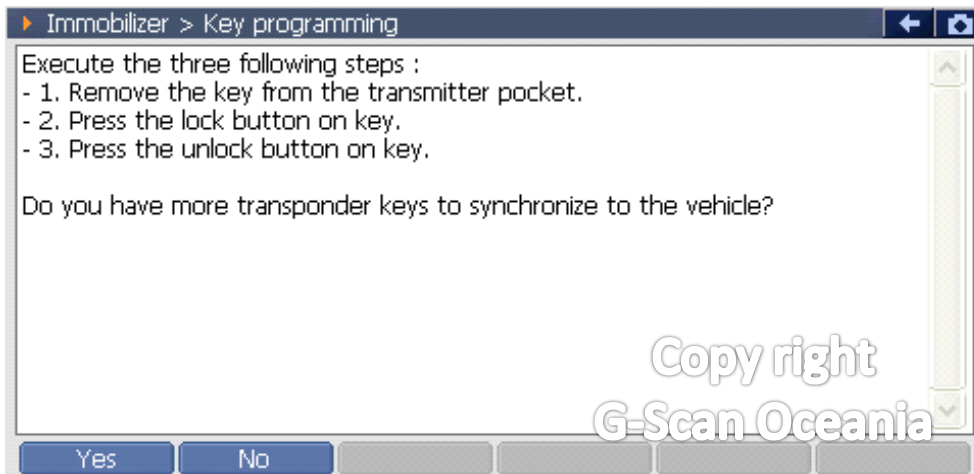

15. All procedure complete.

