




1. Select PATS

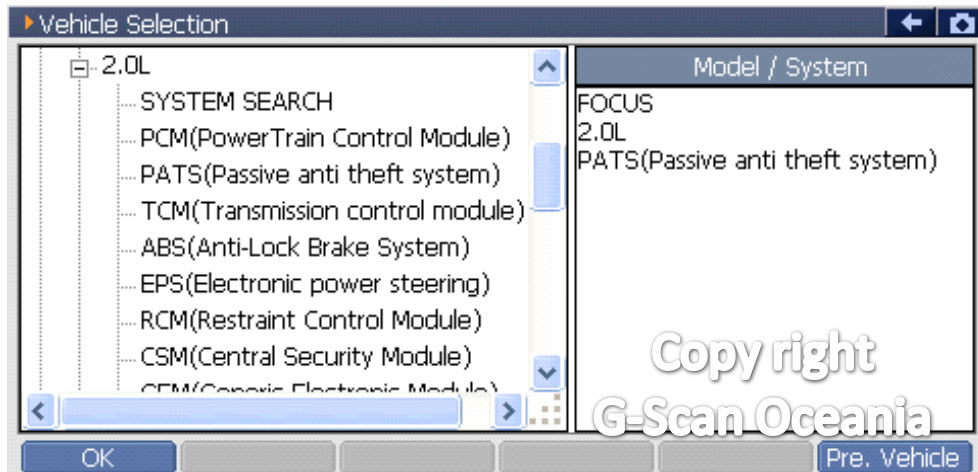


2. Select ignition keys program

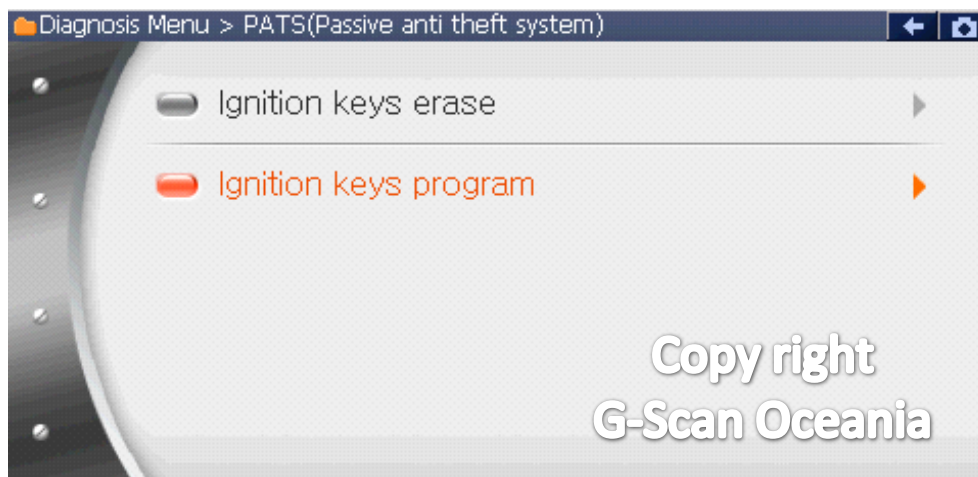


3. Notice

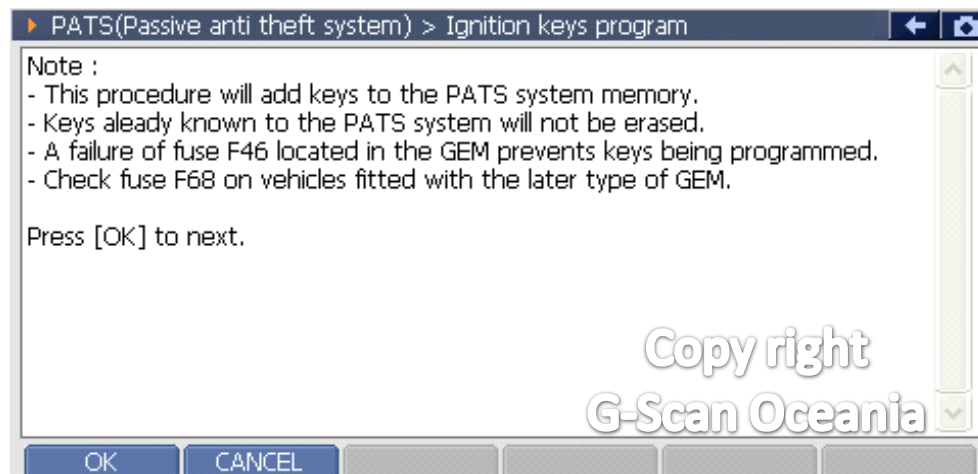

4. Notice

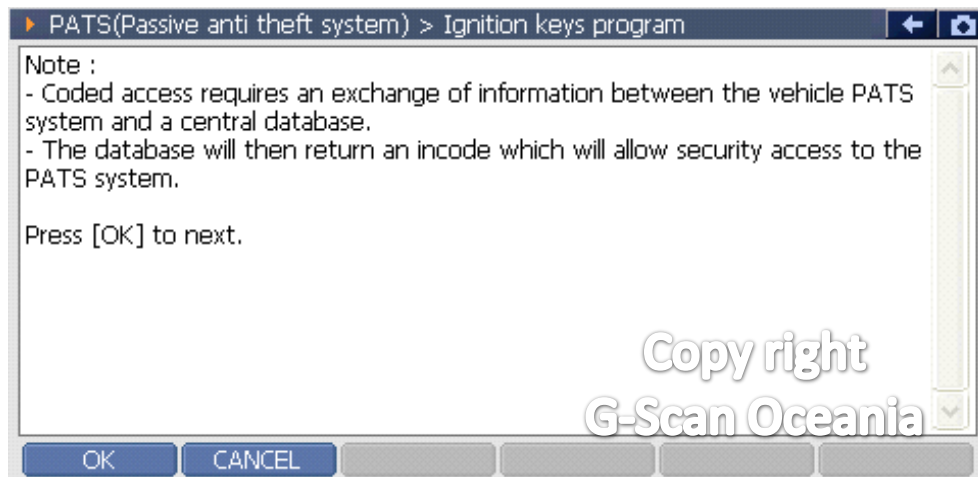

5. Notice

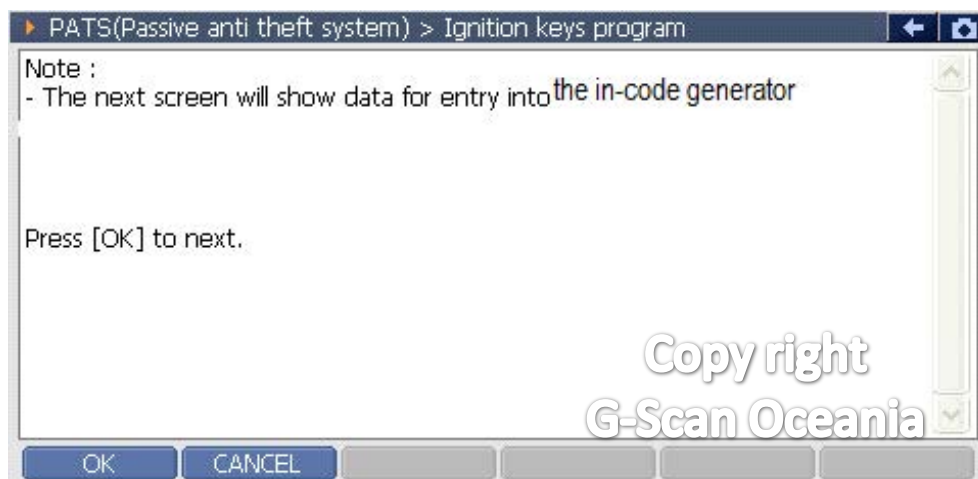

6. The outcode is displayed.




** To proceed you will need to know the 'incode'. This code is obtained from a FORD dealer.

7. Input the incode



8. Follow the procedure displayed.

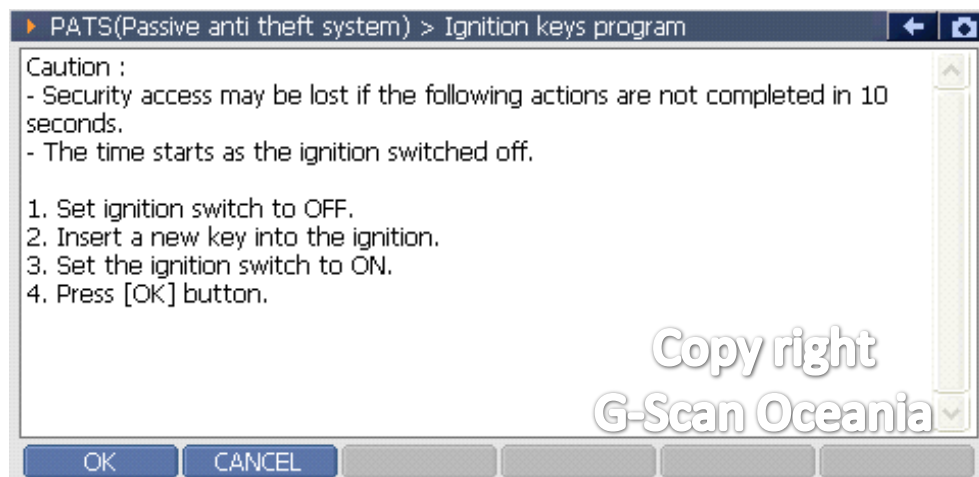

** It is only possible to program one key at a time. Re enter the function to program another key.