


- ** Before the starting this function, turn IG off -> IG on 10 times.
- ** If want to do this function, must know [Input code].
- ** G-scan showing the number for asking to dealership.
- ** This function is not ECU programming. Just for the link module BCM and ECM each other.
- ** This function is not using for key programming.
(Not a [Parameter reset]. Transit doesn't need that function)

1. Select [BCMii] system

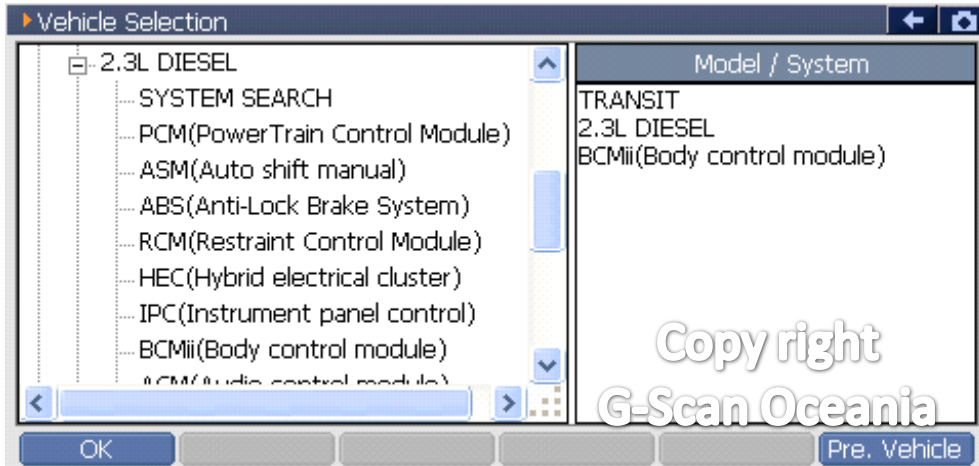


2. Select [Special function]




3. Select module initialization.




4. Notice

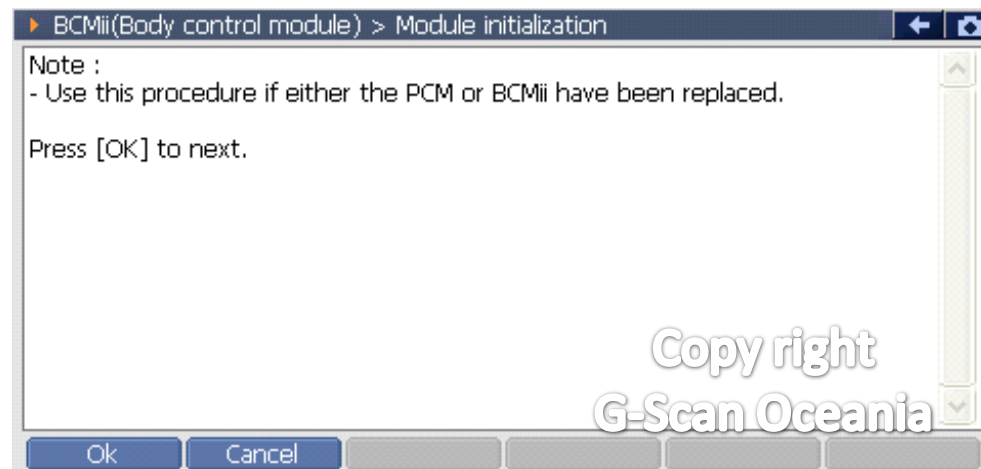

5. Notice

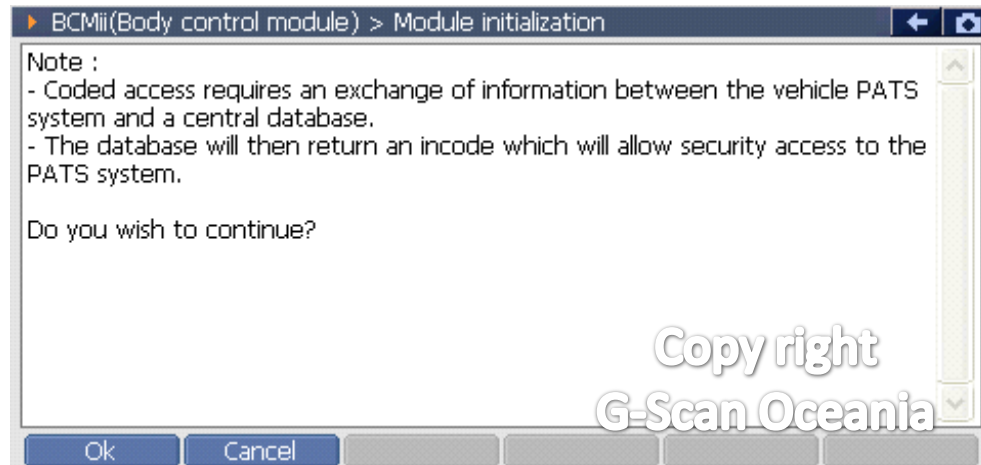

6. Notice

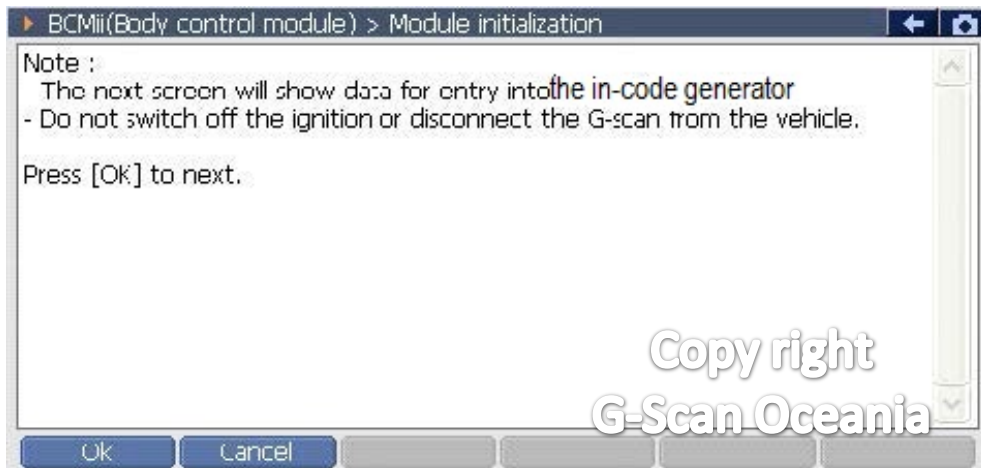

7. Showing the PATS information




** If want to do this function, must know [Input code].

** That input code will be get through the [Ford dealership].

They asking the number of this screen.

** The dealer give 8 digit code number, 1-4 number for BCM and 5-8 number for the PCM.(EX> 12345678 : 1234(BCM), 5678(PCM))


8. Enter the input code.

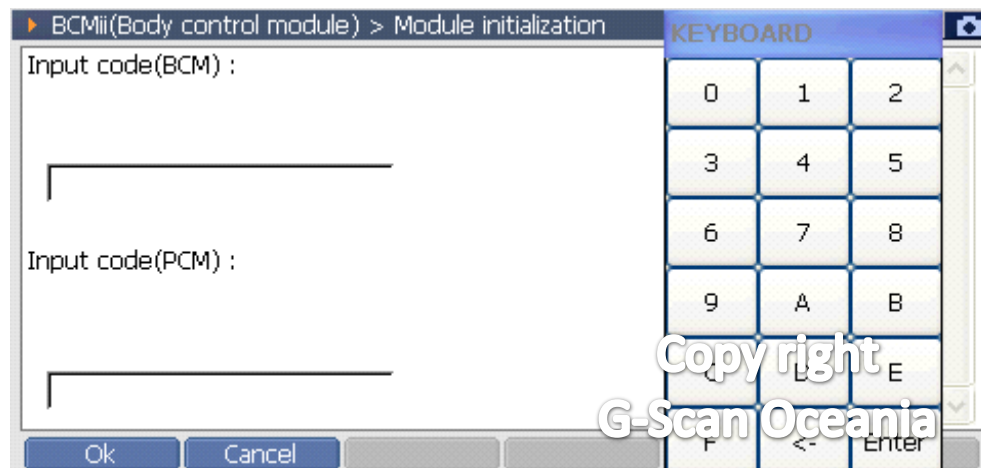

9. Turn ignition off.



10. Turn ignition on.

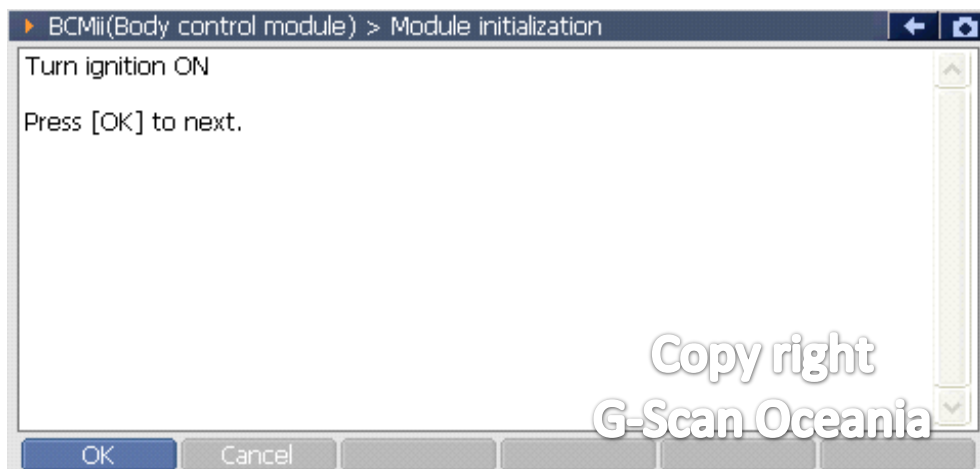

** This IG off -> IG on procedure must be in 5 seconds.