

## **Mazda 3 Automatic Window Reset**

**Note:** This procedure is commonly required to be performed on a Mazda 3 vehicle with electric windows after battery disconnection.

**Symptom:** Upon battery reconnection, the electric windows appear to work normally if the switch is held down or up, however the 'Auto Down' and 'Auto Up' functions do not work on the **driver's** window.

### **Reset Procedure**

1. Press and hold window switch in 'Down' position until the window reaches its maximum downward travel and then continue to hold switch down for a further 5 seconds.
2. Press and hold window switch in "Up" position until the window reaches its maximum upward travel and then continue to hold switch up for a further 5 seconds.
3. Repeat step 1 if necessary.
4. Test 'Auto Window' setting for correct operation.