

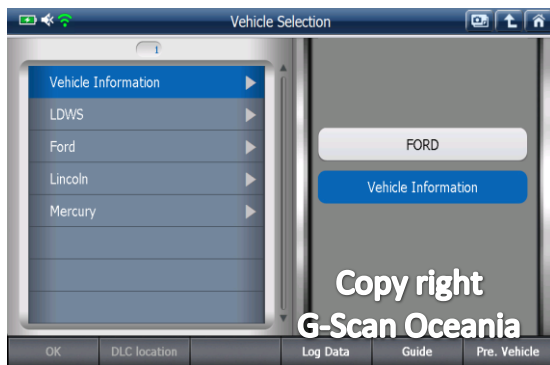


Type1

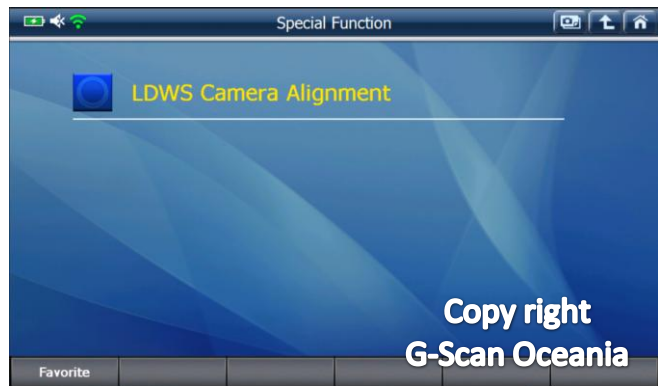


Type2

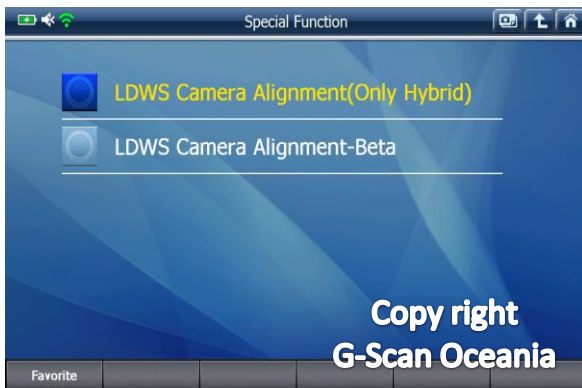


1. LDWS Camera Alignment(only for Hybrid)
2. LDWS Camera Alignment




1. LDWS Camera Alignment

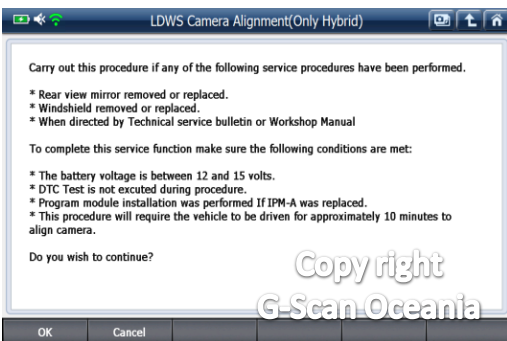


** Please match the conditions that have been exposed.

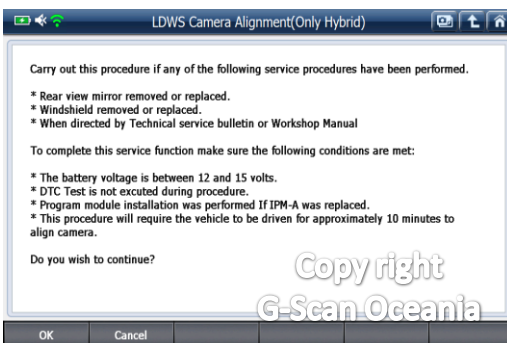

** Please match the conditions that have been exposed.

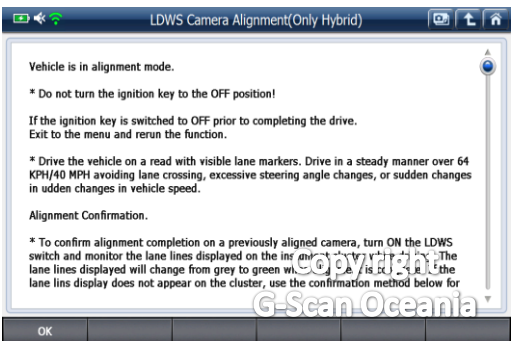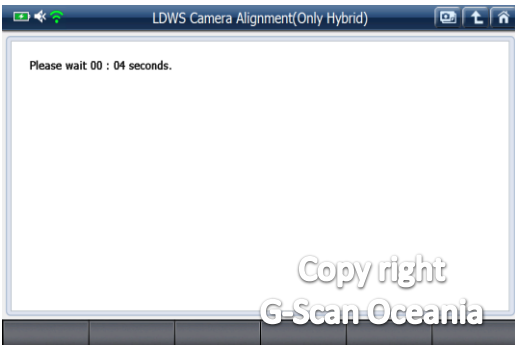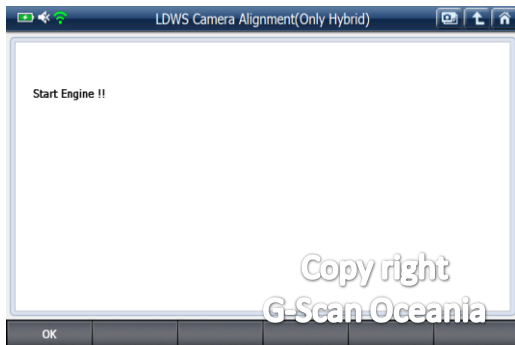

- ** Please follow the instructions that have been exposed.
- ** After press [OK] button, G-scan will show learning progress value.

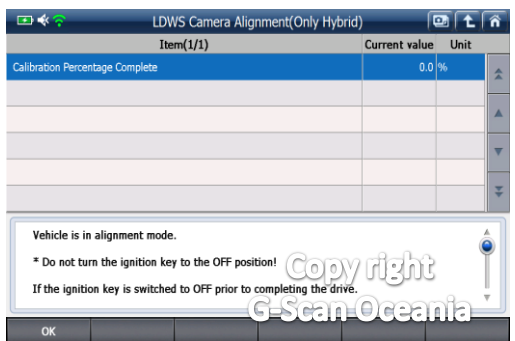

- ** After executing the function, starting the traveling of the vehicle, the value goes up from 0 to 100% .(This value is possible to over than 100%. If that is over 100%, that procedure will be ended at 255%)
- ** However, if more than 5 minutes driving car even if the value does not change, please perform the function again from the beginning.

