

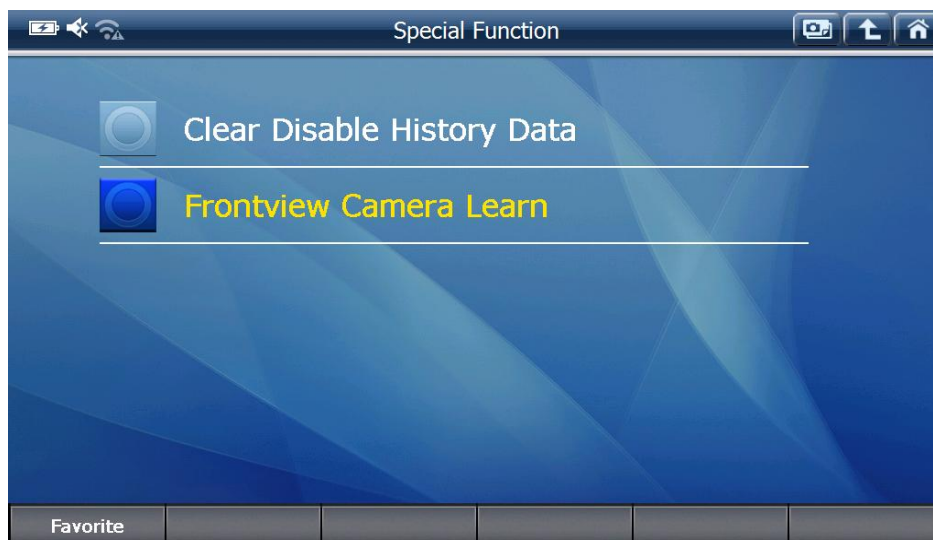
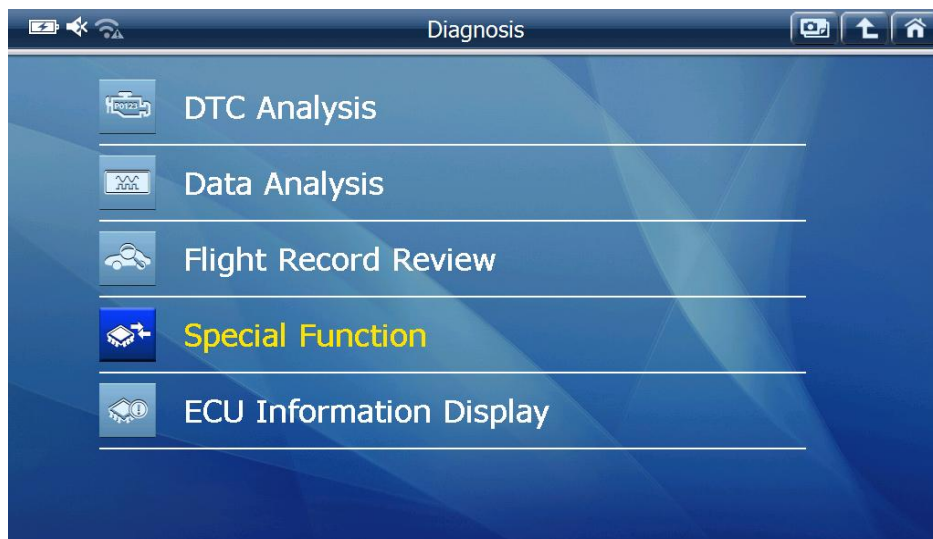


## Front view camera learn

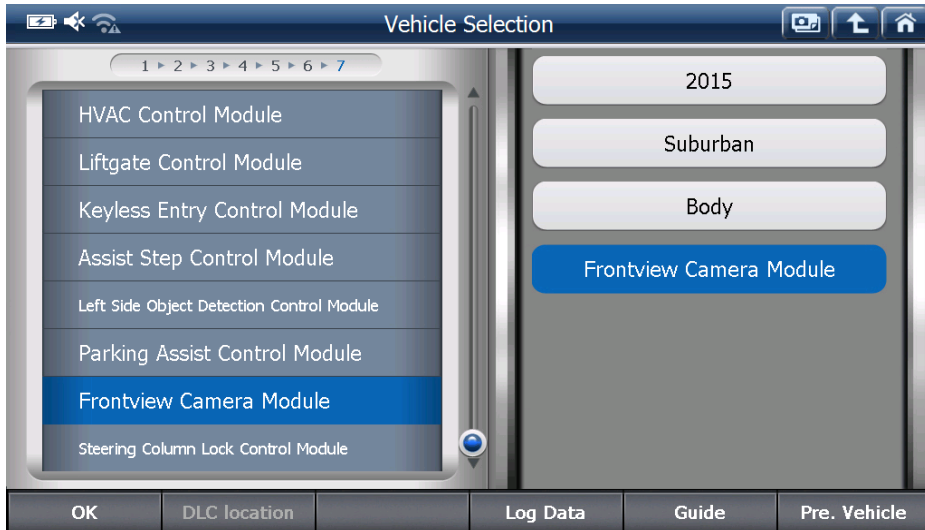

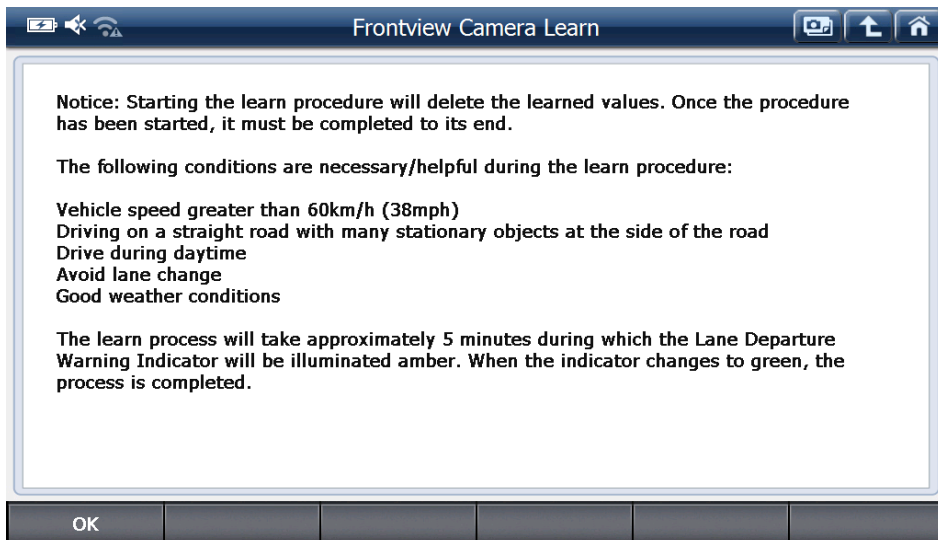



\*\* Please follow the instructions that have been exposed.


Frontview Camera Learn			
Item(1/16)	Current value	Unit	
Battery Voltage	3.0	V	▲
Following Distance Indicator Status	Disabled		▲
Forward Collision Alert Function Status	OFF		▲
Frontview Camera Disable History 1	Undefined		▲
Frontview Camera Disable History 2	Lane Depart Warn. Indicator		▲
Frontview Camera Disable History 3	Lane Depart Warn. Indicator		▲
Frontview Camera Disable History 4	Lane Depart Warn. Indicator		▲
Frontview Camera Learn Mode Status	INACTIVE		▲
Frontview Camera System Status	Normal		▲
Intelligent Light Ranging Status	OFF		▲
Learn	Exit		

\*\* Please check status sensor value to "Normal".




## Distance sensing cruise control module learn

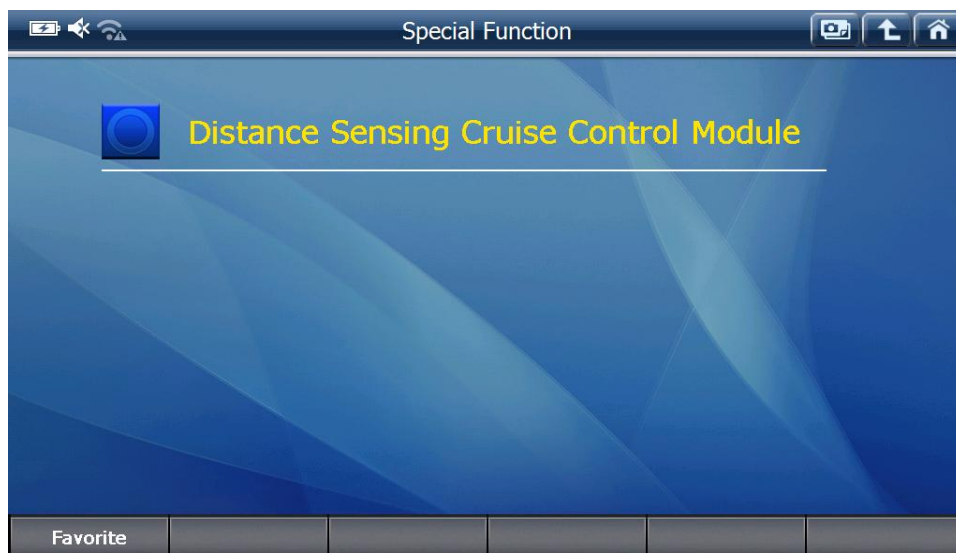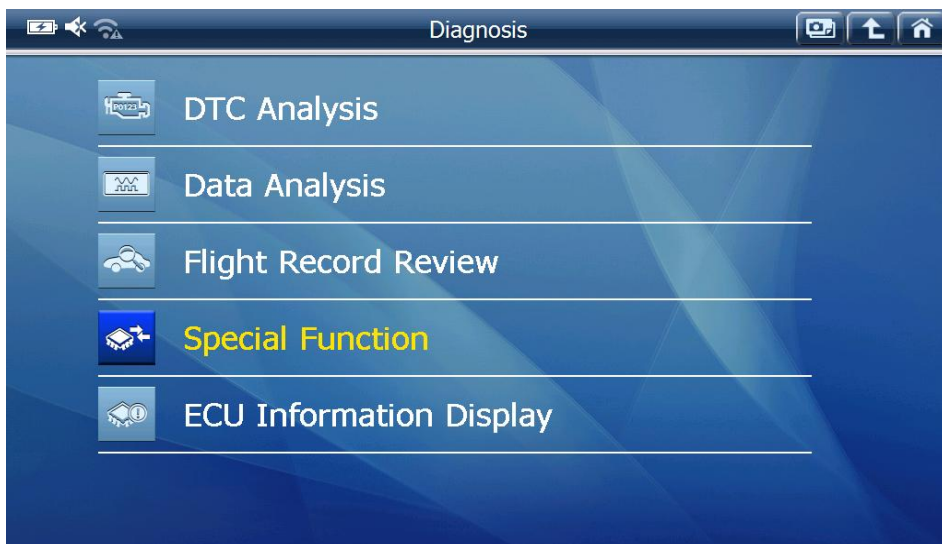

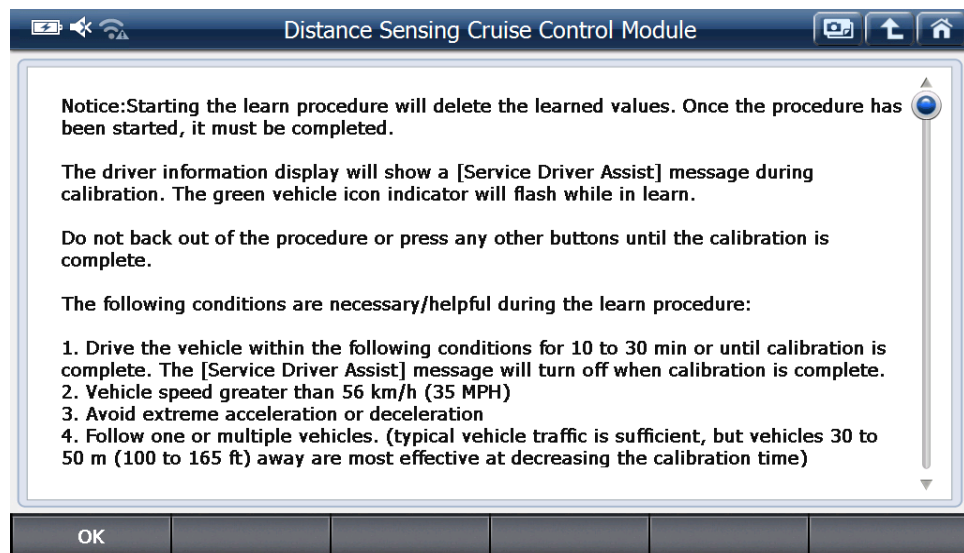

\*\* Please follow the instructions that have been exposed.

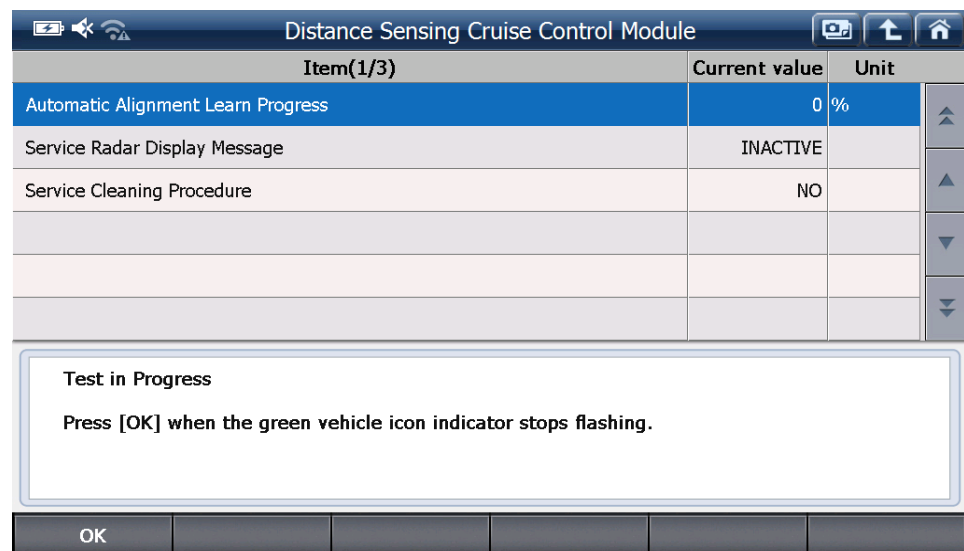

\*\* After executing the function, starting the traveling of the vehicle, the value goes up from 0 to 100% .(This value is possible to over than 100%. If that is over 100%, that procedure will be ended at 255%)

\*\* However, if more than 5 minutes driving car even if the value does not change, please perform the function again from the beginning.

