 
 
 
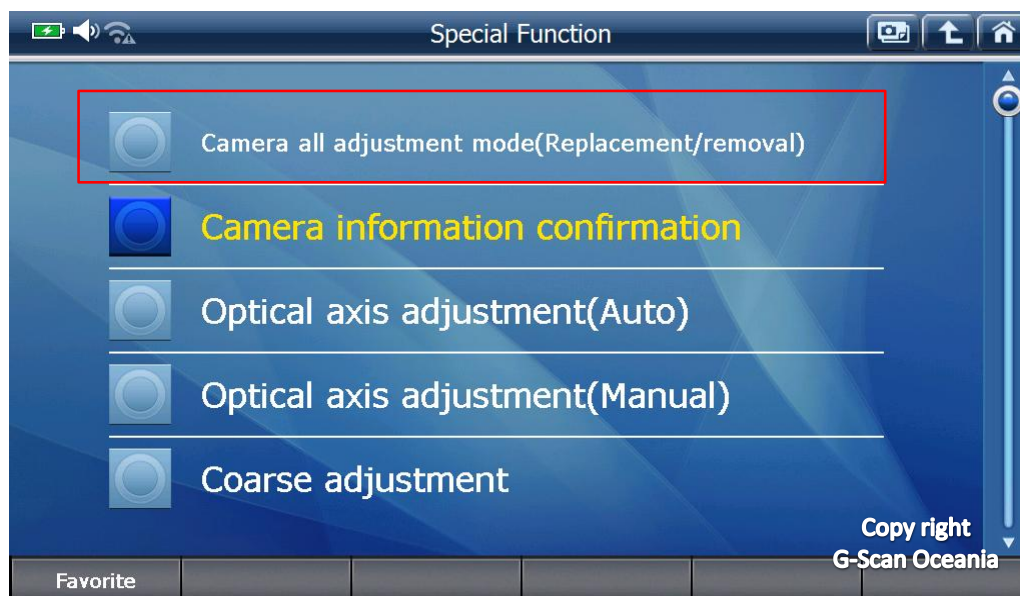 
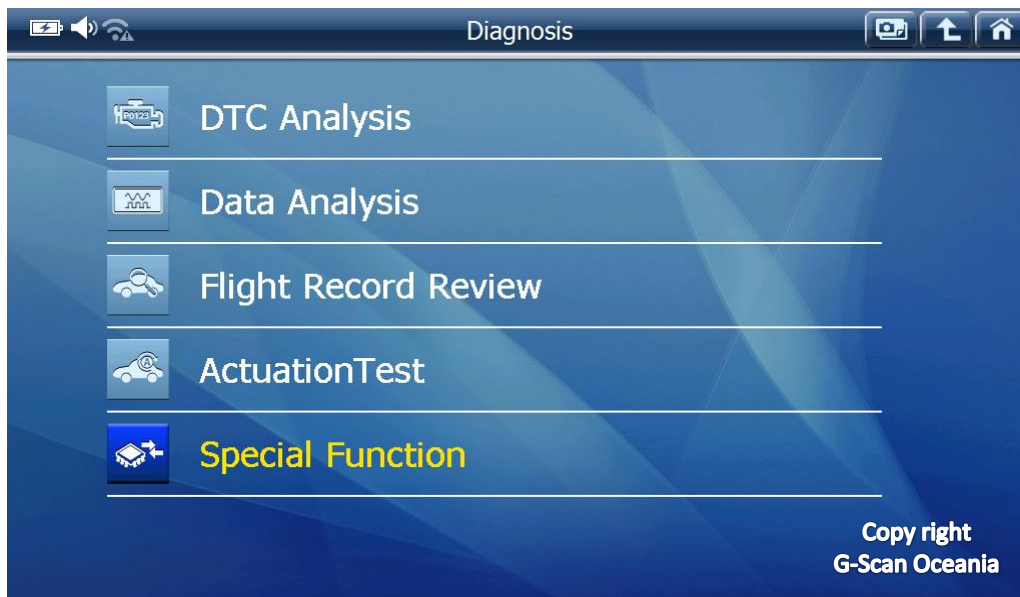 
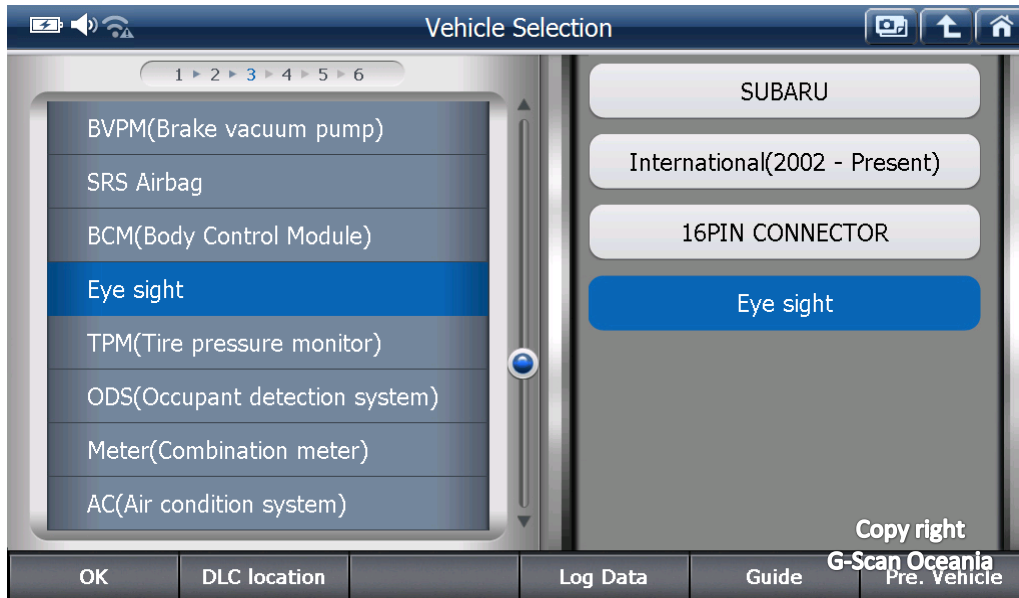 
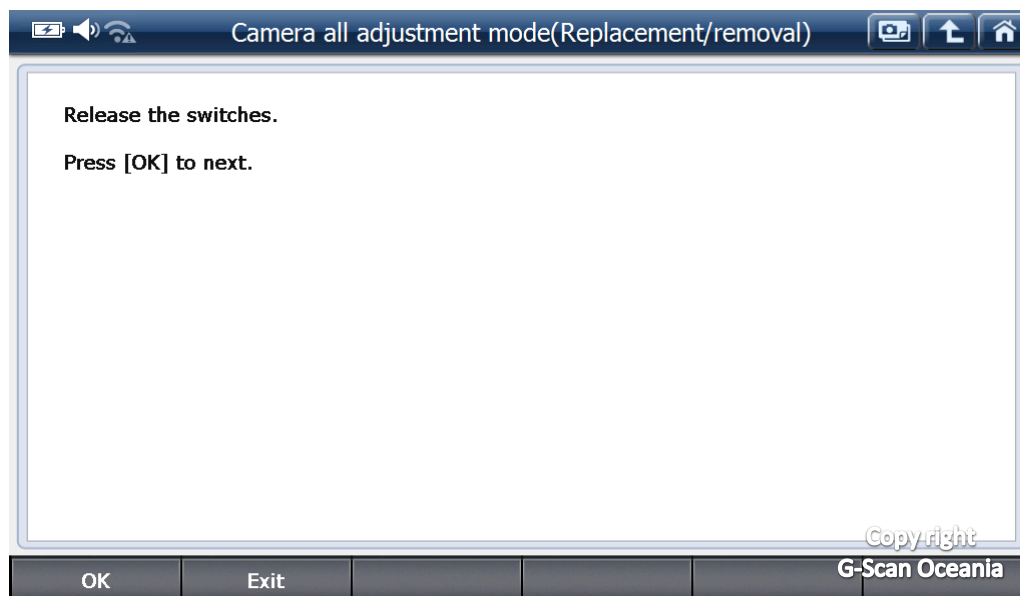 





Camera all adjustment mode(Replacement/Removal)



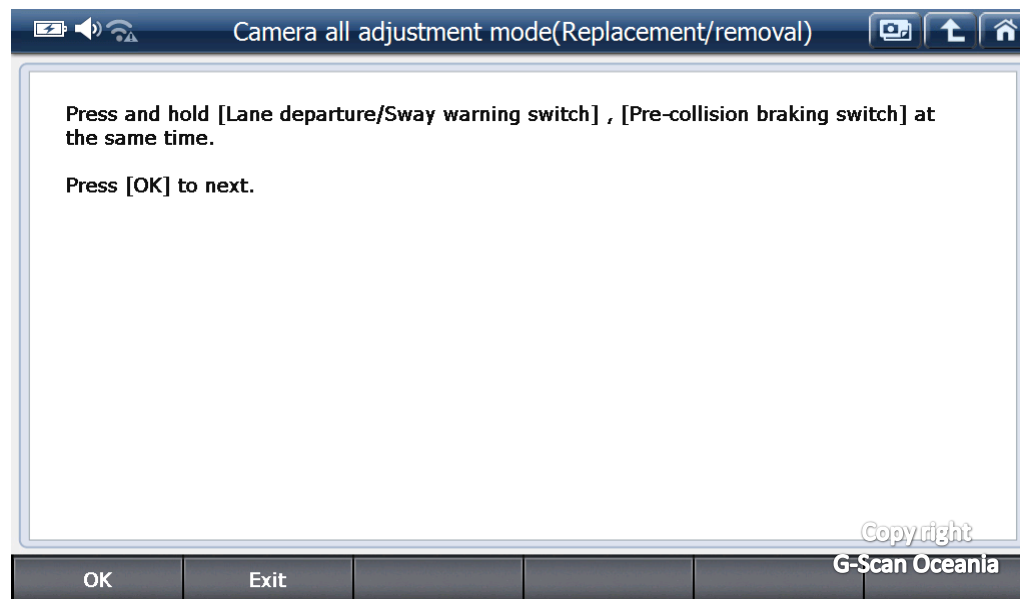




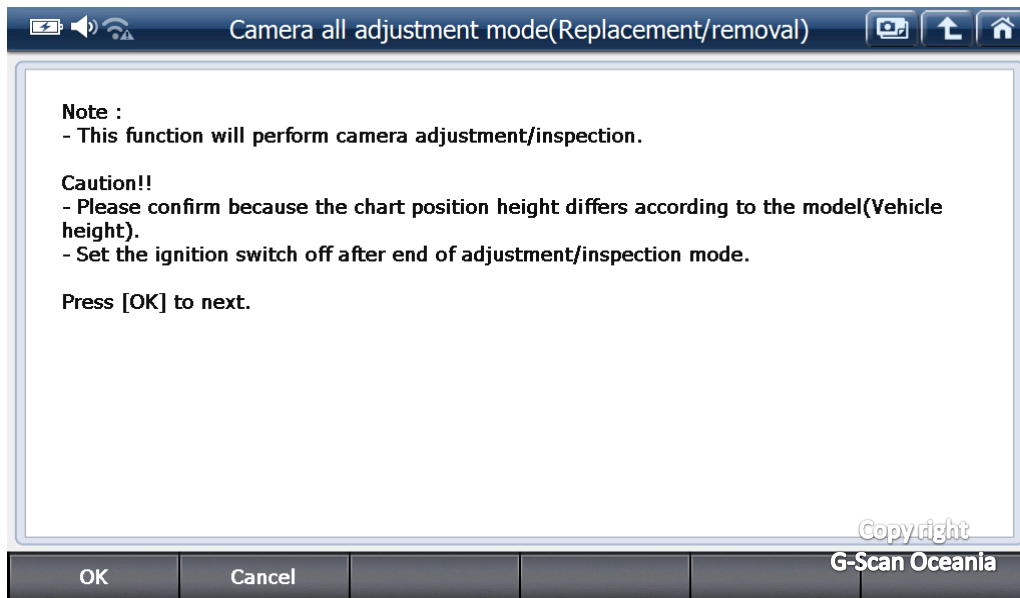


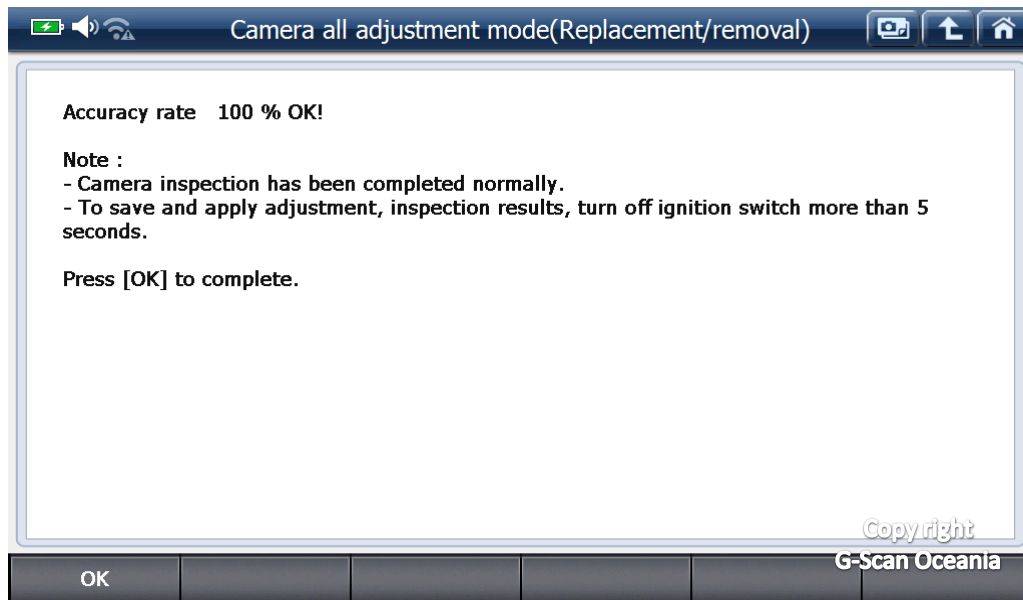

       
 
 
Camera information confirm

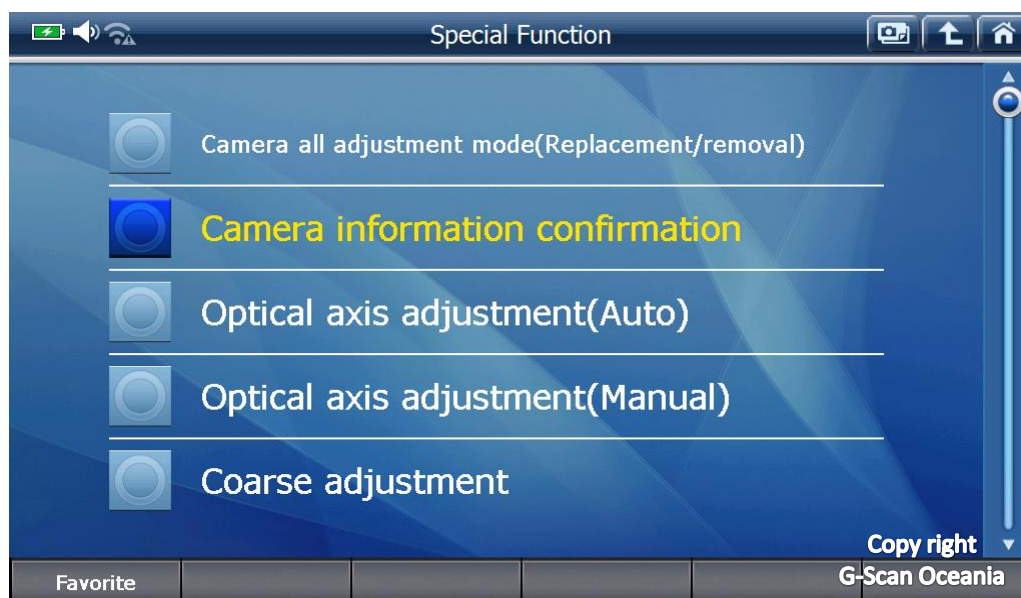
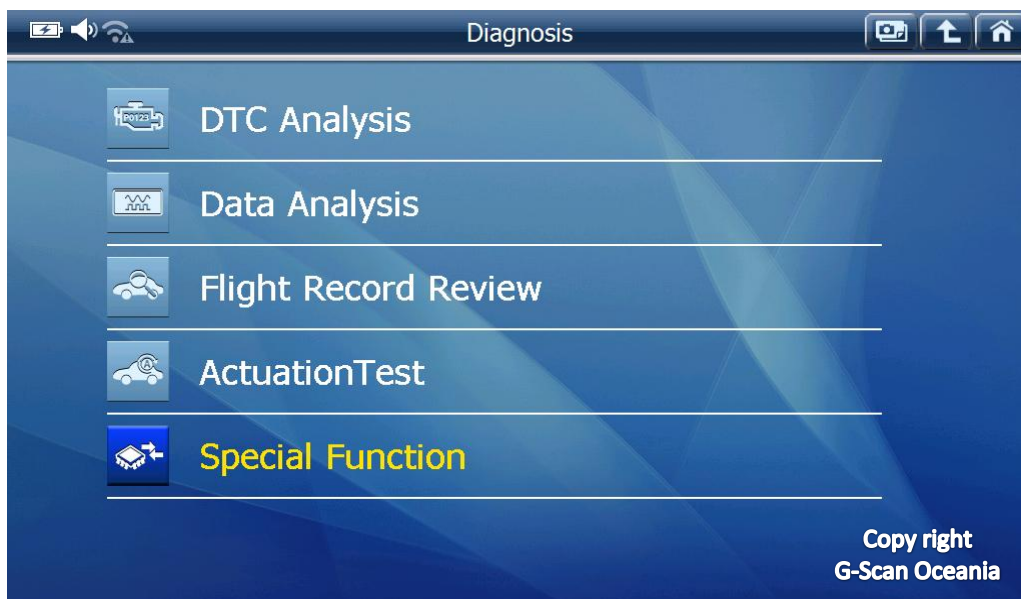
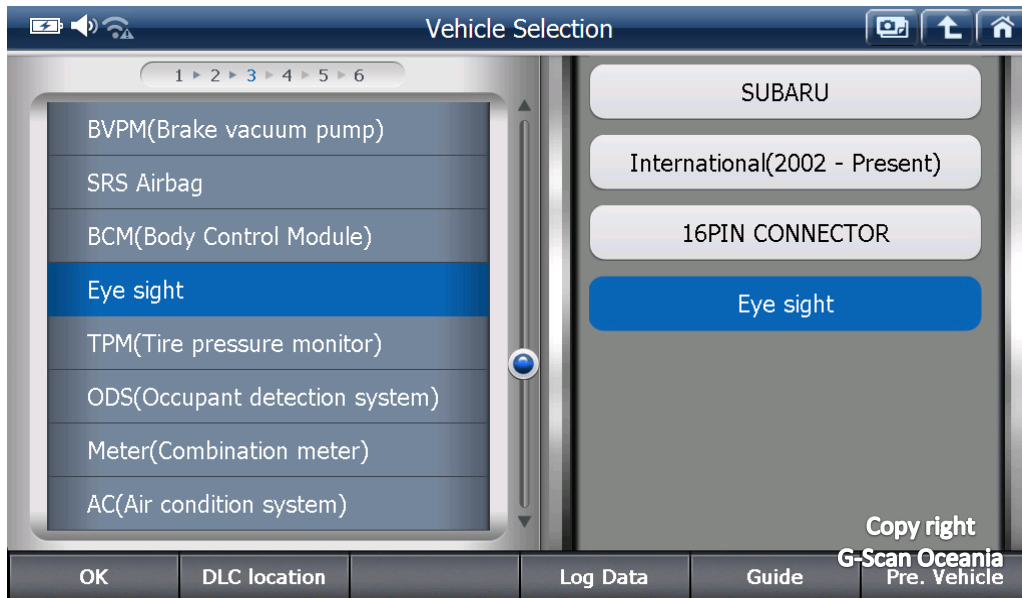


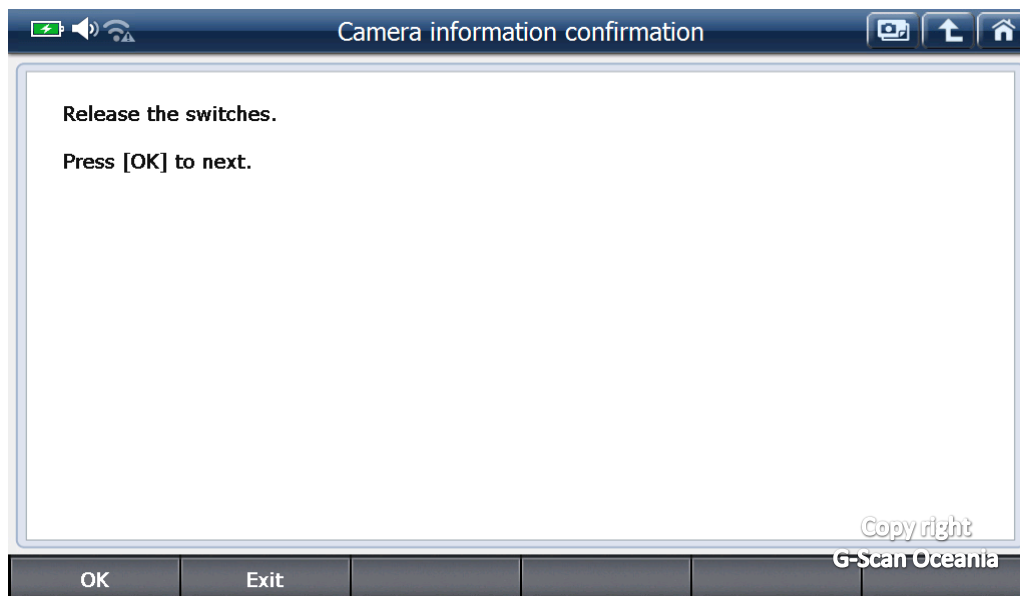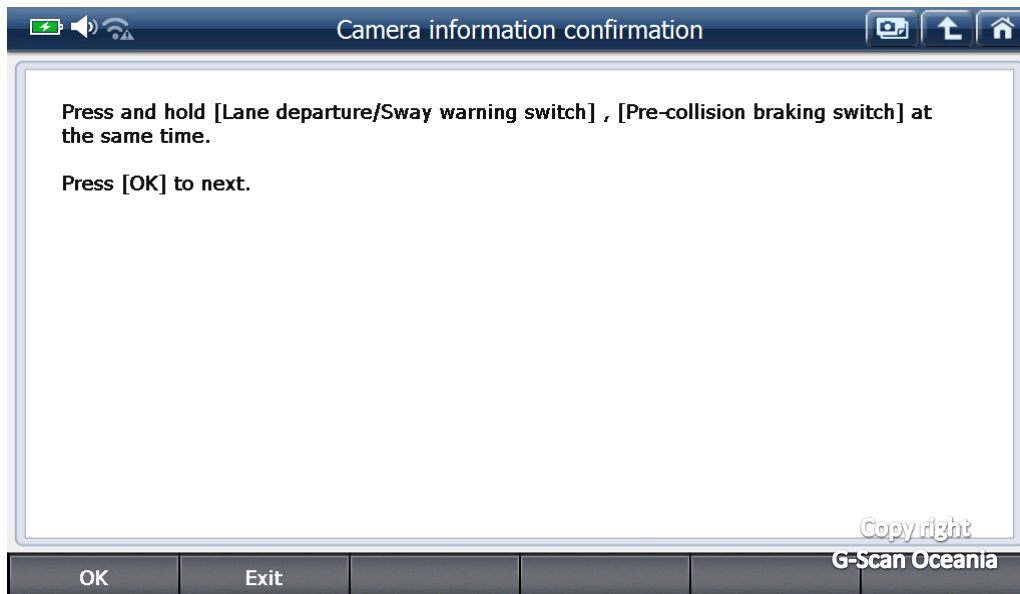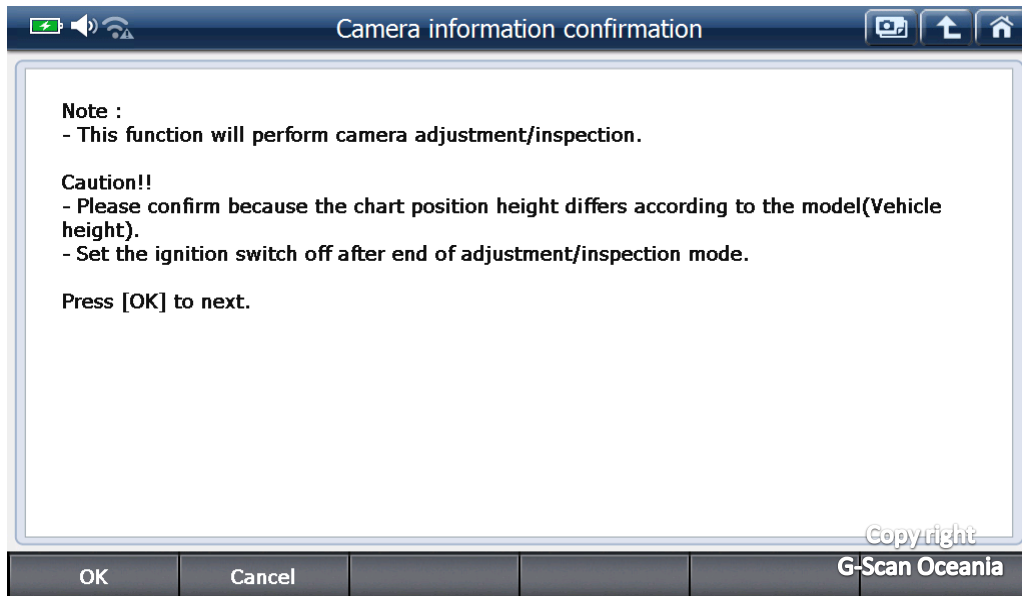


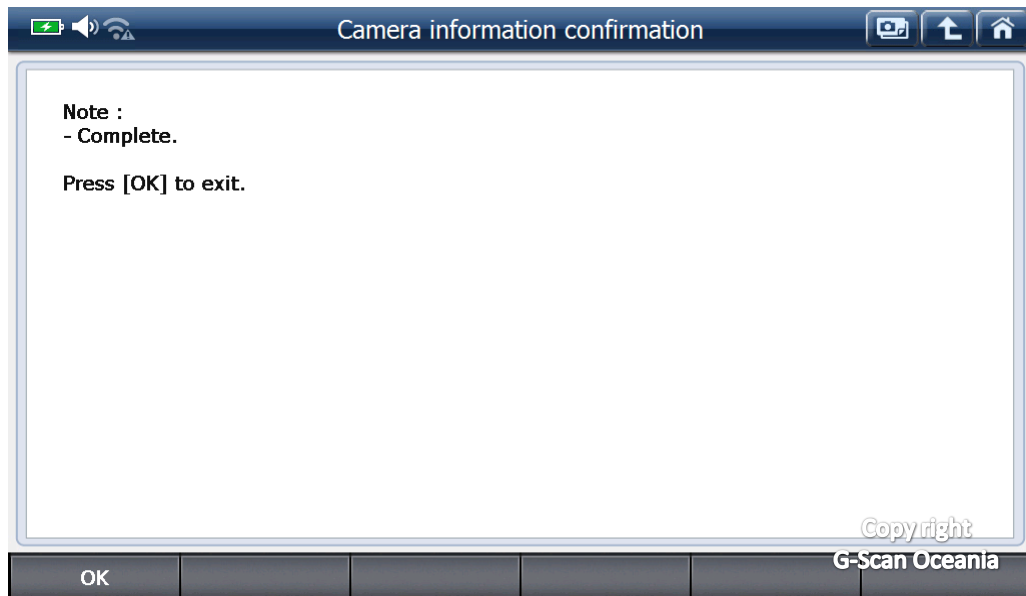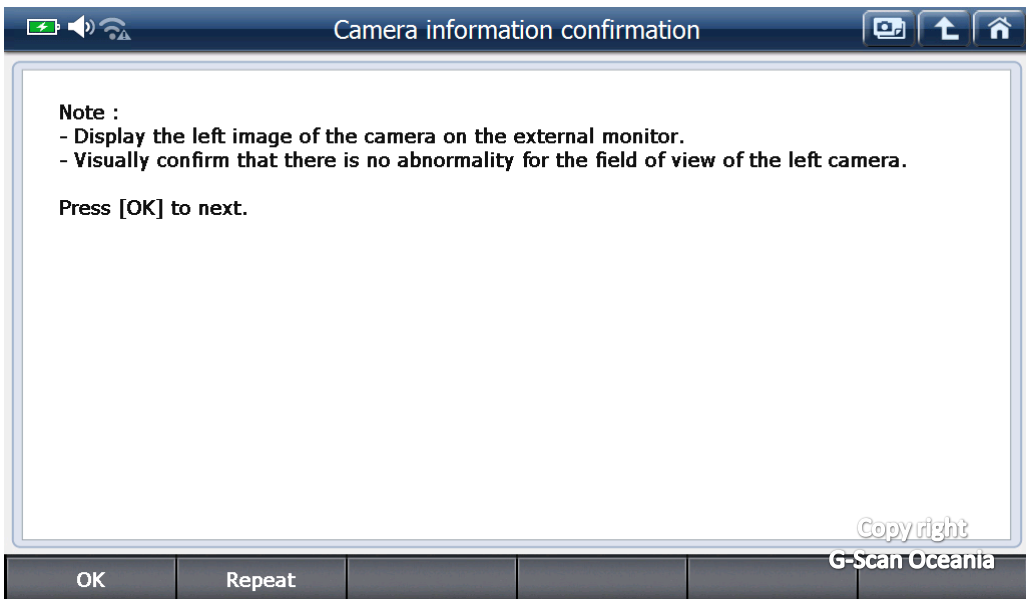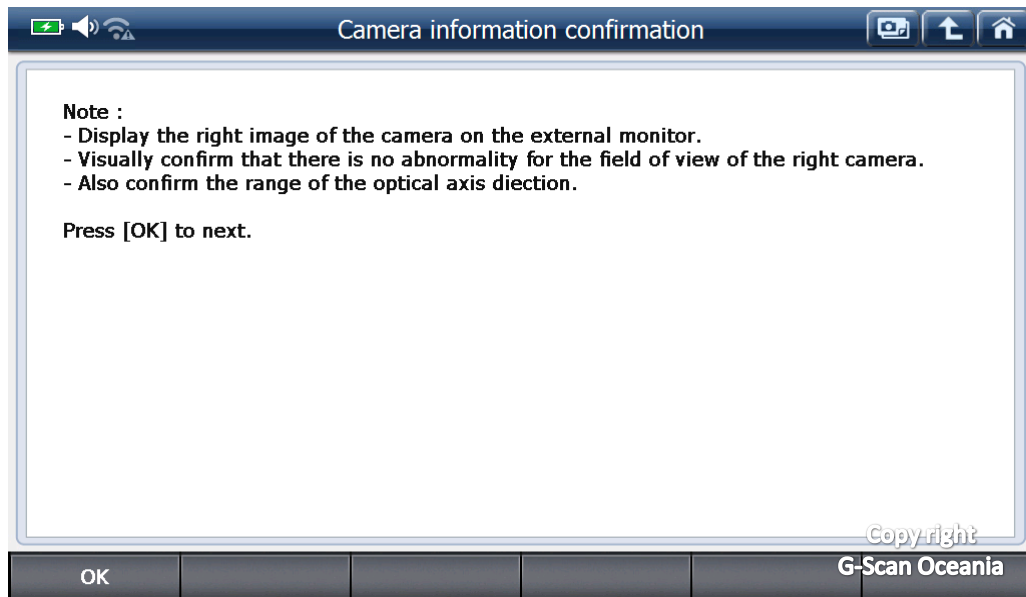




Optical axis adjustment(Auto)

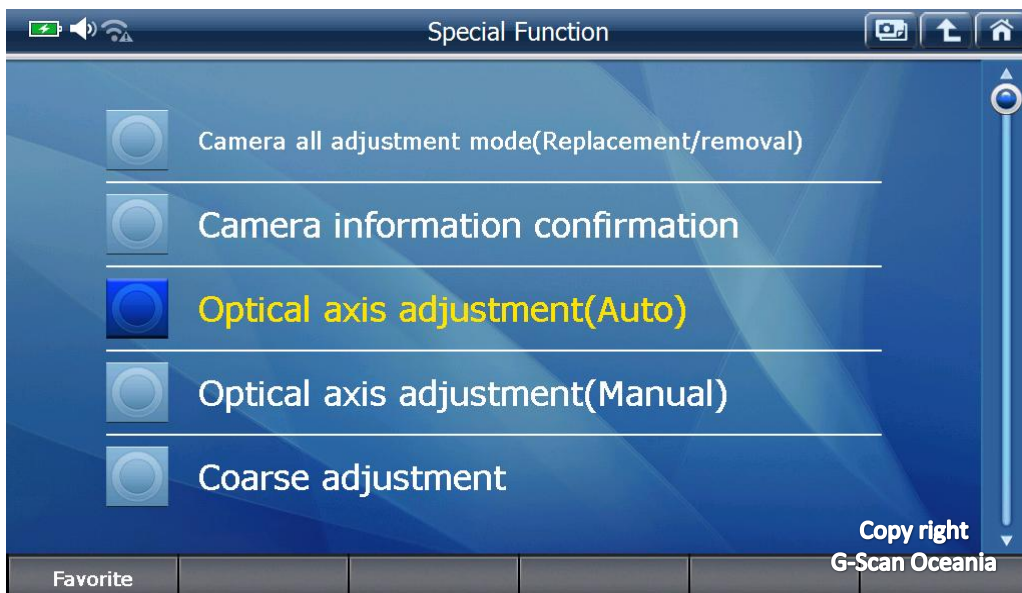 
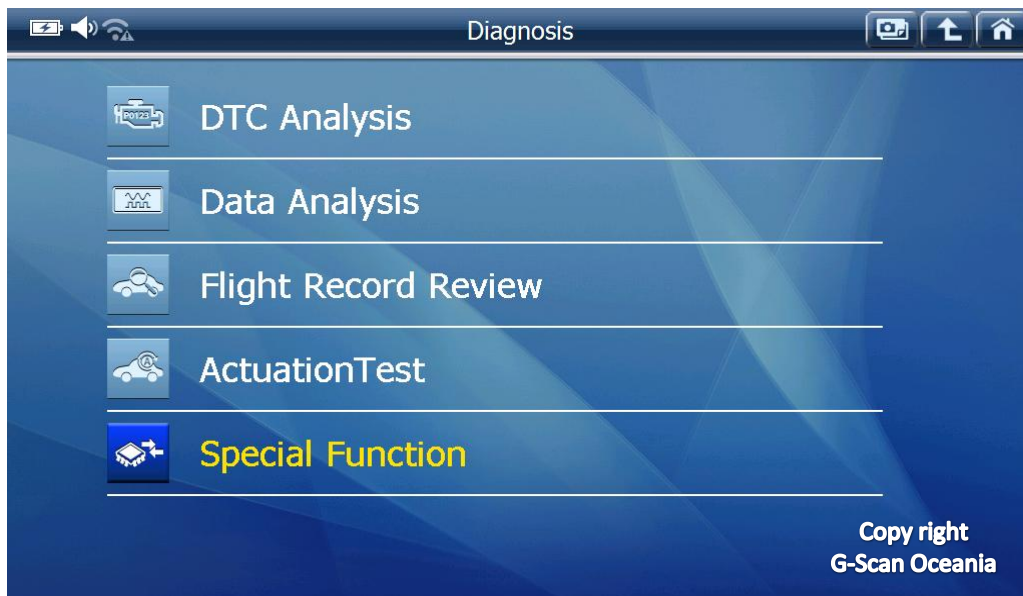 
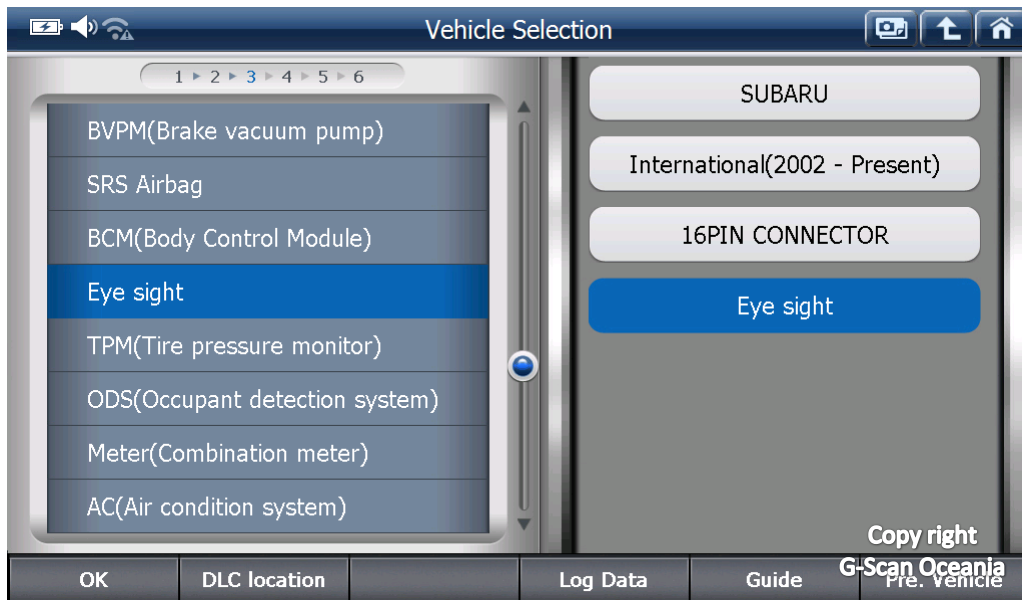 


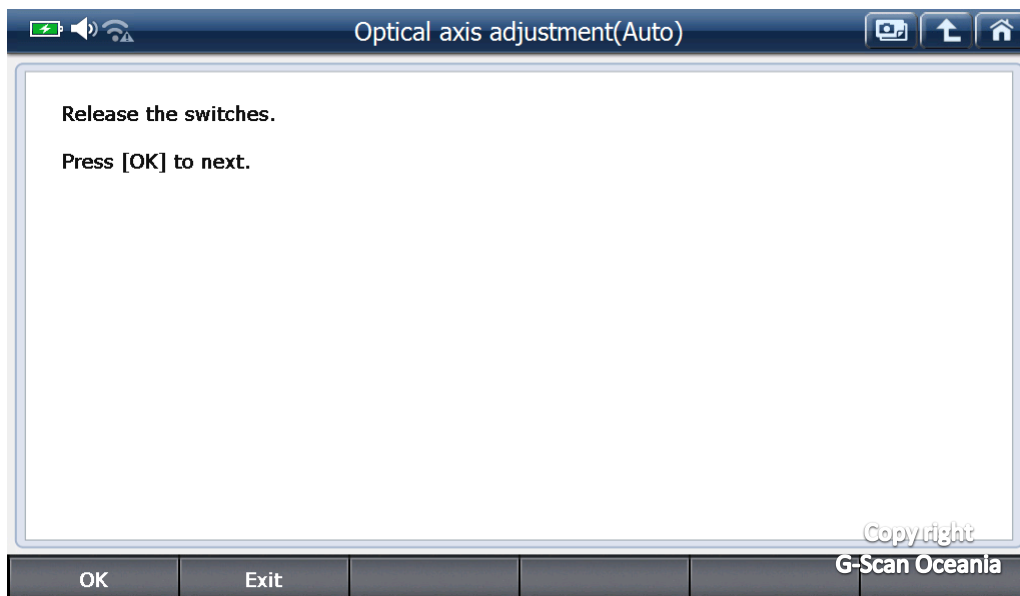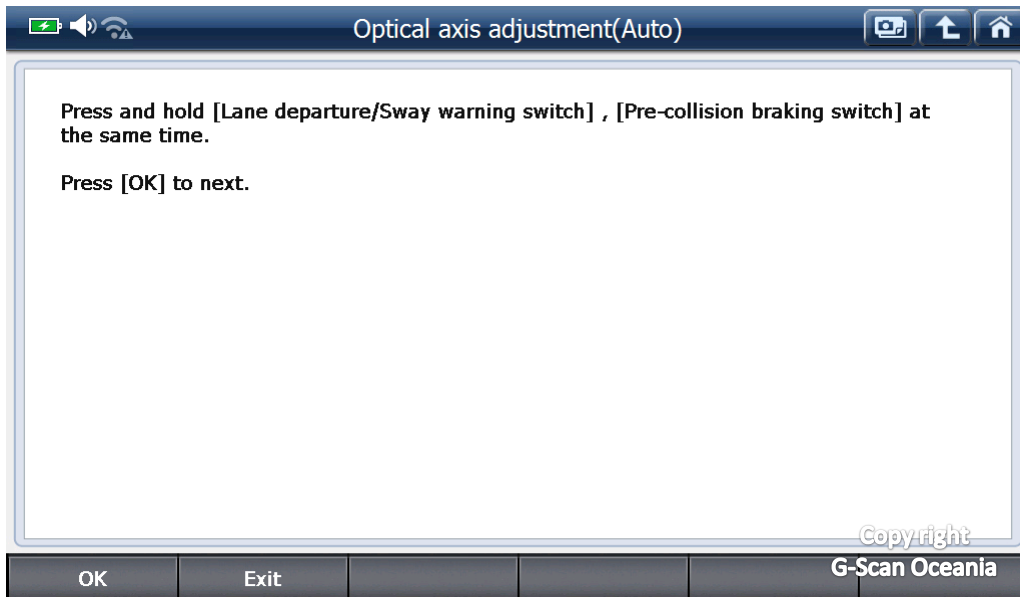  
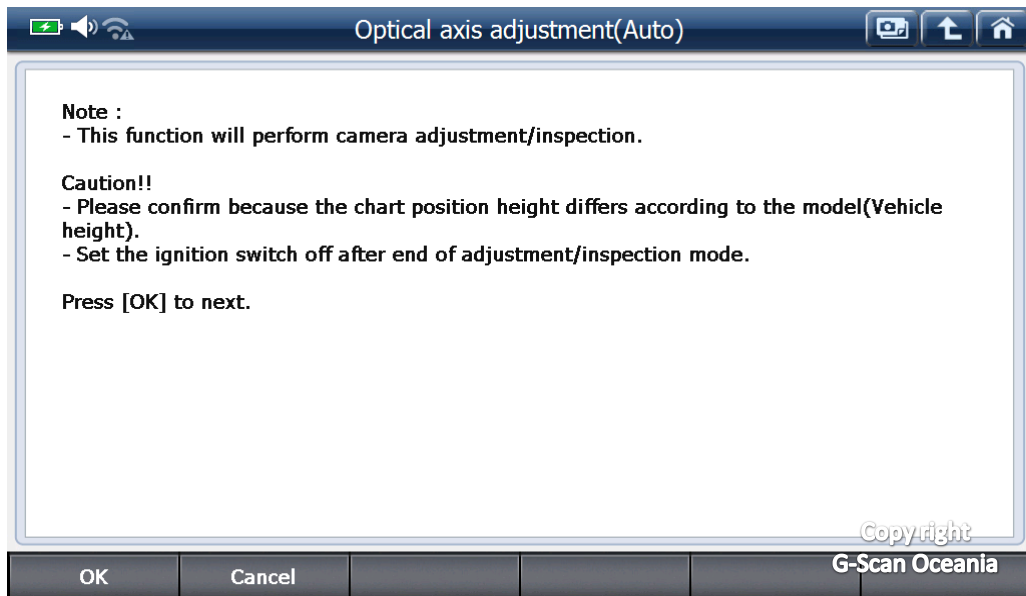 


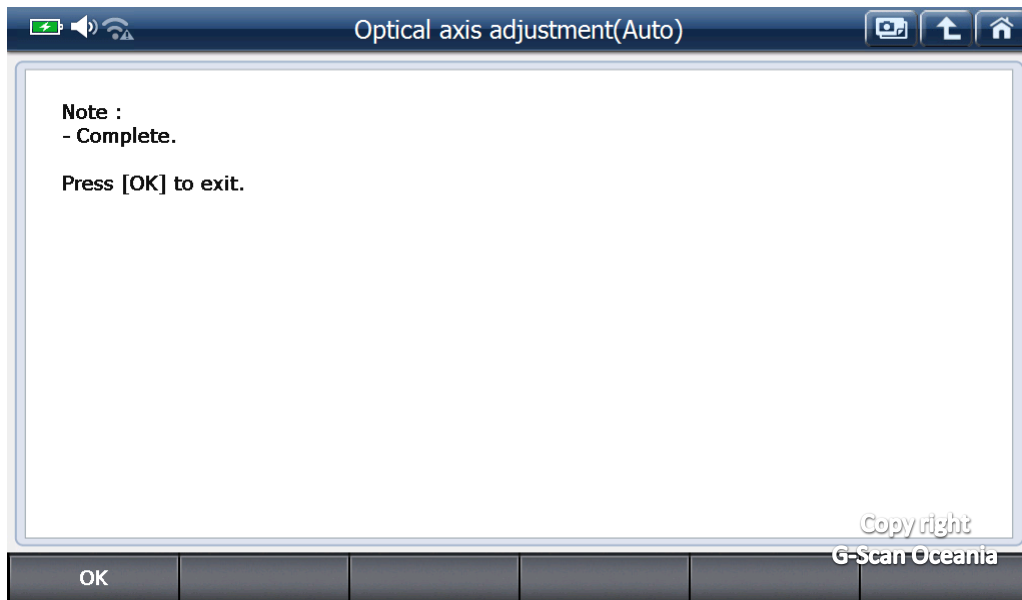 




Optical axis adjustment(Manual)

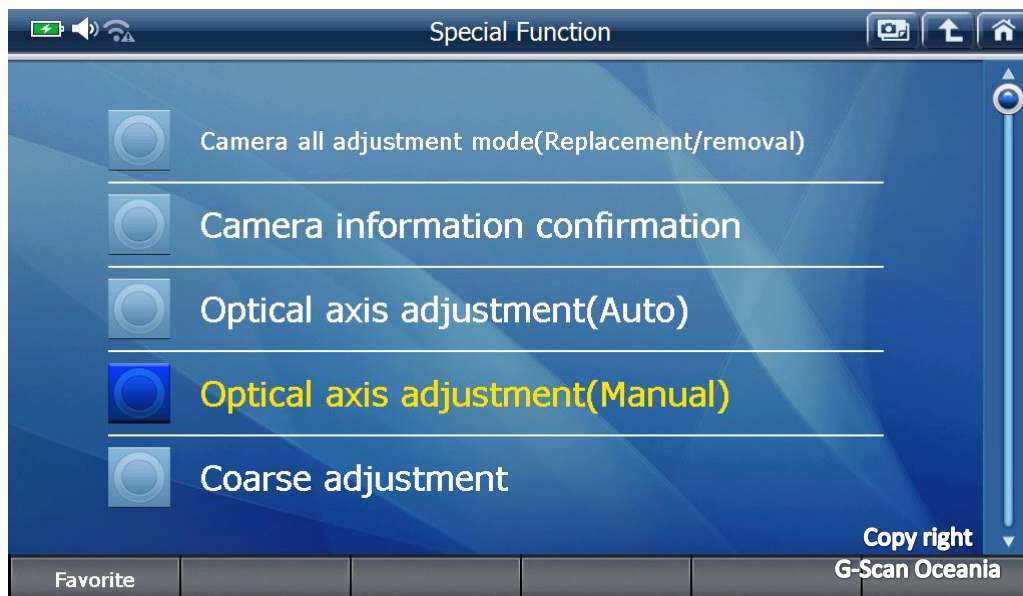 
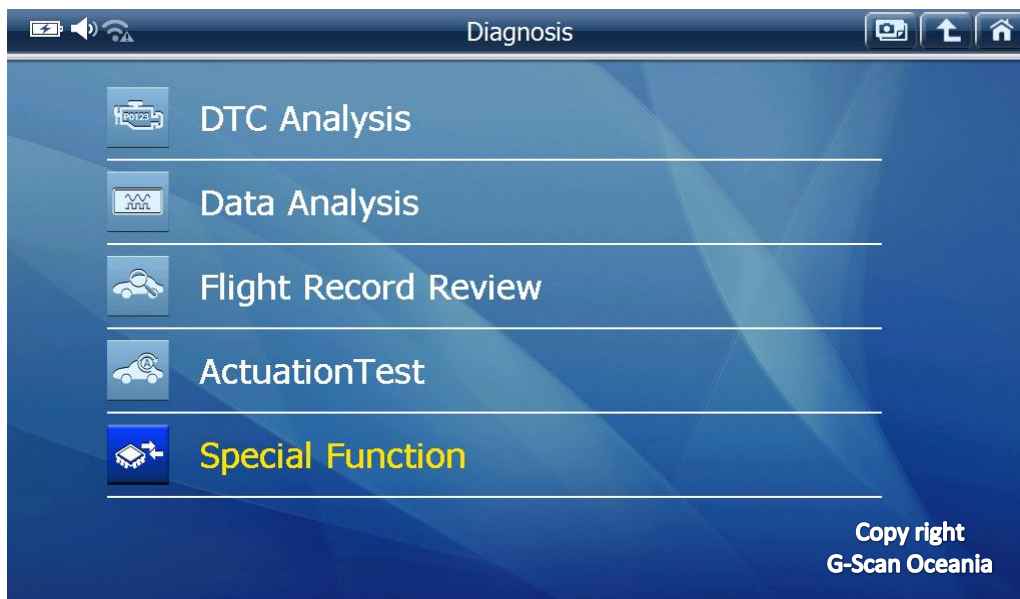 
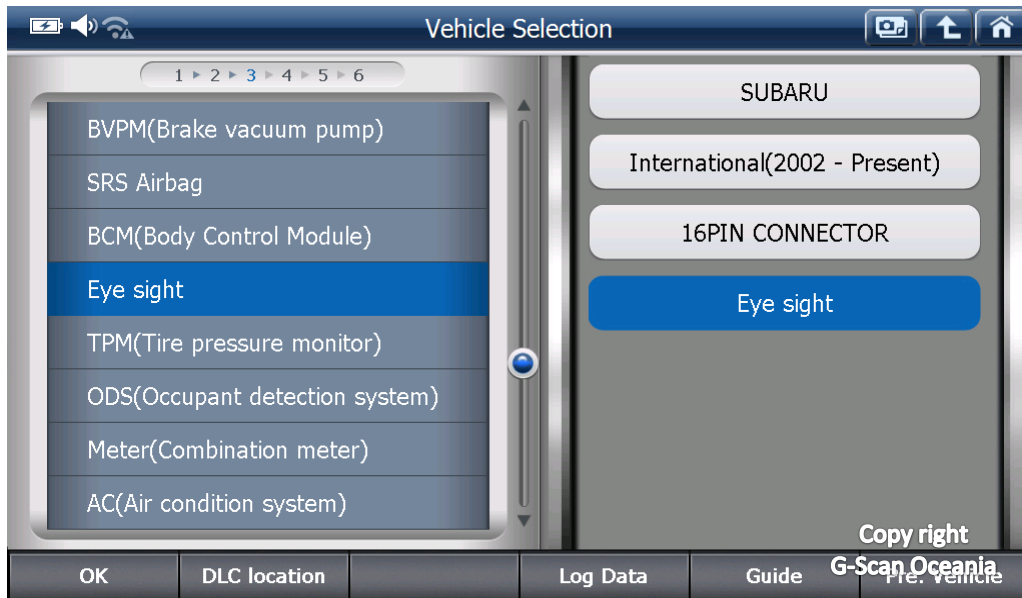 


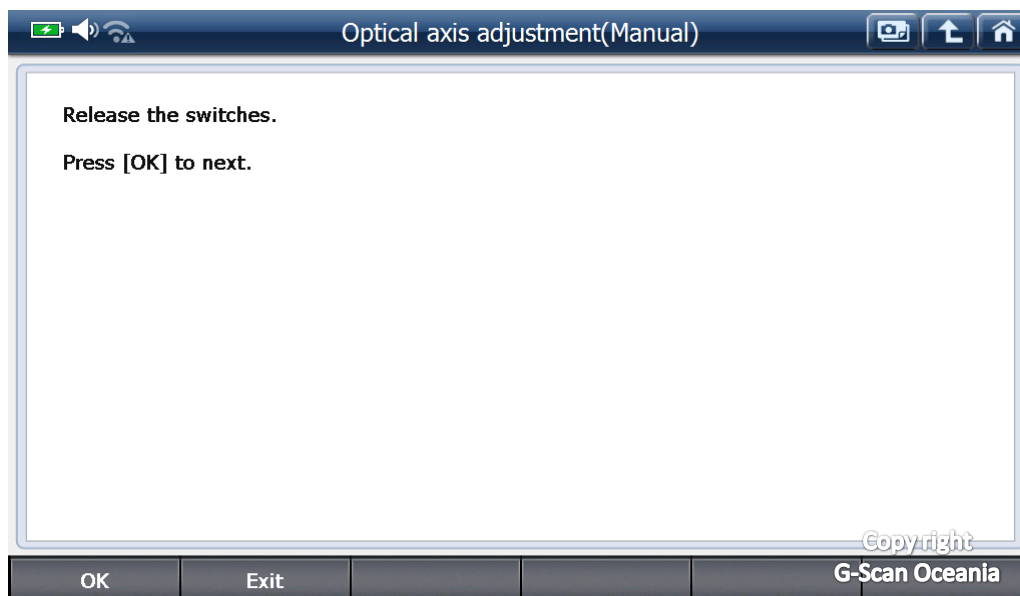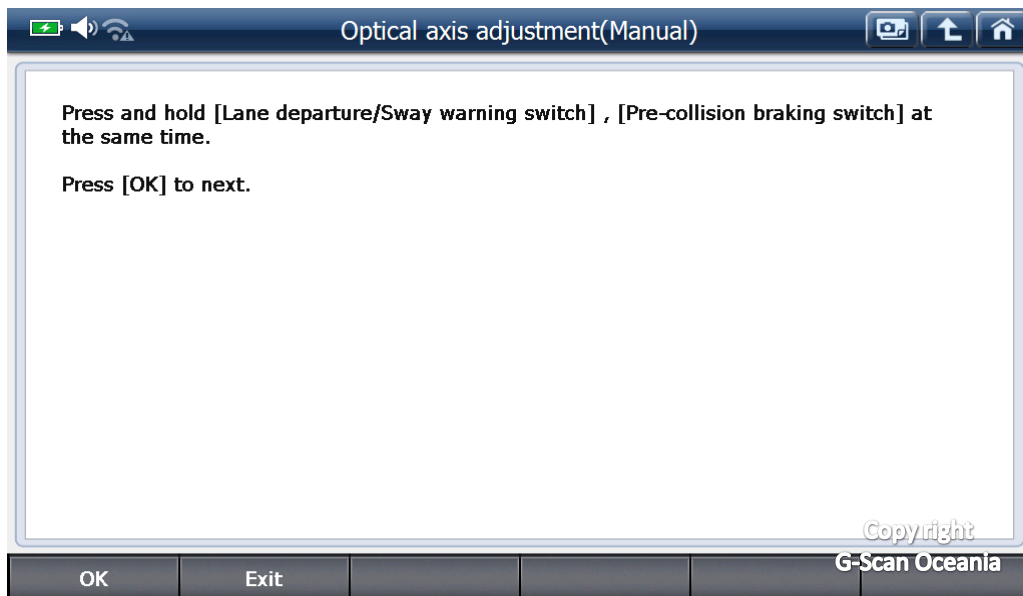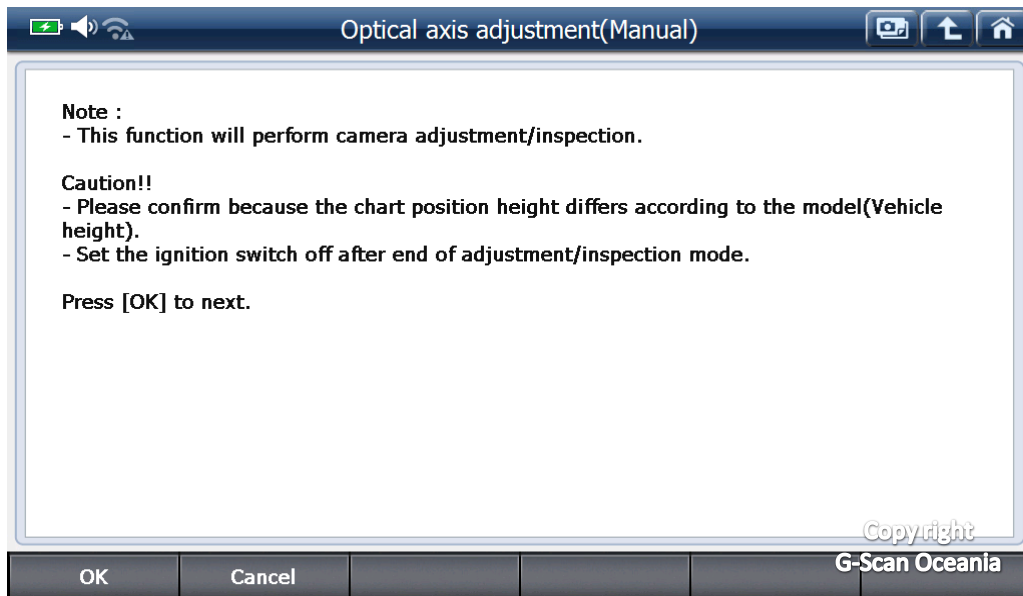   


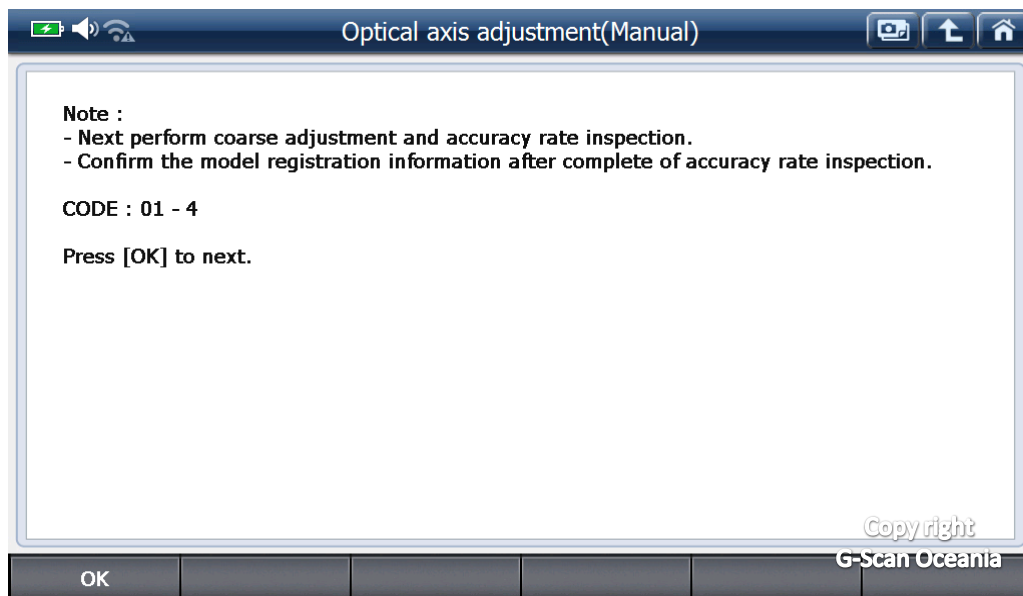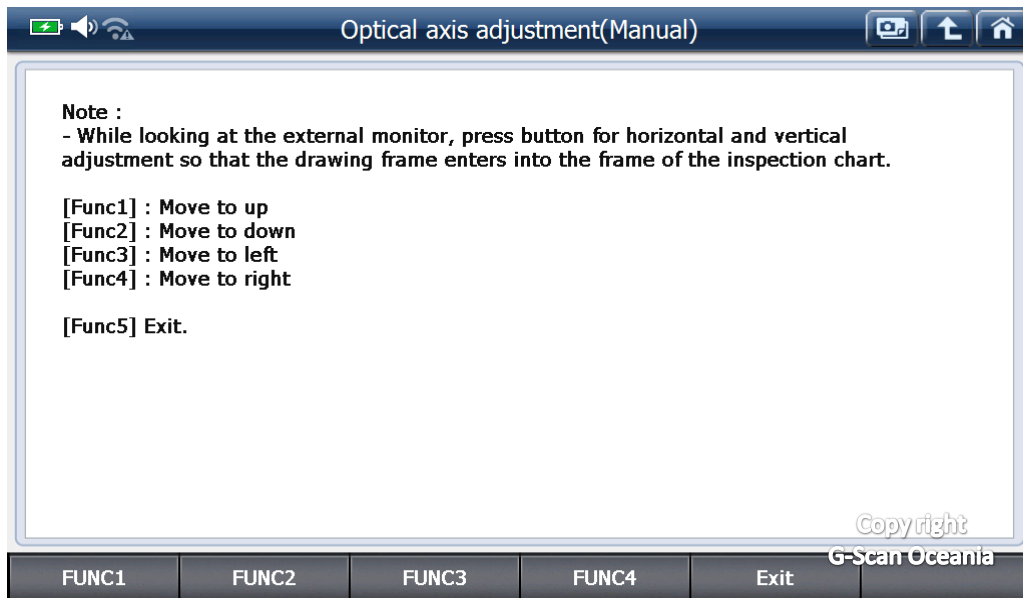  




Coarse adjustment

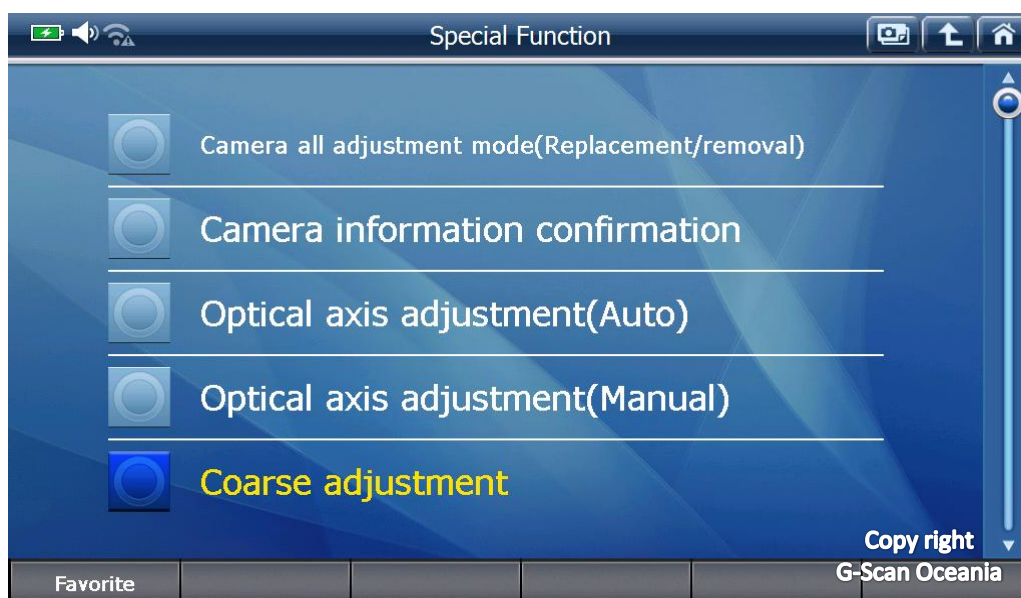 
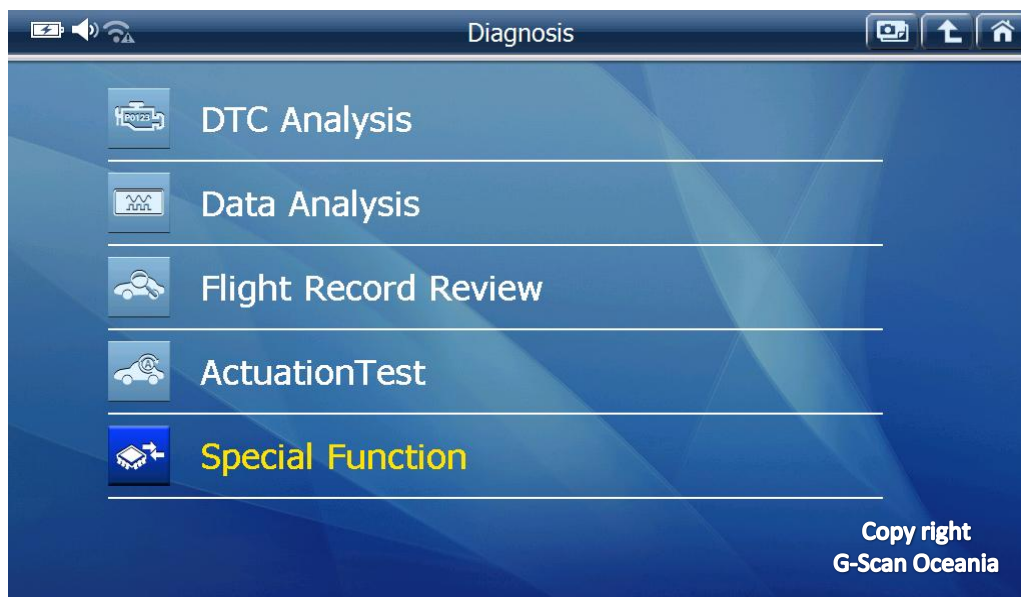 
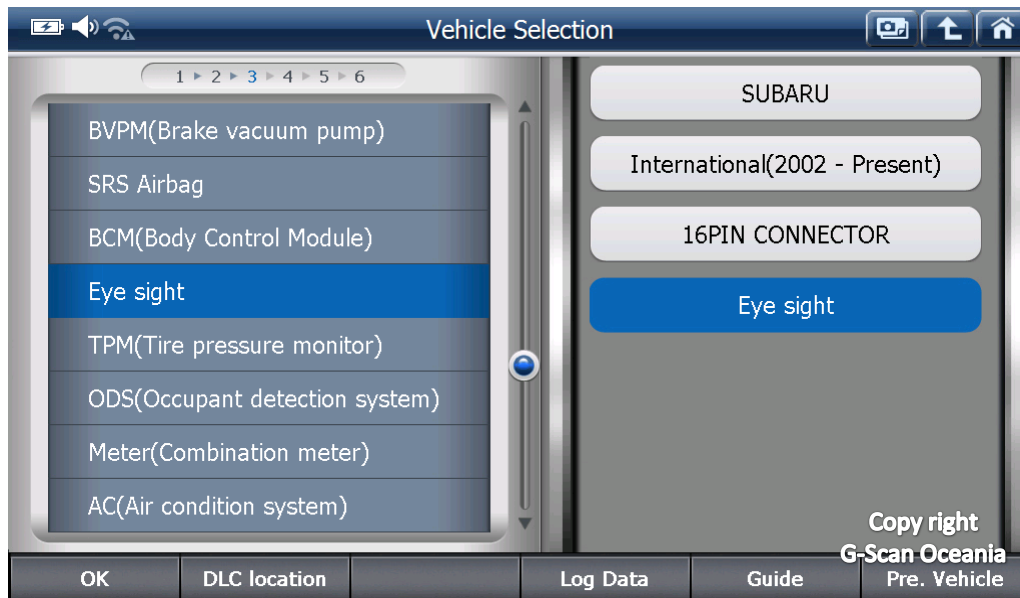 


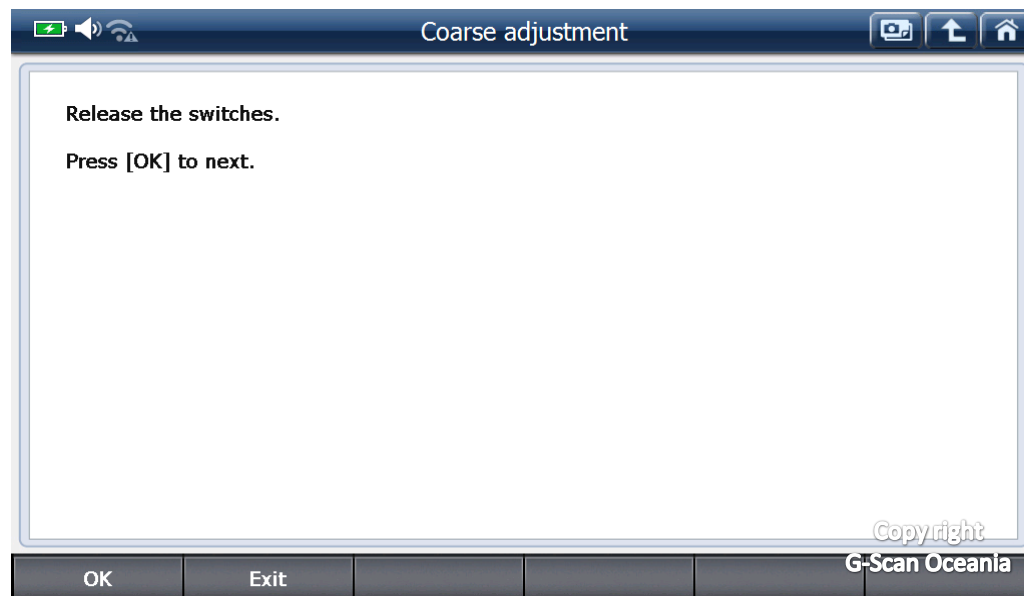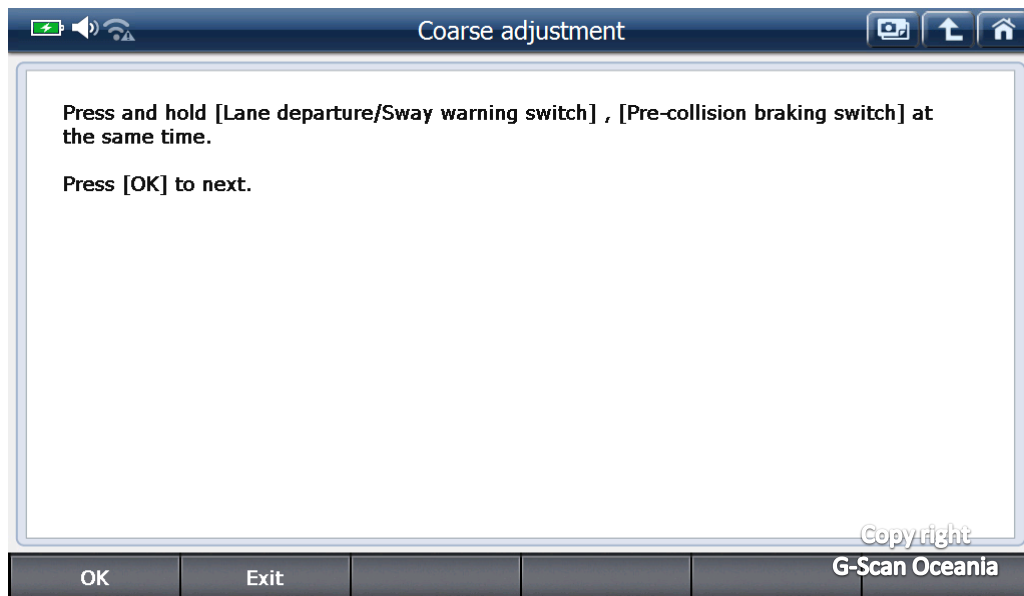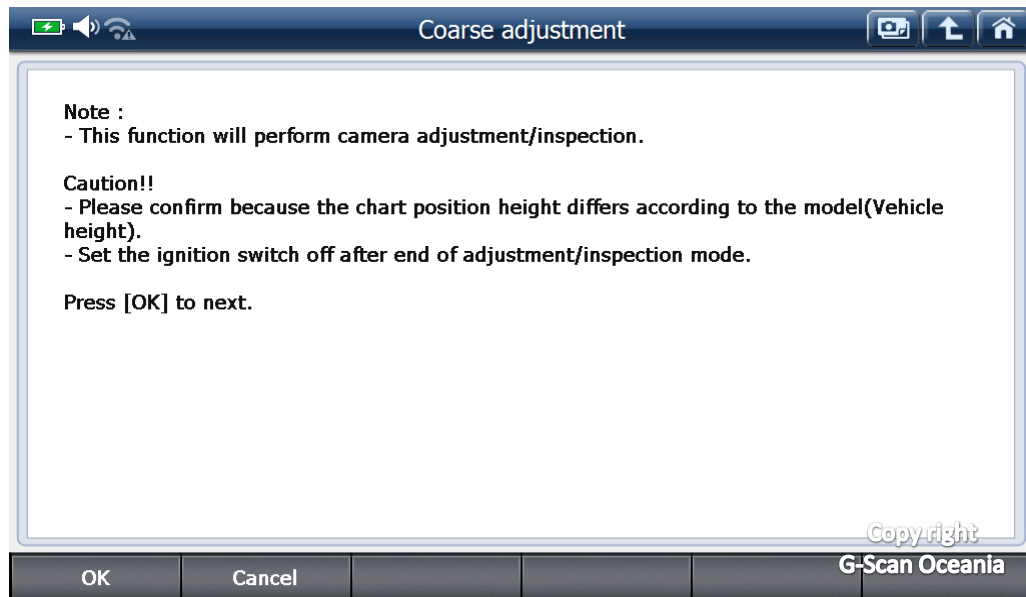   


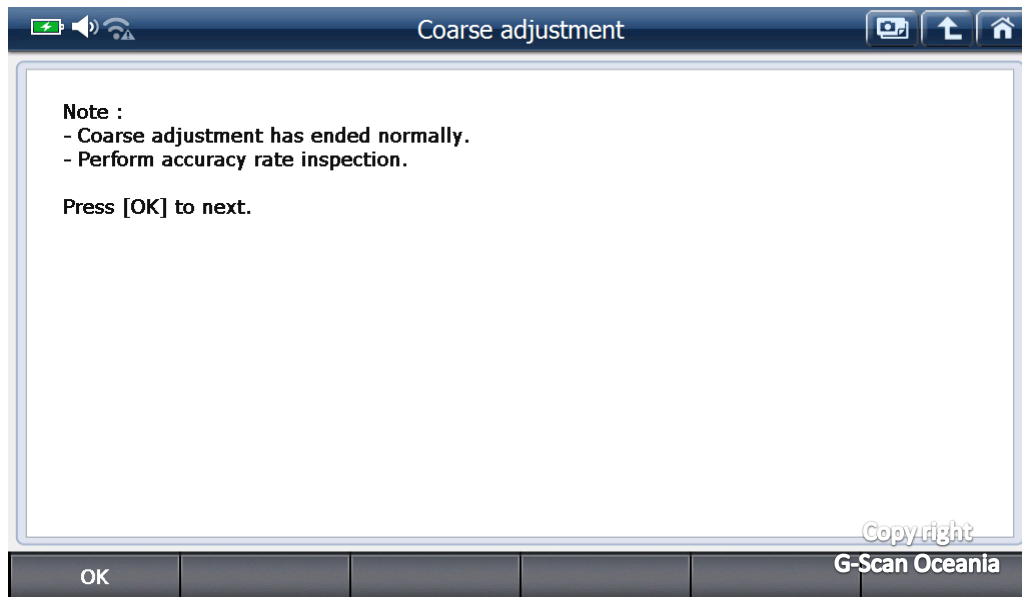 




Accuracy rate inspection

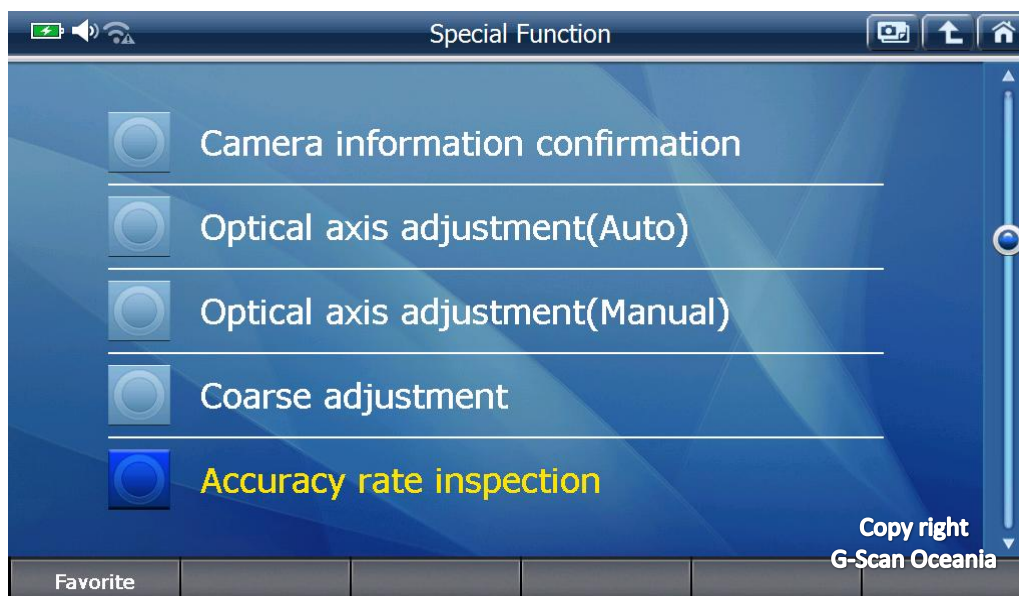 
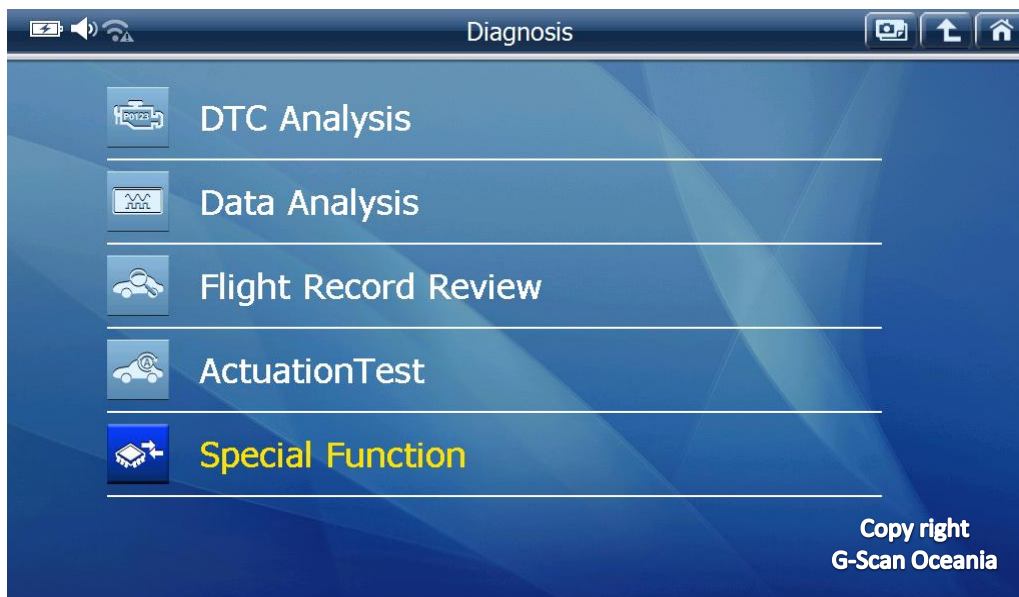 
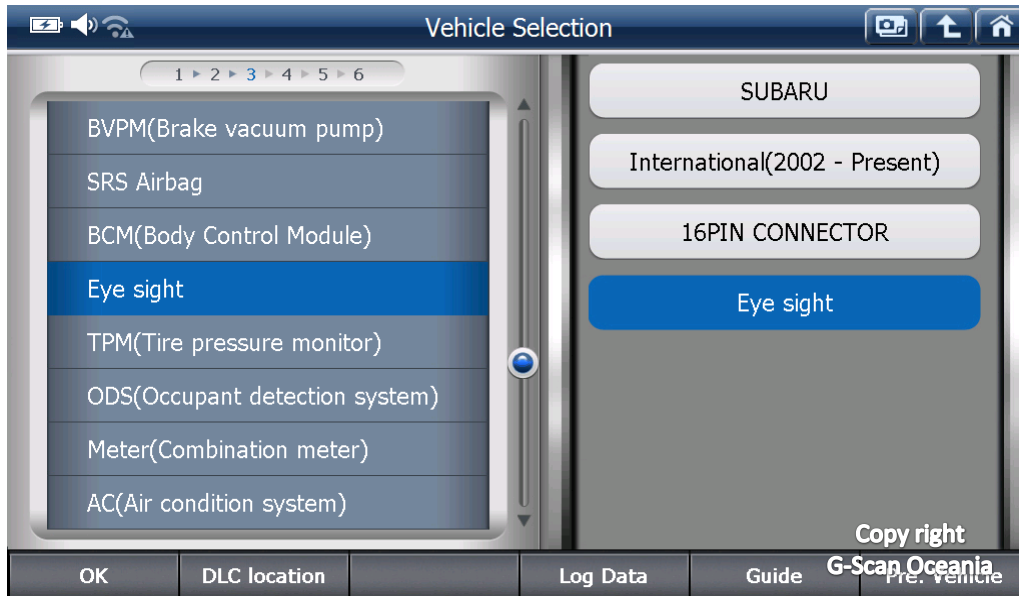 


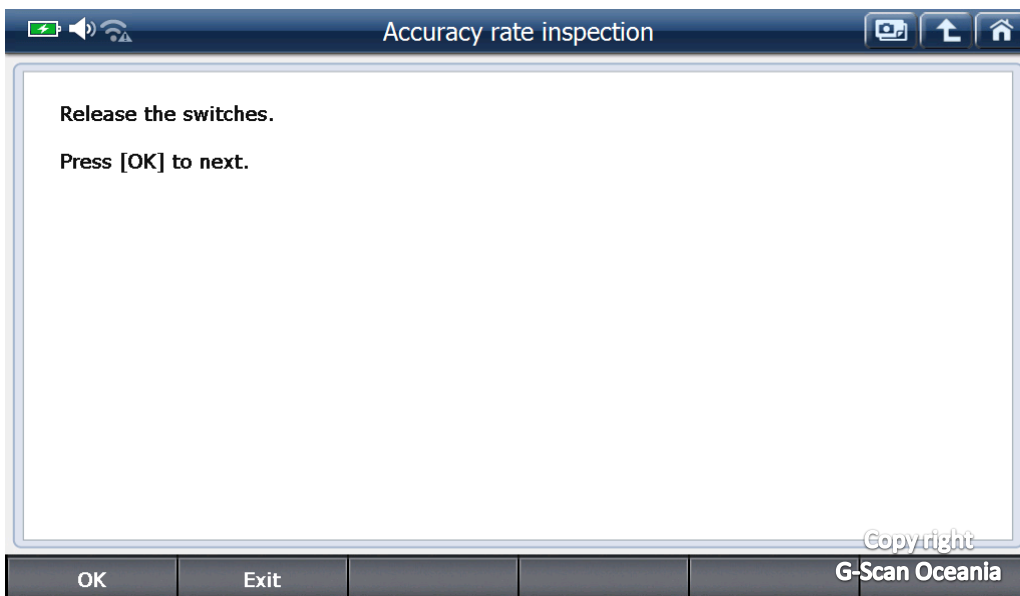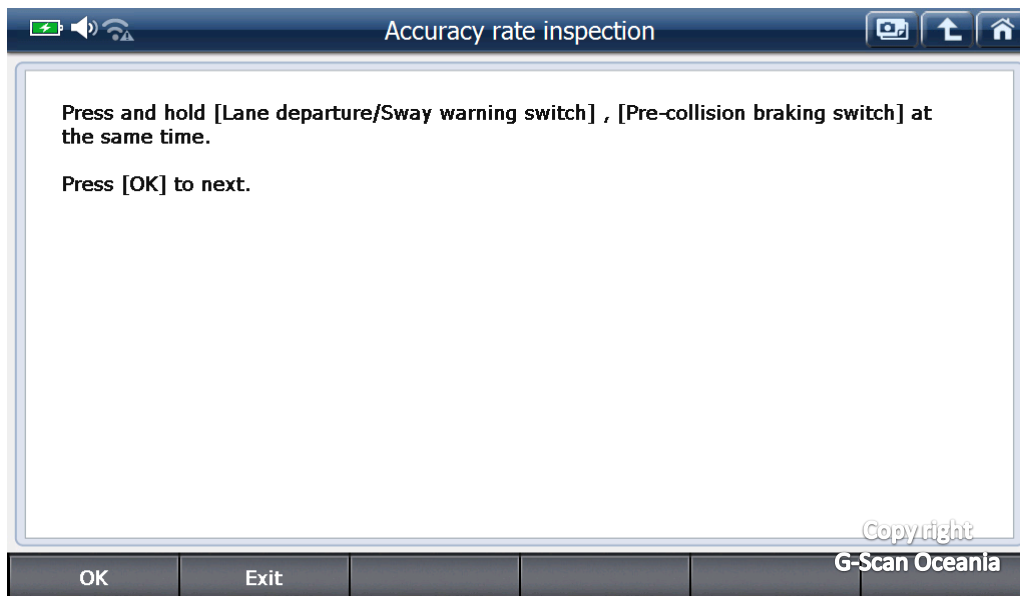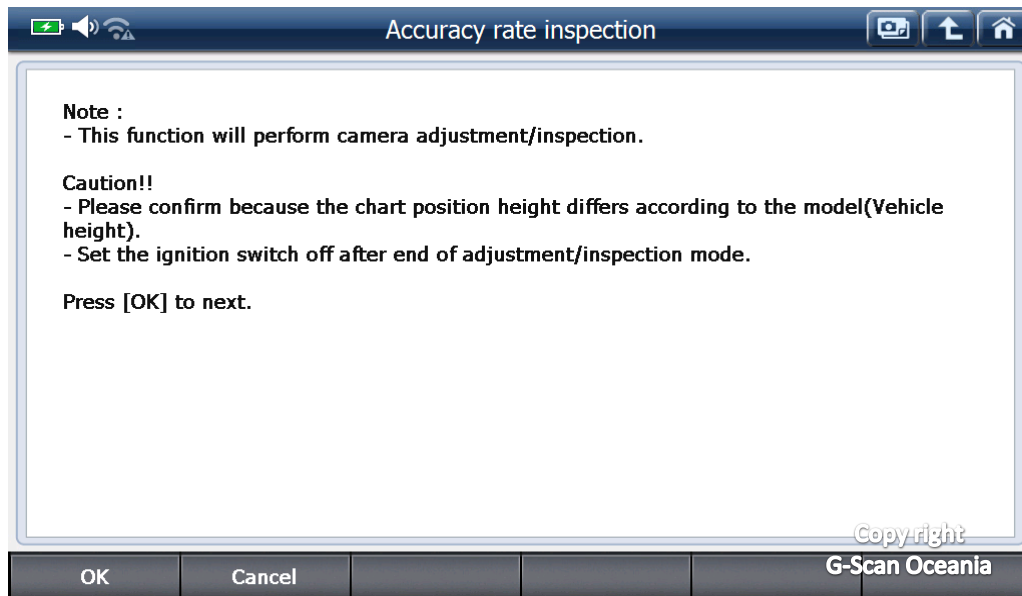   


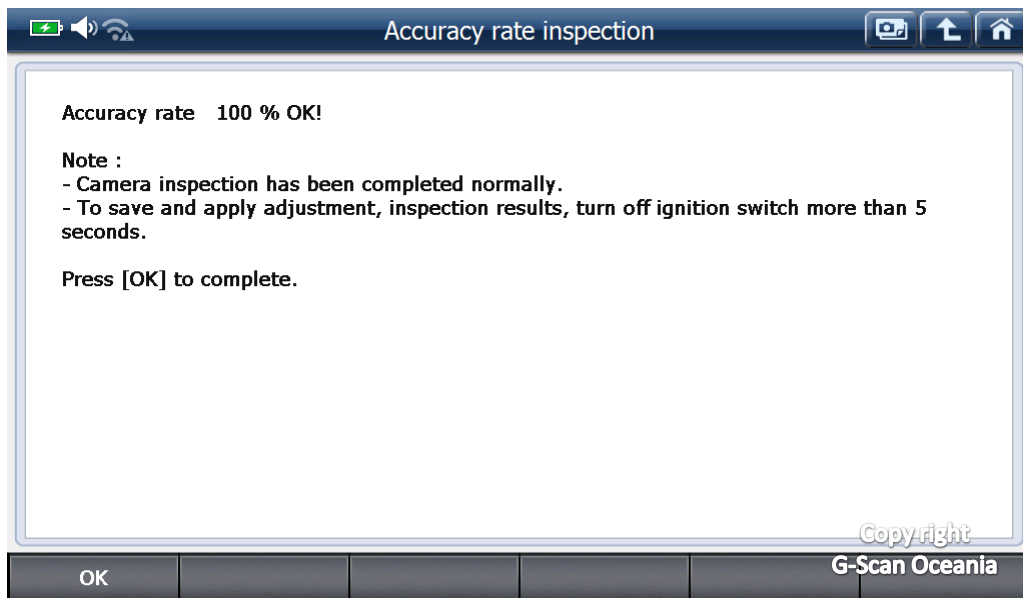 

Distance correction

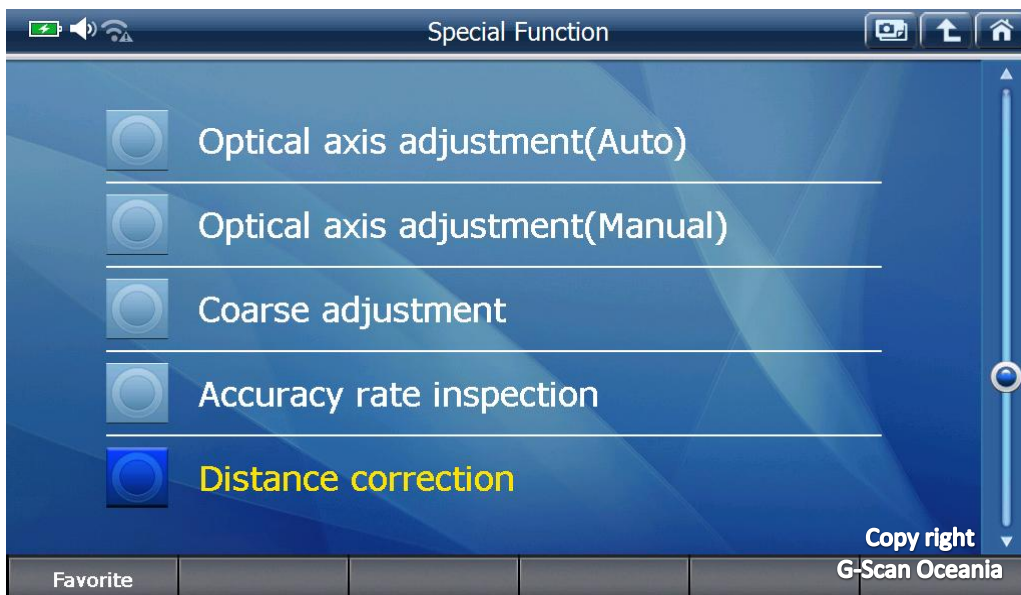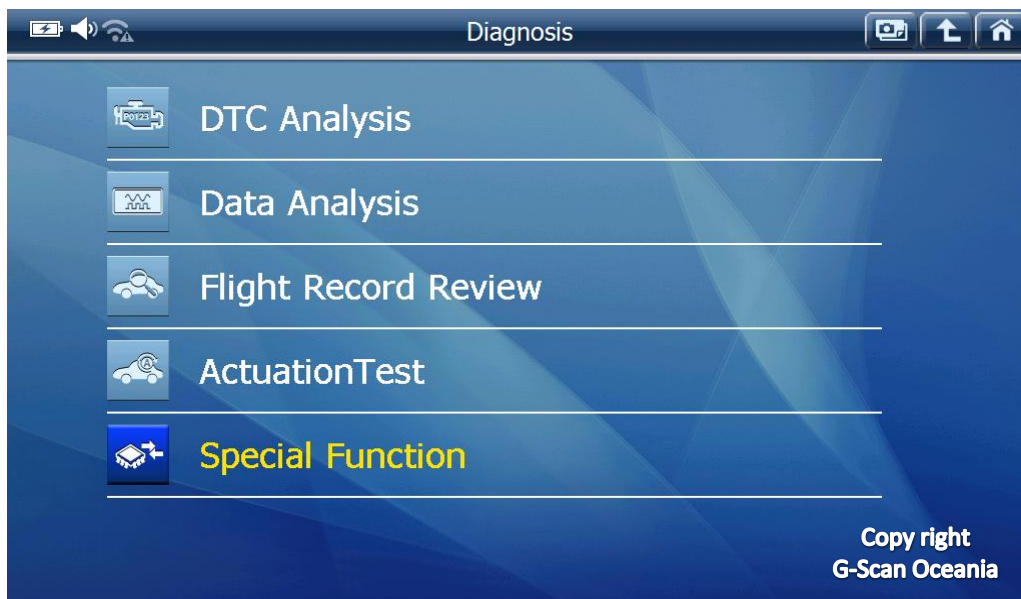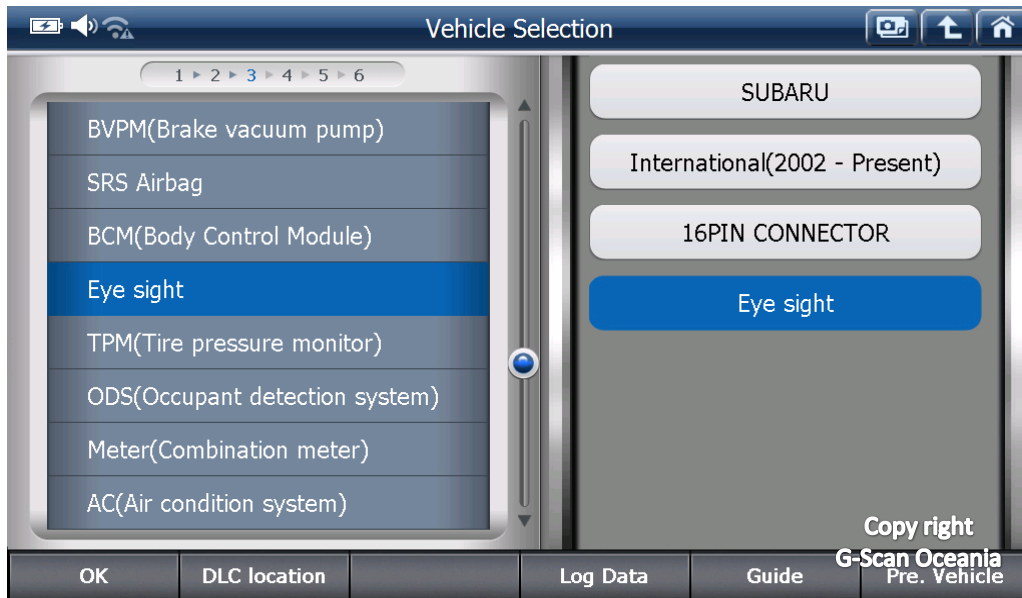   

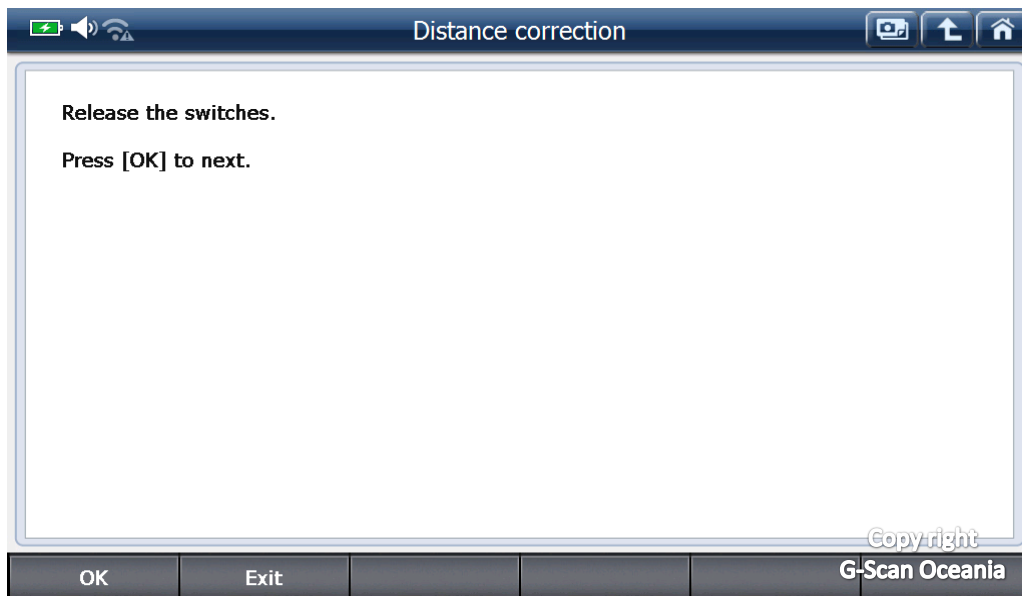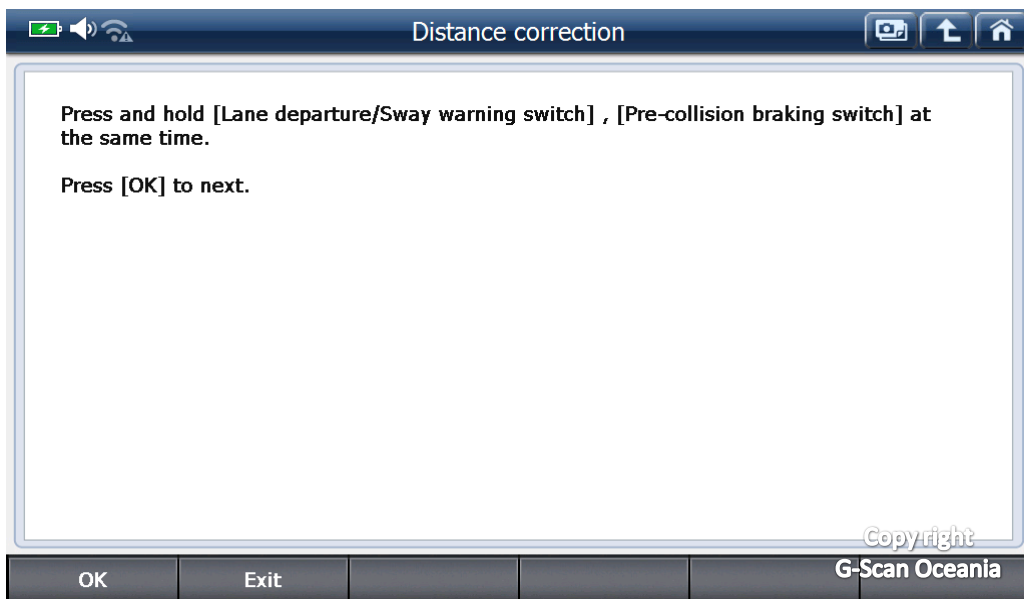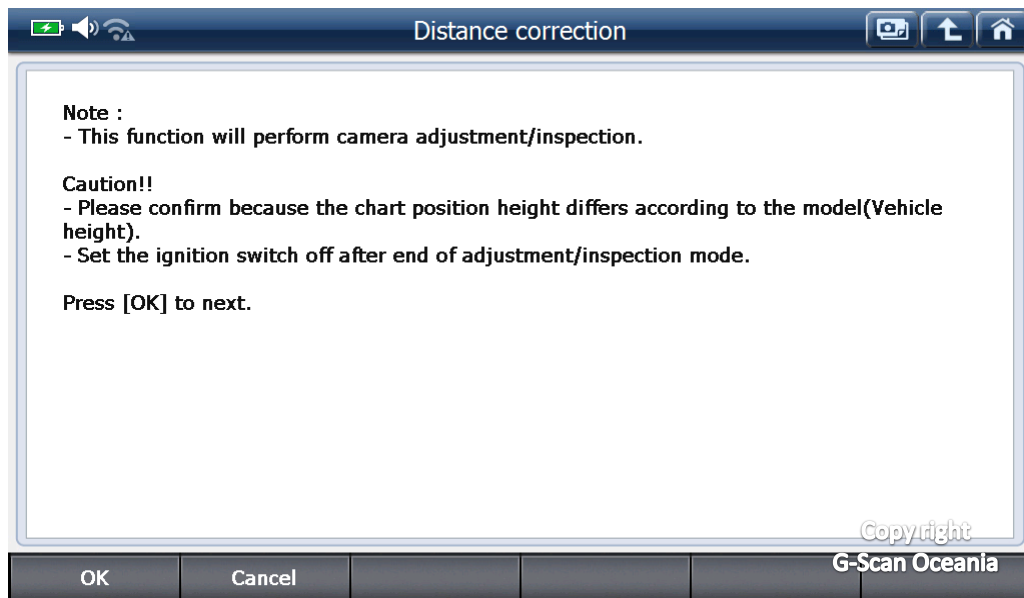   

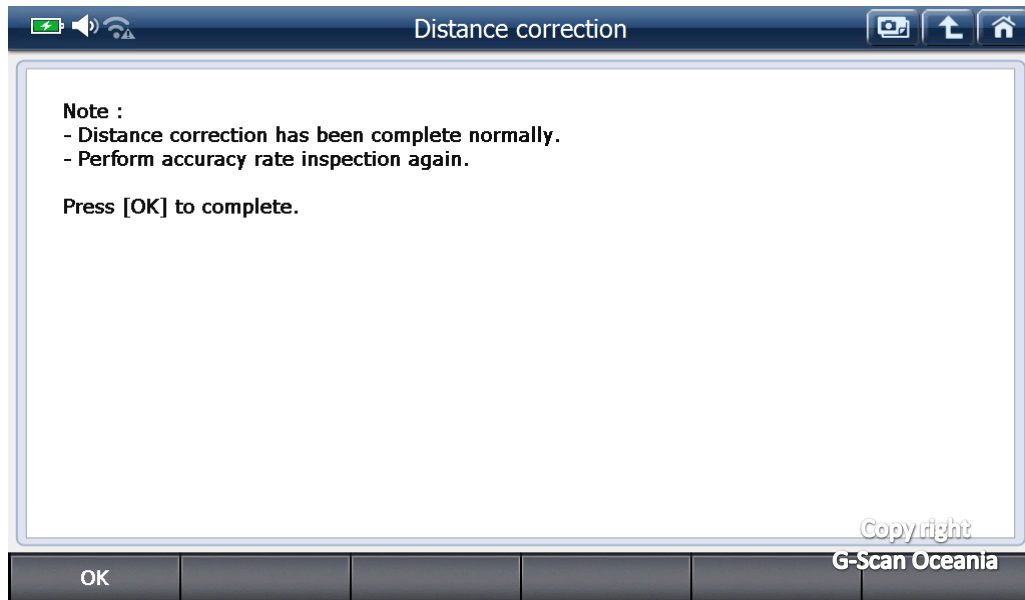 

Clear adjustment value

