



**** Before performing Recognition Camera Axis Adjustment, perform Recognition Camera/Target Position Memory first.**


1. Select Lane Departure Alert system

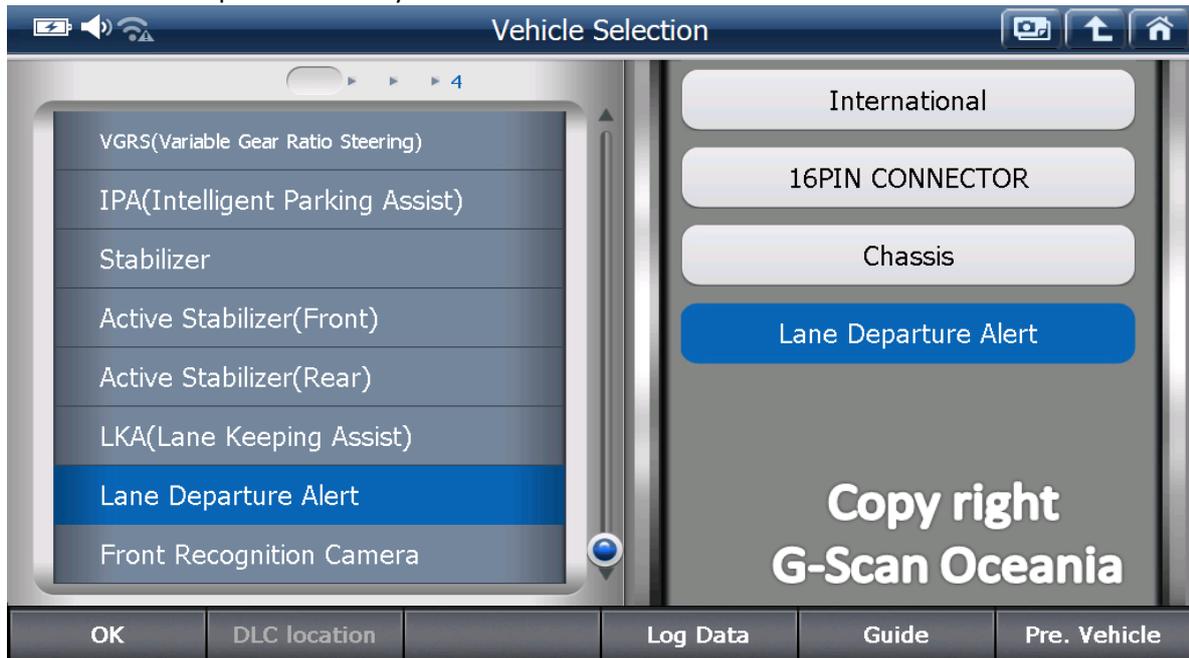


2. Select Special Function

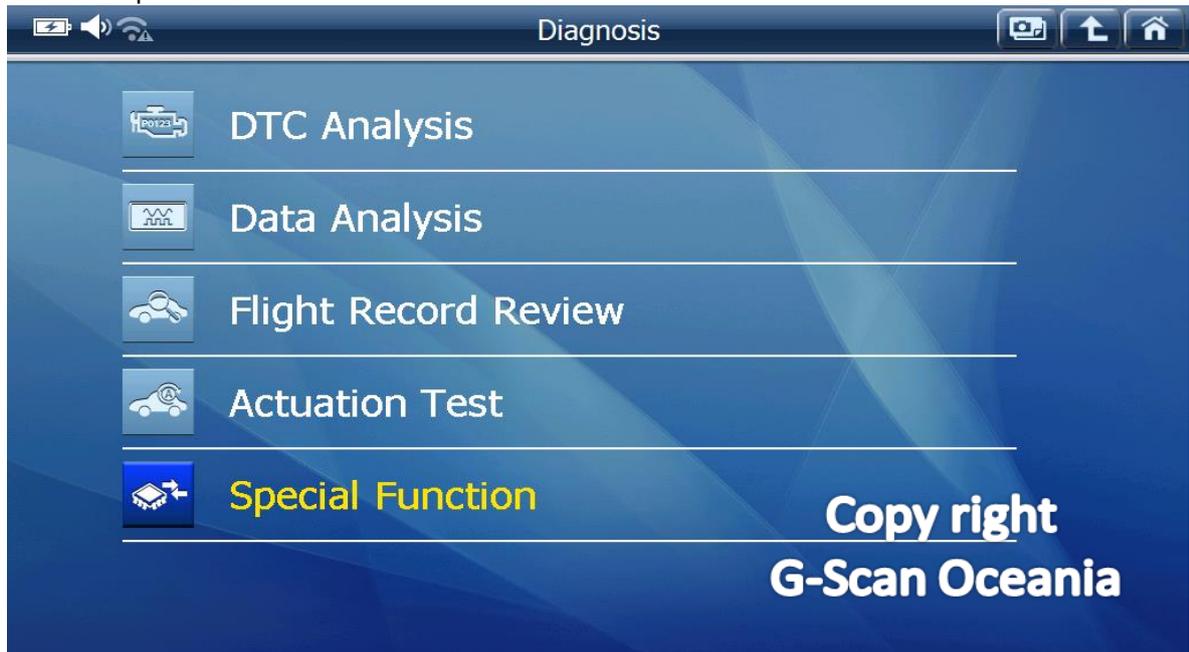


3. Select Recognition Camera Axis Adjust

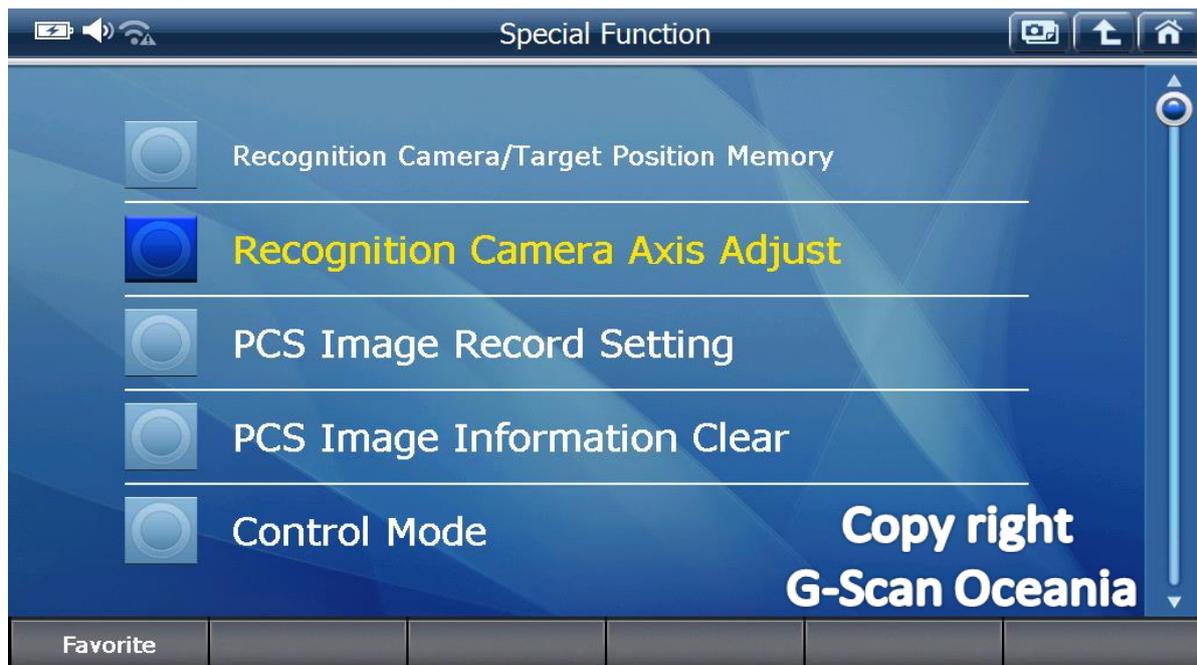

4. Notice

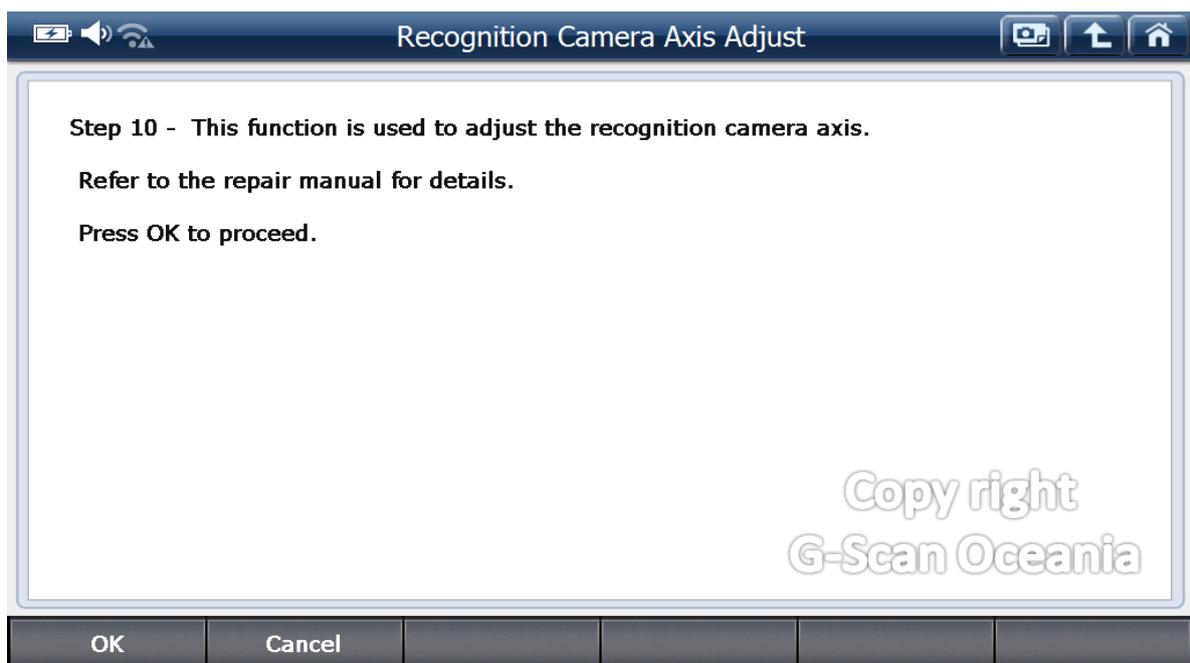


5. Confirm input values from Recognition Camera/Target Position Memory function.

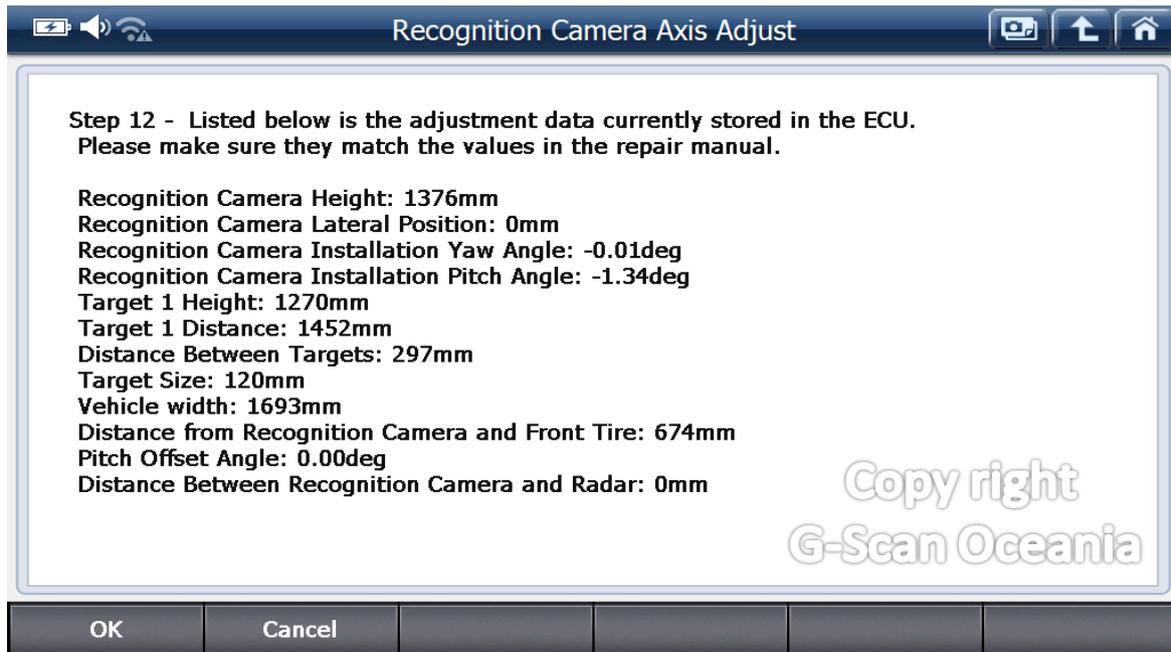


**** Sample values are for 2015 Sienta. Please refer to the vehicle workshop manual for specification values .**

6. Confirm the condition

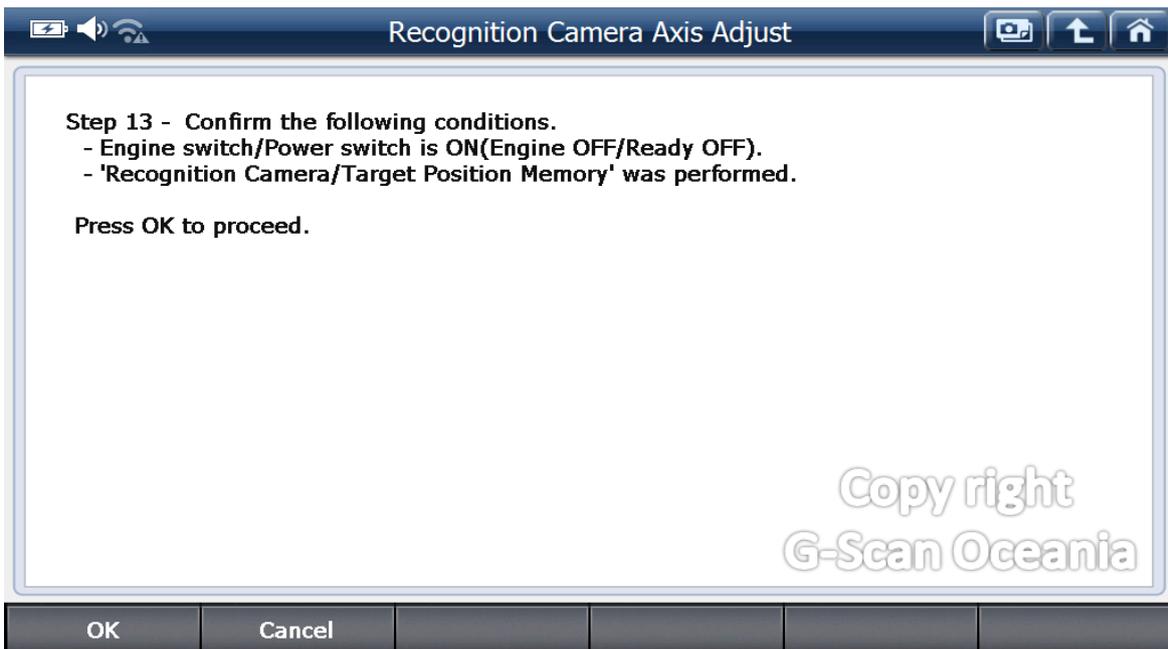


7. Select type of adjustment.

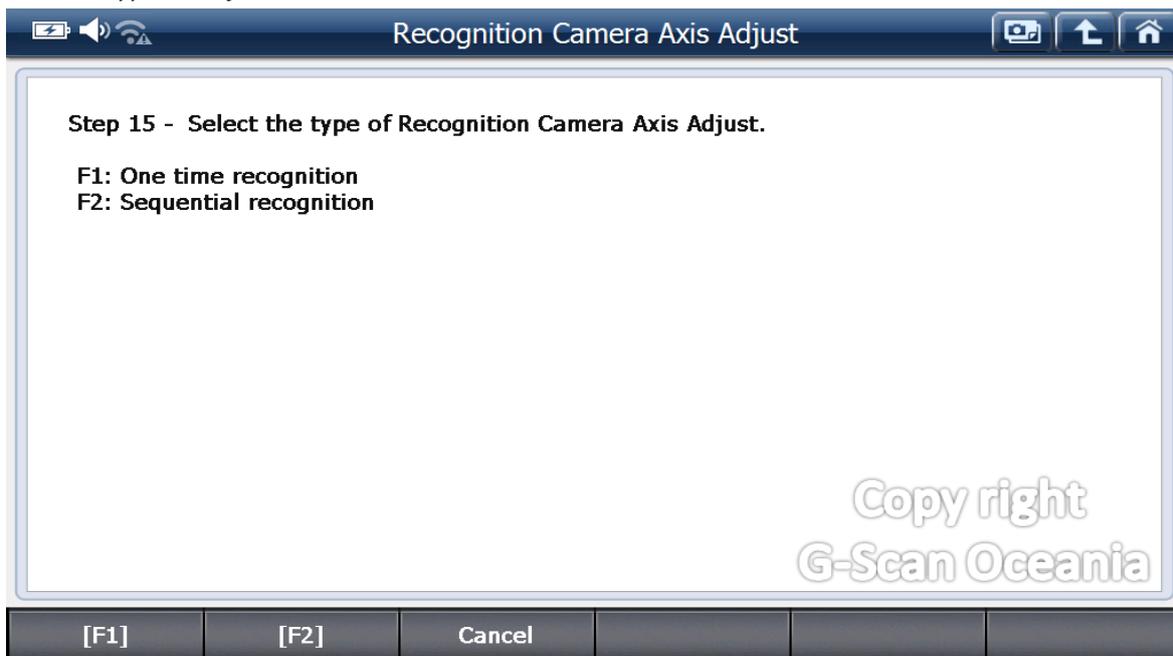




** It is possible to be different for each model type. Please refer to the manual.

8-1. Select F1: One time recognition type.

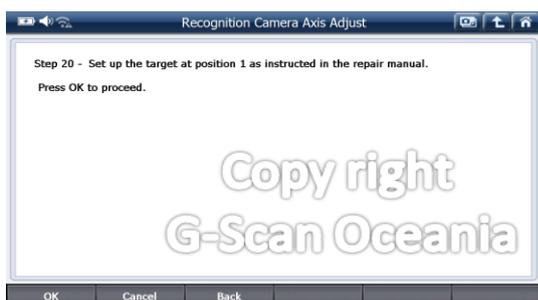


8-2: Select F2 : Sequential recognition type.

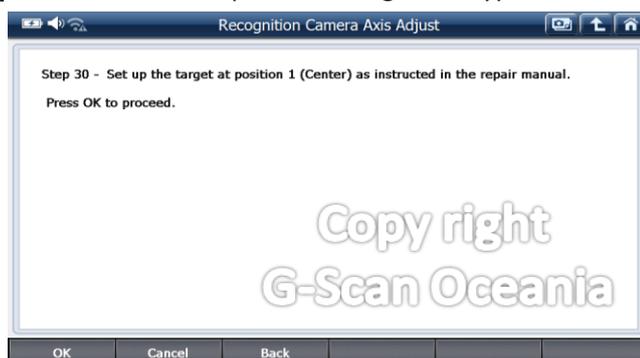


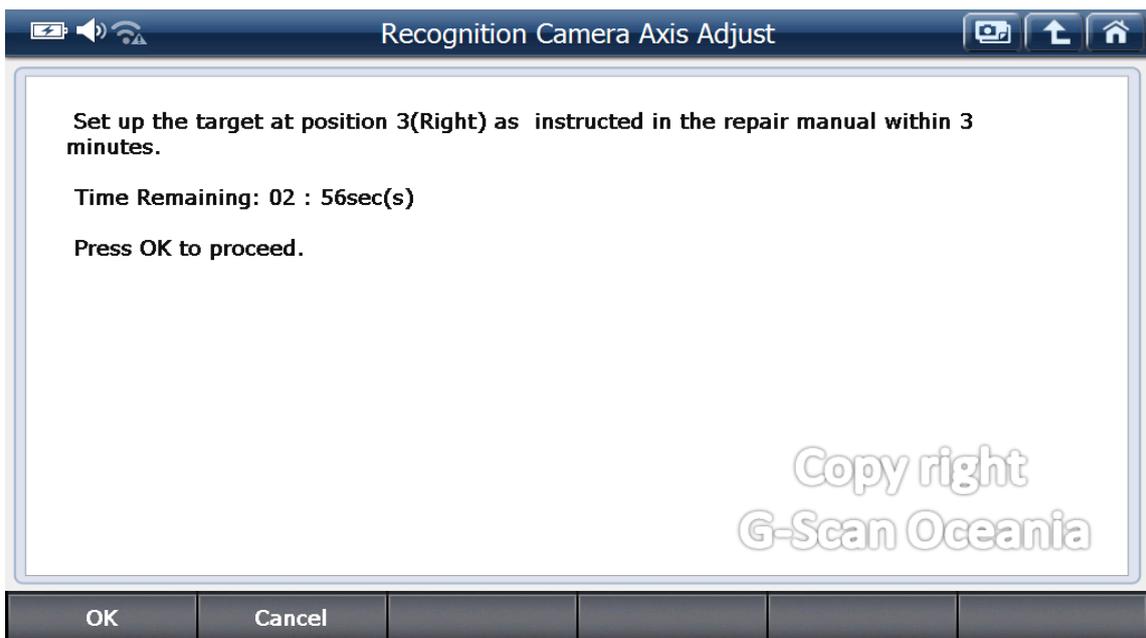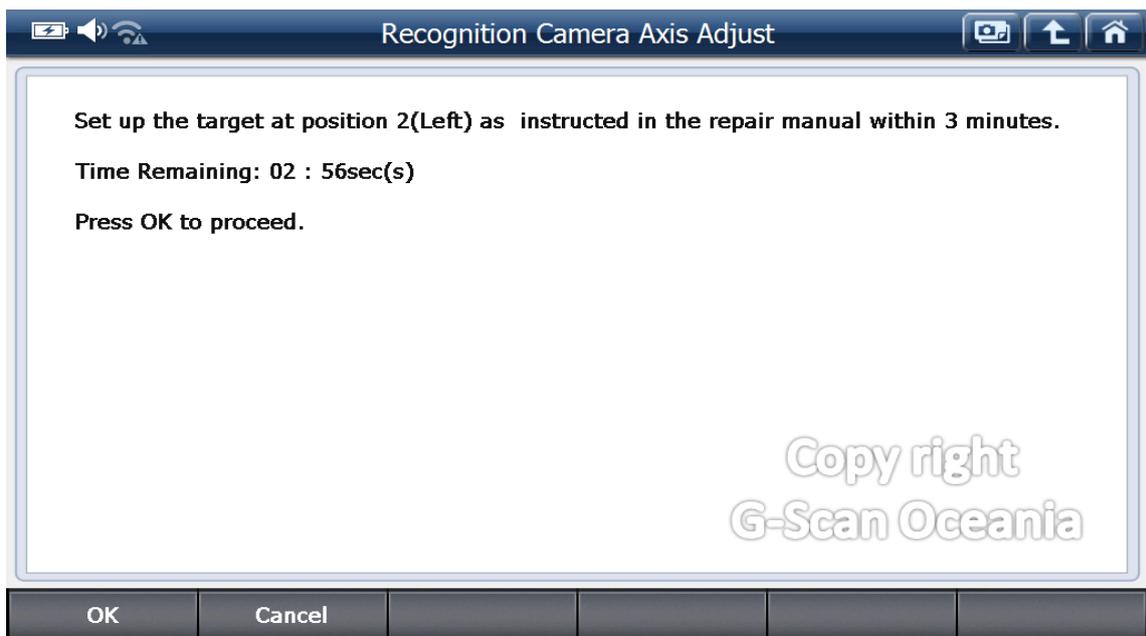


9. Complete

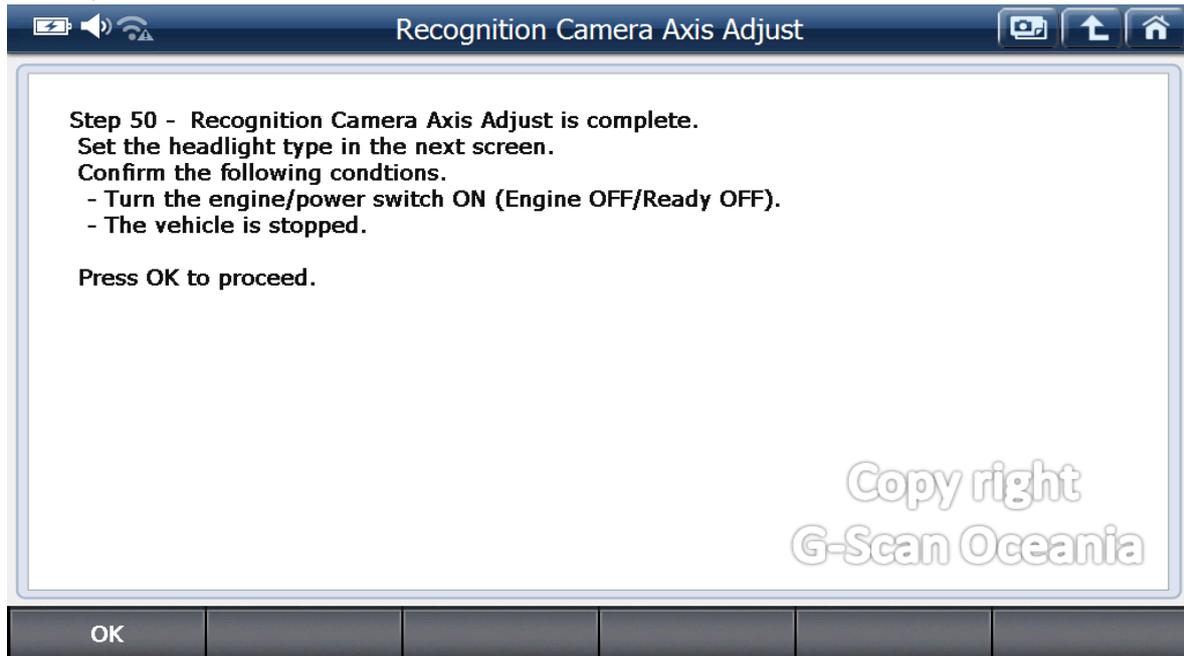

10. Select Headlight type.

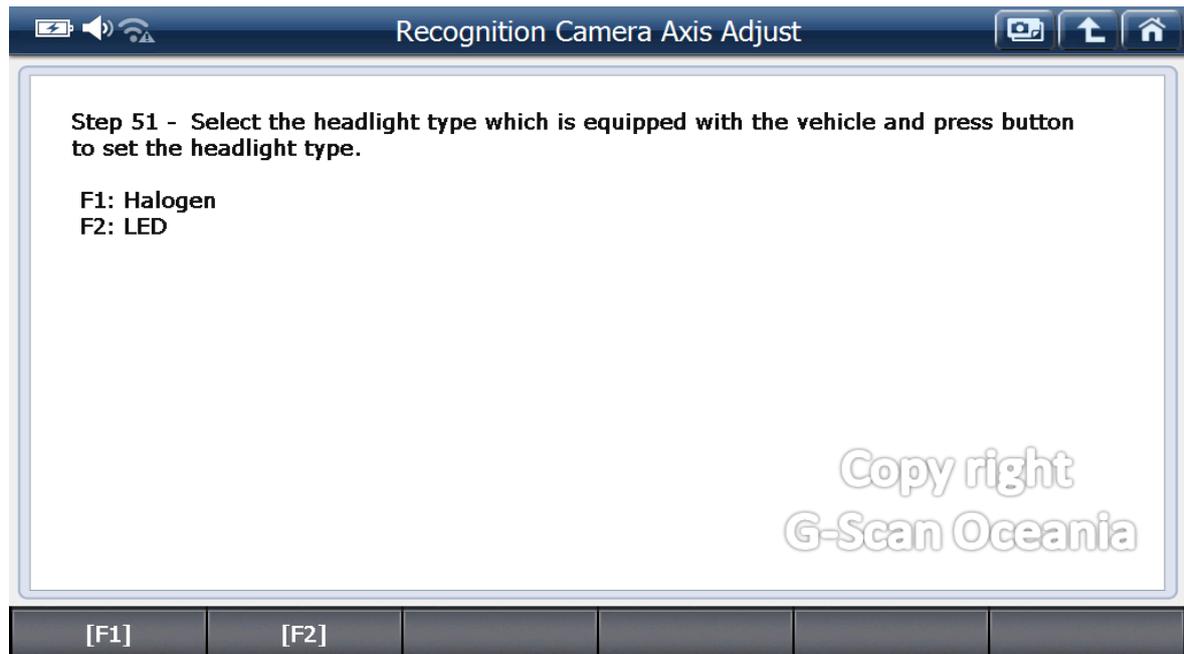

11. Complete.

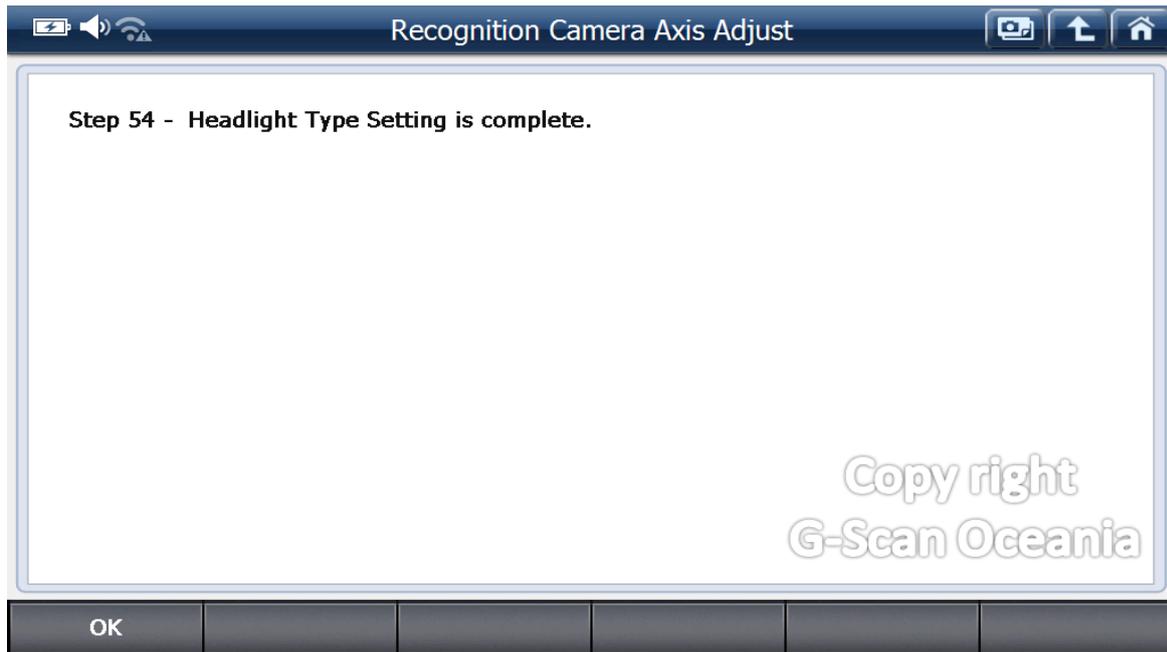

** Please ignore the fail message if the model does not support headlight type coding.