

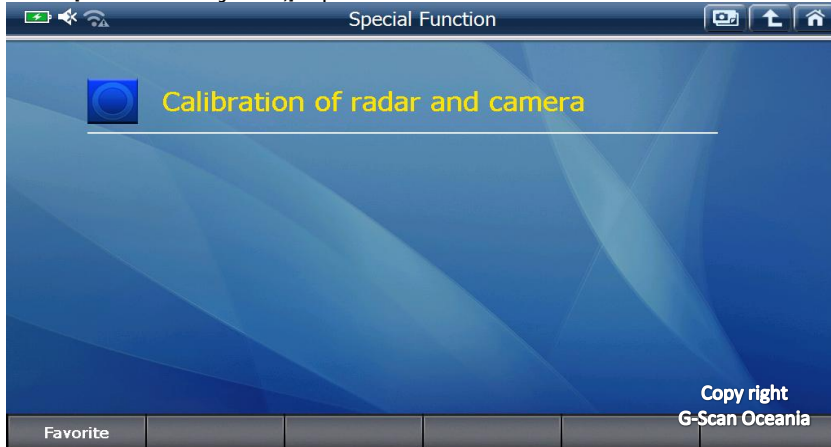


1. Select [FSM Forward sensing module]] > Special function > Calibration of radar and camera

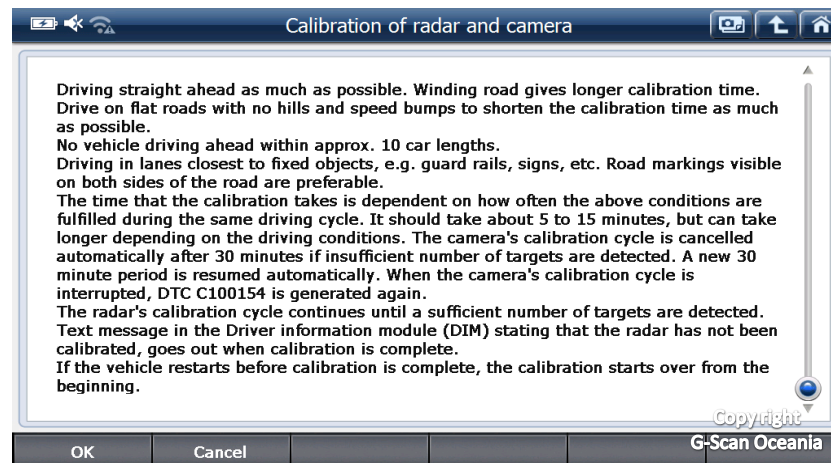

2. Notice

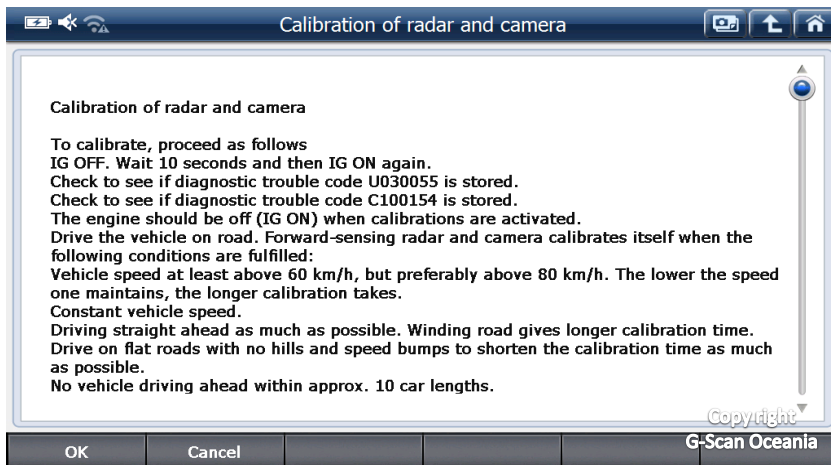

** This function need a test drive.

3. Select function type.

Calibration of radar and camera	
Item(1/1)	Current value
Calibration of	-

Calibration of forward-sensing radar and camera is performed by starting respective calibration procedure and then driving the vehicle.

IG ON, ENG OFF

Camera

Radars

Camera

OK Cancel

Calibration of radar and camera	
Item(1/1)	Current value
Calibration of	-

IG ON, ENG OFF

If both radar and camera shall be calibrated, start both calibrations before driving. The text message, that radar is not calibrated, shown in the driver information module(DIM) applies to both radar and camera.

OK Cancel

Calibration of radar and camera	
Item(1/1)	Current value
Calibration of	Camera

Calibration of forward-sensing radar and camera is performed by starting respective calibration procedure and then driving the vehicle.

IG ON, ENG OFF

OK Cancel

Calibration of radar and camera	
Item(1/1)	Current value
Calibration of	Radars

Calibration of forward-sensing radar and camera is performed by starting respective calibration procedure and then driving the vehicle.

IG ON, ENG OFF


Camera

Radars

Radars

OK Cancel

4. Inprogress

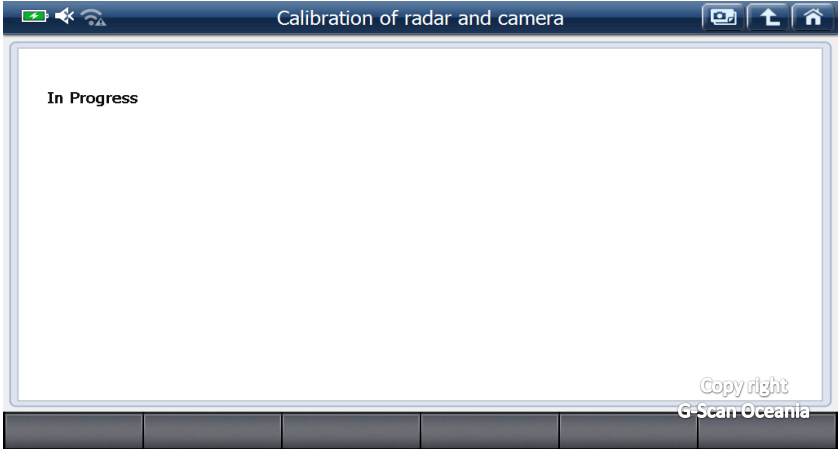

5. Complete

