




1. Select Astra-G immobilizer

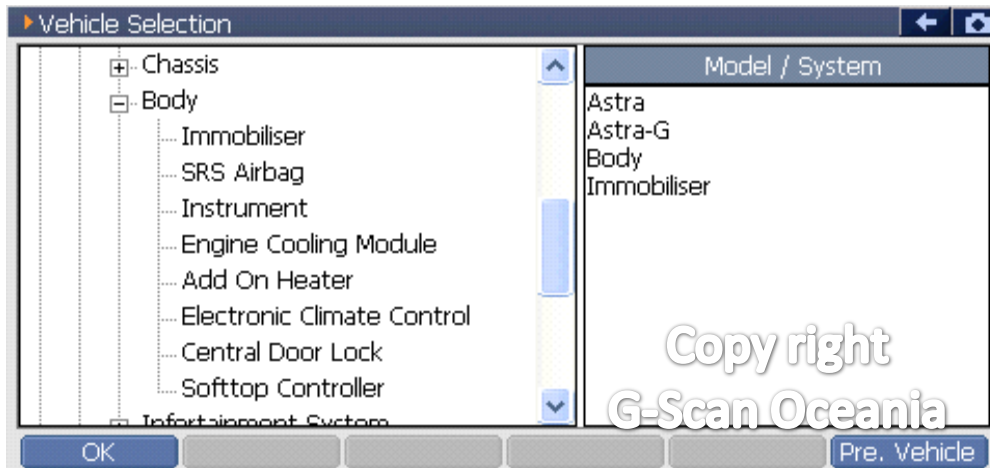

2. Select special function

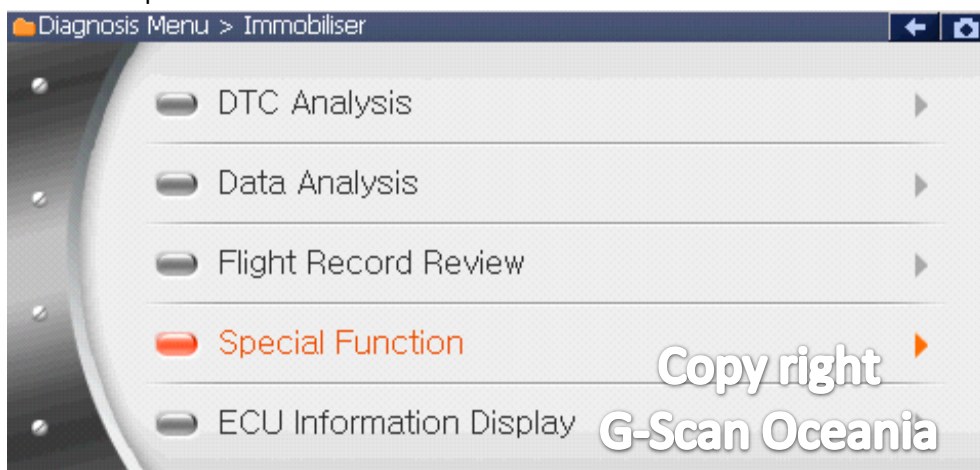

3. Select Engine controller installed

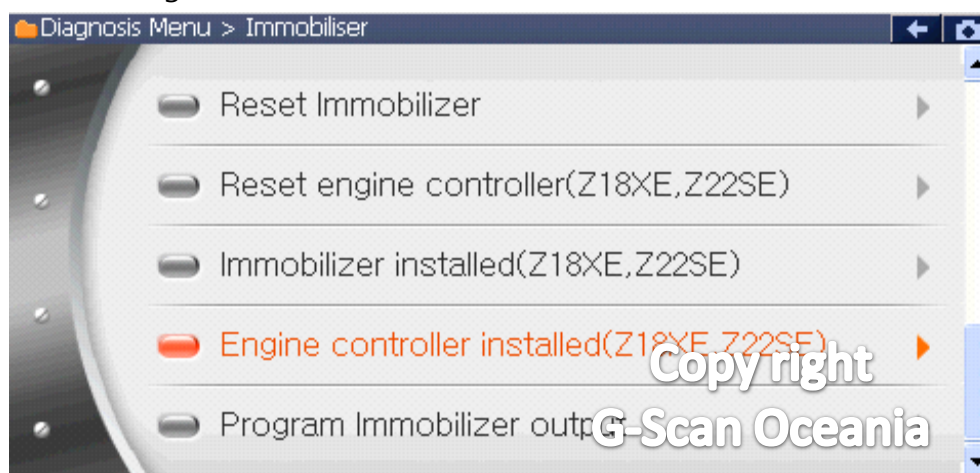

4. Input security code

► Immobiliser > Engine controller installed(Z18XE,Z22SE)

Input security code(4-digit number) :

1	2	3
4	5	6
7	8	9
←	0	Enter

OK No

Copyright G-Scan Oceania

5. Notice

► Immobiliser > Engine controller installed(Z18XE,Z22SE)

Note :

- See checking procedure before programming.

Press [OK] to next.

OK No

Copyright G-Scan Oceania

6. Notice

► Immobiliser > Engine controller installed(Z18XE,Z22SE)

DO YOU WANT TO CONTINUE?

OK No

Copyright G-Scan Oceania

7. Ignition off



8. Ignition on.

